coway

Water Purifier User Manual

CHP-6210N_WT, CHP-6210N_GR

TH

This product cannot be used if the voltage is different from that mentioned in the rating plate. For your safety and proper use of the product, please read this User Manual before use.

Thai / English

เรียนลูกค้า

ขอบพระคุณที่ใช้งานเครื่องกรองน้ำ Coway
โปรดอ่านคู่มือผู้ใช้นี้โดยละเอียดเพื่อการใช้งานและการดูแลรักษาผลิตภัณฑ์นี้อย่างเหมาะสม
ท่านสามารถอ้างอิงคู่มือผู้ใช้ฉบับนี้เพื่อแก้ไขปัญหาของผลิตภัณฑ์ระหว่างการใช้งาน
โปรดเก็บรักษาคู่มือผู้ใช้ฉบับนี้ไว้ในพื้นที่ปลอดภัย เนื่องจากคู่มือฉบับนี้มีใบรับประกันผลิตภัณฑ์

I. ข้อมูลผลิตภัณฑ์

1. ฟีเจอร์ 3
2. ข้อมูลความปลอดภัย 4
3. ชื่อชิ้นส่วนและอุปกรณ์เสริม 10
4. การใช้อุปกรณ์เสริมและข้อควรระวัง 13
5. วิธีติดตั้ง 14
6. ตรวจสอบก่อนใช้งาน 16

II. วิธีการใช้งาน

1. ปุ่มและตัวชี้บอก 17
2. วิธีการใช้งาน 23
3. การตั้งค่าระบบ 24


III. การบำรุงรักษา

1. วิธีทำความสะอาด 27
2. การเปลี่ยนไส้กรอง 30

IV. อื่นๆ


1. คำแนะนำการใช้งานที่ถูกต้อง 33
2. การแก้ไขปัญหา 35
3. ข้อมูลจำเพาะ 39
4. การรับประกัน 40

1 ฟีเจอร์

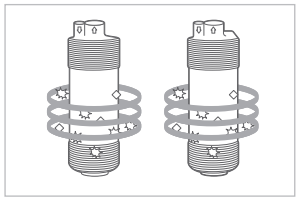


ระบบจ่ายน้ำโดยตรง

ไส้กรอง Coway Nanotrap™ ช่วยลดจุลชีพ แบคทีเรีย และไวรัส
ไส้กรอง Plus Inno-Sense (D) ช่วยลดสสารที่ก่อนให้เกิดกลิ่น (D) เพื่อปรับปรุงรสชาติของน้ำ

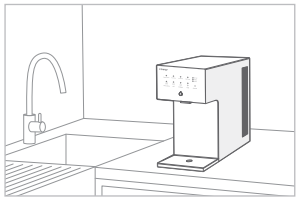


ดีไซน์เรียบง่ายและกะทัดรัด

ดีไซน์ที่บางทำให้สะดวกต่อการใช้งานในพื้นที่แคบ

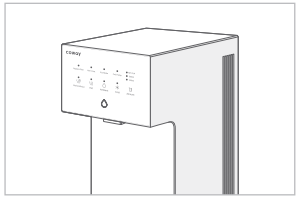


ตัวชี้บอก LED

ท่านสามารถตรวจสอบสถานะการทำงานของผลิตภัณฑ์ได้จากจอ LED บนแผงควบคุมและตัวชี้บอก

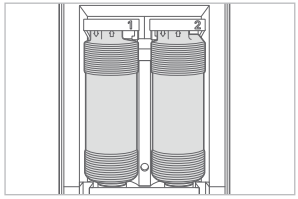

การเปลี่ยนไส้กรองอย่างง่ายดาย

ท่านสามารถเปลี่ยนไส้กรองทั้งสองชิ้นพร้อมกันได้อย่างสะดวกที่บ้าน

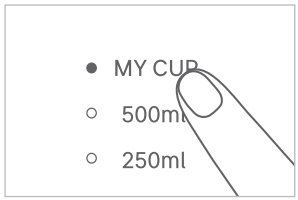

โหมด MY CUP

ท่านสามารถตั้งค่าปริมาณการจ่ายน้ำที่ใช้บ่อยได้

2 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

อันตราย อาจเกิดการเสียชีวิตหรือการบาดเจ็บหากไม่ปฏิบัติตามคำแนะนำนี้



พลังงาน

ไฟฟ้าช็อต/เพลิงไหม้

- อย่าใช้เต้ารับที่เสียหายหรือหลวม
- ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V - 240 V ~, 50 Hz ที่ต่อสายดิน
- อย่าดึงปลั๊กไฟขณะเคลื่อนย้ายผลิตภัณฑ์
- อย่าจับปลั๊กไฟด้วยมือที่เปียก
- ขณะติดตั้งผลิตภัณฑ์ ตรวจสอบว่าสายไฟไม่ถูกกดทับหรือเสียหาย
- ห้ามติดตั้งปลั๊กพ่วงหรือแหล่งจ่ายไฟแบบพกพาหลายตัวไว้ด้านหลังผลิตภัณฑ์
- เชื่อมต่อเข้ากับแหล่งจ่ายน้ำดื่มเท่านั้น
- อย่าเสียบปลั๊กและถอดปลั๊กไฟซ้ำๆ กัน
- หากมีน้ำเข้าไปในส่วนจุดจ่ายไฟ ให้ถอดปลั๊กไฟและทำให้แห้งก่อนใช้งาน
- ตรวจดูให้แน่ใจว่าถอดปลั๊กของผลิตภัณฑ์แล้วในขณะที่ทำการซ่อมแซมหรือตรวจสอบผลิตภัณฑ์ หรือเมื่อทำการเปลี่ยนอะไหล่
- หากมีฝุ่นหรือน้ำบนขาปลั๊กและบริเวณหน้าสัมผัส ให้เช็ดออกให้หมด
- อย่าต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับเต้ารับแผงเดียว ใช้เต้ารับแยกเฉพาะสำหรับผลิตภัณฑ์นี้
- หากท่านไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน ให้ถอดปลั๊กไฟ
- อย่าต่อหรือดัดแปลงปลั๊กไฟตามอำเภอใจ
- หากปลั๊กไฟเสียหาย อย่าพยายามเปลี่ยนปลั๊กไฟด้วยตัวเอง โปรดติดต่อศูนย์บริการ Coway เพื่อแจ้งขอเปลี่ยนชิ้นส่วนดังกล่าว

2 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

อันตราย อาจเกิดการเสียชีวิตหรือการบาดเจ็บหากไม่ปฏิบัติตามคำแนะนำนี้



การติดตั้ง

เพลิงไหม้
- อย่าติดตั้งผลิตภัณฑ์ไว้ใกล้กับแหล่งความร้อน

ไฟฟ้าช็อต/เพลิงไหม้
- ต่อน้ำประปาเข้ากับท่อน้ำเข้า
  การเชื่อมต่อกับท่อน้ำทิ้งอาจทำให้เกิดการทำงานผิดพลาดหรืออุบัติเหตุได้

เสียหาย/บาดเจ็บ
- อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์
  เนื่องจากมีความเสี่ยงที่จะเกิดการบาดเจ็บหรือผลิตภัณฑ์เสียหาย



การใช้งาน

ไฟฟ้าช็อต/เพลิงไหม้
- โปรดปิดวาล์วน้ำประปาและถอดปลั๊ก แล้วติดต่อศูนย์บริการ Coway หากมีน้ำรั่วออกจากภายในของผลิตภัณฑ์หรือมีน้ำเจิ่งนองรอบๆ ผลิตภัณฑ์

ไฟฟ้าช็อต
- หากมีเสียงแปลกๆ กลิ่นไหม้ หรือมีควันออกจากผลิตภัณฑ์ ให้ถอดปลั๊กทันที และโทรติดต่อศูนย์บริการ Coway

เพลิงไหม้/ประสิทธิภาพลดลง
- อย่าวางภาชนะที่มีน้ำ ยา อาหาร วัตถุโลหะ หรือวัตถุไวไฟบนผลิตภัณฑ์นี้ อย่าทำความสะอาดผลิตภัณฑ์โดยการฉีดน้ำ และอย่าเช็ดผลิตภัณฑ์ด้วยน้ำมันเบนซินหรือทินเนอร์อื่นๆ

ไฟฟ้าช็อต/เสียหาย
- อย่าวางเทียนหรือบุหรี่บนผลิตภัณฑ์



อื่นๆ

ไฟฟ้าช็อต/เพลิงไหม้
ไฟฟ้าช็อต/เสียหาย

- ถอดปลั๊กไฟก่อนทำความสะอาด
- อย่าเปิด ซ่อมแซม หรือดัดแปลงผลิตภัณฑ์นี้
- อย่าให้มีสิ่งกีดขวางช่องระบายอากาศในกล่องหรือโครงสร้างบิวท์อินของผลิตภัณฑ์นี้
- อย่าทำให้วงจรการทำความเย็นเสียหาย

สารทำความเย็น

- อย่าทำอะไรก็ตามที่เกี่ยวข้องกับไฟฟ้า ภายในถังเก็บน้ำของเครื่องกรองน้ำ เว้นแต่จะเป็นคำแนะนำโดยผู้ผลิต
- สารทำความเย็นที่ใช้ในผลิตภัณฑ์นี้คือไอโซบิวเทน ซึ่งเป็นก๊าซธรรมชาติที่เผาไหม้ได้ เพื่อความปลอดภัยของท่าน โปรดติดต่อศูนย์ชุมชนของท่านก่อนที่จะทิ้งผลิตภัณฑ์นี้เพื่อการกำจัดอย่างปลอดภัย
- อย่าทำให้ท่อ ฯลฯ ของผลิตภัณฑ์เสียหายในขณะที่กำจัดผลิตภัณฑ์นี้
- สารทำความเย็นที่รั่วออกจากท่อสารทำความเย็น (ท่อ) อาจทำให้เกิดเพลิงไหม้หรือการบาดเจ็บได้ ดังนั้นจึงควรนำเปลวไฟหรือวัสดุเผาไหม้ออกให้ห่างเพื่อการระบายอากาศ

2 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

คำเตือน อาจทำให้เกิดการบาดเจ็บหรือทรัพย์สินเสียหายอย่างร้ายแรงได้



การติดตั้ง

เสียหาย/พัง
ไฟฟ้าช็อต/เพลิงไหม้

- ผลิตภัณฑ์นี้มีเพื่อการใช้งานในครัวเรือนและการใช้งานอื่นๆ ที่คล้ายกัน เช่น
  → บริเวณครัวของพนักงานในร้าน สำนักงาน และสภาพแวดล้อมการทำงานอื่นๆ;
  → บ้านพักในสวน โรงแรม โมเทล และสถานที่พักอาศัยอื่นๆ
  → สภาพแวดล้อมประเภทโฮมสเตย์;
  → การจัดเลี้ยงและการใช้งานส่วนตัวอื่นๆ ที่ไม่ใช่การใช้งานเชิงพาณิชย์



การใช้งาน

บาดเจ็บ

- สารทำความเย็นที่ใช้ในผลิตภัณฑ์นี้คือไอโซบิวเทน ซึ่งเป็นก๊าซธรรมชาติที่เผาไหม้ได้ เพื่อความปลอดภัยของท่าน โปรดติดต่อศูนย์ชุมชนของท่านก่อนที่จะทิ้งผลิตภัณฑ์นี้เพื่อการกำจัดอย่างปลอดภัย
- อย่าทำให้ท่อ ฯลฯ ของผลิตภัณฑ์เสียหายในขณะที่กำจัดผลิตภัณฑ์นี้



สัญลักษณ์บน ผลิตภัณฑ์นี้คือเครื่องหมายเตือน
อันตรายจากเพลิงไหม้/สสารเผาไหม้ได้

ข้อควรระวัง อาจทำให้เกิดการบาดเจ็บหรือทรัพย์สินเสียหายเล็กน้อยได้



การใช้งาน

แผลไหม้

- น้ำร้อนนั้นจะร้อนมาก ระวังอย่าให้น้ำร้อนไปโดนร่างกาย

พัง/บาดเจ็บ

- ผลิตภัณฑ์นี้มิได้มีวัตถุประสงค์เพื่อการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความบกพร่องทางด้านร่ายกาย ประสาทสัมผัส หรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่จะมีการกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานโดยผู้ที่มีความรับผิดชอบต่อความปลอดภัยต่อบุคคลดังกล่าว
- เด็กควรได้รับการกำกับดูแล เพื่อทำให้แน่ใจว่าจะไม่เล่นกับผลิตภัณฑ์นี้

อื่นๆ

- อย่าให้เด็กทำความสะอาดหรือซ่อมบำรุงโดยไม่การกำกับดูแล
- หากสายไฟเสียหาย ต้องให้ผู้ผลิต ตัวแทนของผู้ผลิต หรือบุคคลที่มีคุณสมบัติคล้ายกันเป็นผู้เปลี่ยนอะไหล่เพื่อหลีกเลี่ยงอันตราย

2 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

ข้อควรระวัง อาจทำให้เกิดการบาดเจ็บหรือทรัพย์สินเสียหายเล็กน้อยได้



การจัดการ

ทำงานผิดพลาด


- ท่านต้องใช้ชุดท่อน้ำใหม่ที่ให้มาพร้อมกับผลิตภัณฑ์นี้
- อย่าใช้ชุดท่อเก่า

ทำงานผิดพลาด/เพลิงไหม้

- อุปกรณ์นี้ใช้สารทำความเย็นที่เผาไหม้ได้ ดังนั้นจึงควรรักษาความสะอาดของรูเป่าและภายนอกของผลิตภัณฑ์สำหรับผลิตภัณฑ์ที่มีการห่อหุ้ม
- สารทำความเย็นที่รั่วออกจากท่อสารทำความเย็น (ท่อ) อาจทำให้เกิดเพลิงไหม้หรือการบาดเจ็บได้ ดังนั้นจึงควรนำเปลวไฟหรือวัสดุเผาไหม้ออกให้ห่างเพื่อการระบายอากาศ
- ปิดฝาครอบถังเก็บน้ำภายในให้สนิทก่อนการใช้งาน
- ห้ามใช้อุปกรณ์ไฟฟ้าภายในถังเก็บน้ำของผลิตภัณฑ์นี้ เว้นแต่จะเป็นอุปกรณ์ที่ผู้ผลิตแนะนำ

3 ชื่อชิ้นส่วนและอุปกรณ์เสริม

หน้า/หลัง

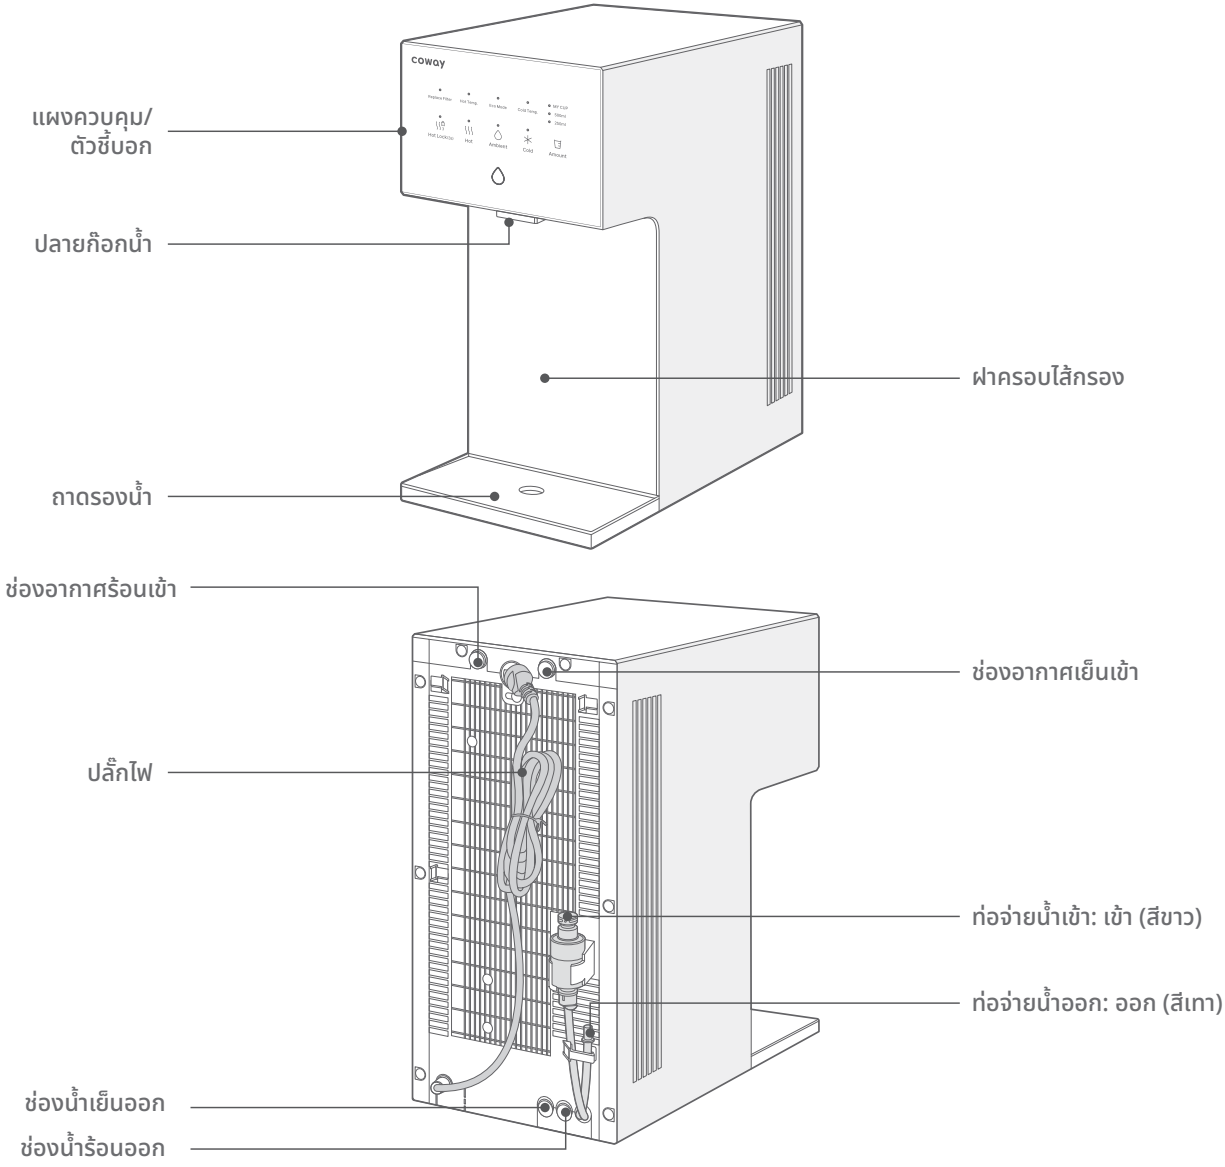


3 ชื่อชิ้นส่วนและอุปกรณ์เสริม

อุปกรณ์เสริม



คู่มือผู้ใช้




แท่งเว้นระยะห่าง



คลิปล็อก
(1/4", 5 ชิ้น)



ข้อต่องอ



ท่อหุ้มสายน้ำแบบคู่
(Tubing-twin
covering)




เคเบิลไทร์



ส่วนขยายก๊อกน้ำ


ภายในตัวเครื่อง

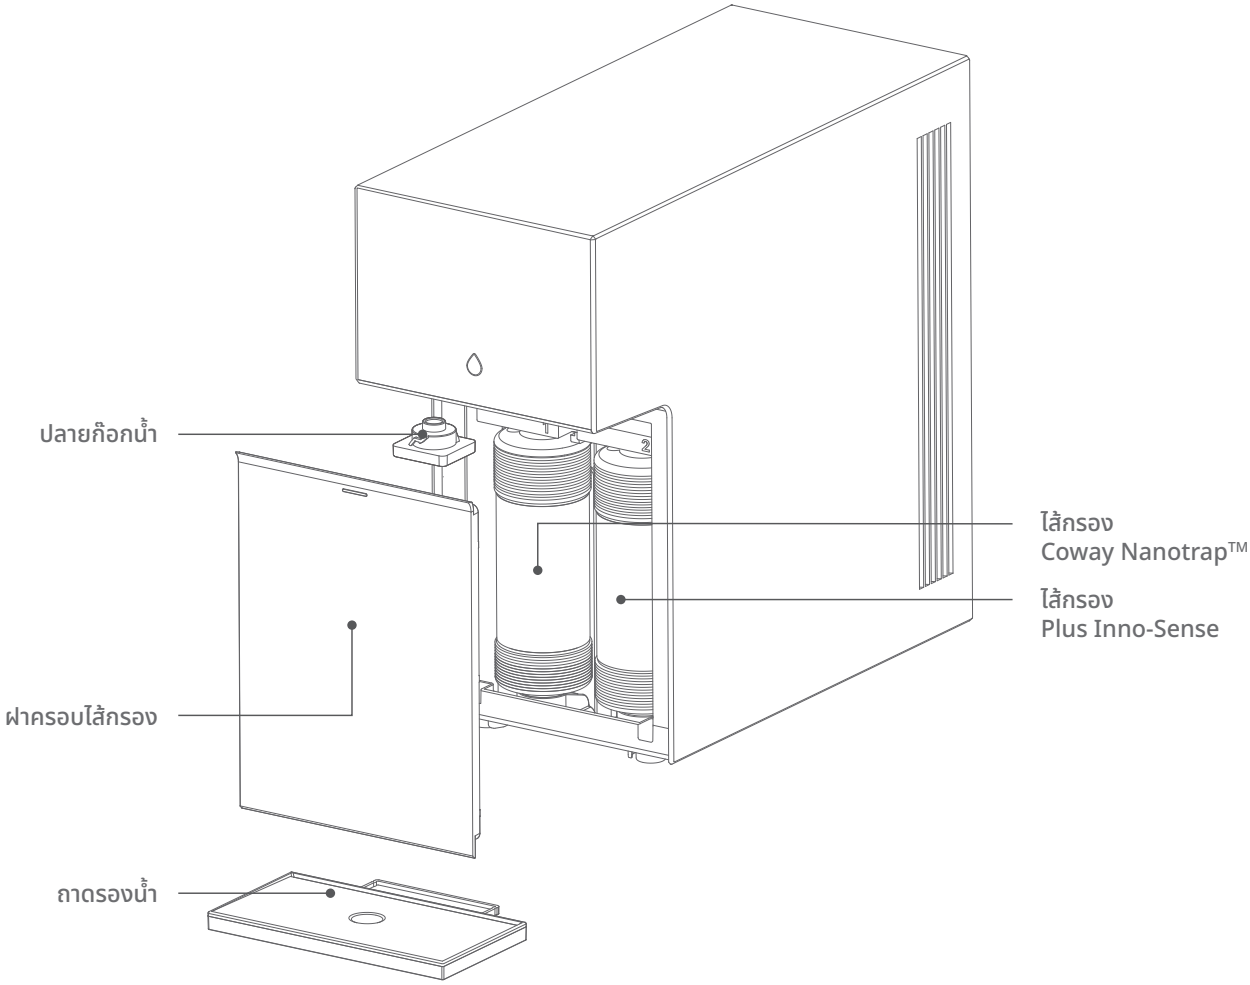


- เครื่องมือสำหรับทำความสะอาดผลิตภัณฑ์และการเปลี่ยนไส้กรองนั้นไม่ได้ให้มาพร้อมกับผลิตภัณฑ์
- บริการดูแลและซ่อมบำรุงผลิตภัณฑ์โดยผู้เชี่ยวชาญมีให้สำหรับลูกค้าที่เช่าผลิตภัณฑ์หรือเป็นสมาชิก

4 การใช้อุปกรณ์เสริมและข้อควรระวัง

แท่งเว้นระยะห่าง

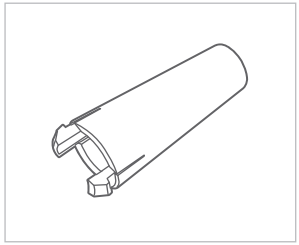

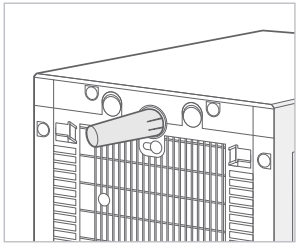


โปรดติดตั้งแท่งเว้นระยะที่ด้านหลังของผลิตภัณฑ์ เพื่อรักษาระยะห่างระหว่างผลิตภัณฑ์และผนัง


ควรรักษาระยะห่างประมาณ 10 ซ.ม. ระหว่างผนังและผลิตภัณฑ์นี้ เพื่อช่วยระบายความร้อนจากแผงระบายความร้อนด้านหลังของผลิตภัณฑ์


วิธีใช้ส่วนขยายก๊อกน้ำ

เมื่อจ่ายน้ำร้อนด้วยแรงดันน้ำต่ำและการไหลน้ำต่ำ น้ำอาจกระเด็นได้ ท่านสามารถใช้ส่วนขยายก๊อกน้ำเพื่อลดน้ำกระเด็นได้

สอดส่วนขยายก๊อกน้ำเข้าไปที่ส่วนปลายของก๊อกน้ำจนสุดและยึดให้เข้าที่

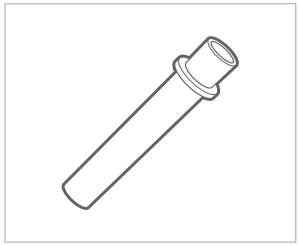

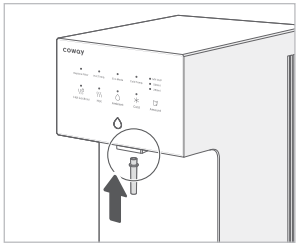

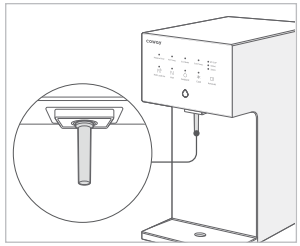

5 วิธีติดตั้ง

ตรวจสอบก่อนการติดตั้ง

- ติดตั้งผลิตภัณฑ์ในบริเวณที่เย็นในห้อง บนพื้นที่เรียบ ห่างจากแสงแดด และห่างจากความชื้น ฝุ่น และน้ำหยด
- เมื่อทำการติดตั้งเครื่องกรองน้ำนี้ ตะแกรงหม้อน้ำที่ด้านหลังของผลิตภัณฑ์ควรอยู่ห่างจากผนังอย่างน้อย 10 ซ.ม. และตรวจดูให้แน่ใจว่าพื้นที่ติดตั้งนั้นเรียบและแข็งแรง
- ปิดเครื่องไว้ประมาณ 30 นาทีก่อนย้ายไปยังที่ตั้งใหม่

- อาจมีน้ำที่ใช้ในการตรวจสอบหลังการผลิตตกค้างอยู่ในไส้กรอง โปรดอย่าตกใจ นี่ไม่ใช่ผลิตภัณฑ์ใช้แล้ว
- เมื่อทำการติดตั้งอุปกรณ์กรองน้ำใหม่นี้ อย่านำวาล์วจ่ายน้ำและท่อเก่ากลับมาใช้ใหม่
- โปรดติดต่อช่างของเราสำหรับรายละเอียดเพิ่มเติมเกี่ยวกับการติดตั้ง เพื่อทำให้ผลิตภัณฑ์ทำงานได้อย่างเต็มประสิทธิภาพ ศูนย์บริการ Coway: 1421

ติดตั้งตามขั้นตอนต่อไปนี้

1 เชื่อมต่ออะแดปเตอร์วาล์วจ่ายน้ำประปาเข้ากับวาล์วน้ำ

- เชื่อมต่อกับท่อน้ำเย็น หากต่อเข้ากับชุดท่อน้ำร้อน ไส้กรองอาจได้รับความเสียหาย

2 ติดตั้งท่อน้ำเข้าและท่อน้ำทิ้งบนตัวเครื่อง


- ท่อสีขาวที่ด้านหลังของตัวเครื่อง - ท่อน้ำเข้า, ท่อสีเทา - ท่อน้ำทิ้ง

3 เชื่อมต่อปลั๊กไฟของตัวเครื่อง

4 เมื่อเปิดใช้งานเครื่องใช้ไฟฟ้านี้เป็นครั้งแรก ระบบจะเริ่มการล้าง (การล้างใช้เวลา 11 นาที)

- หลีกเลี่ยงการติดตั้งเครื่องกรองน้ำในบริเวณที่พื้นไม่เรียบ มีความชื้นสูง ได้รับแสงแดดอย่างรุนแรง มีฝุ่นปริมาณสูงมาก และบริเวณที่โดนน้ำ ฯลฯ
- ตะแกรงหม้อน้ำที่ด้านหลังของผลิตภัณฑ์ควรห่างจากผนังอย่างน้อย 10 ซม. และตรวจดูให้แน่ใจว่าพื้นที่ติดตั้งนั้นแข็งแรง
- ตรวจดูให้แน่ในว่าต่อเข้ากับท่อน้ำเย็น (หากต่อเข้ากับชุดท่อน้ำร้อน ไส้กรองอาจได้รับความเสียหาย)
- นี่คือเสียงตามธรรมชาติของอากาศที่ตกค้าง น้ำที่ไหลเข้าไปภายในผลิตภัณฑ์ และน้ำที่ออกมาจากไส้กรอง ซึ่งจะหายไปหลังจากเสร็จสิ้นการฟลัชเป็นครั้งแรก (นี่ไม่ใช่ผลิตภัณฑ์ทำงานผิดพลาด)

5 วิธีติดตั้ง

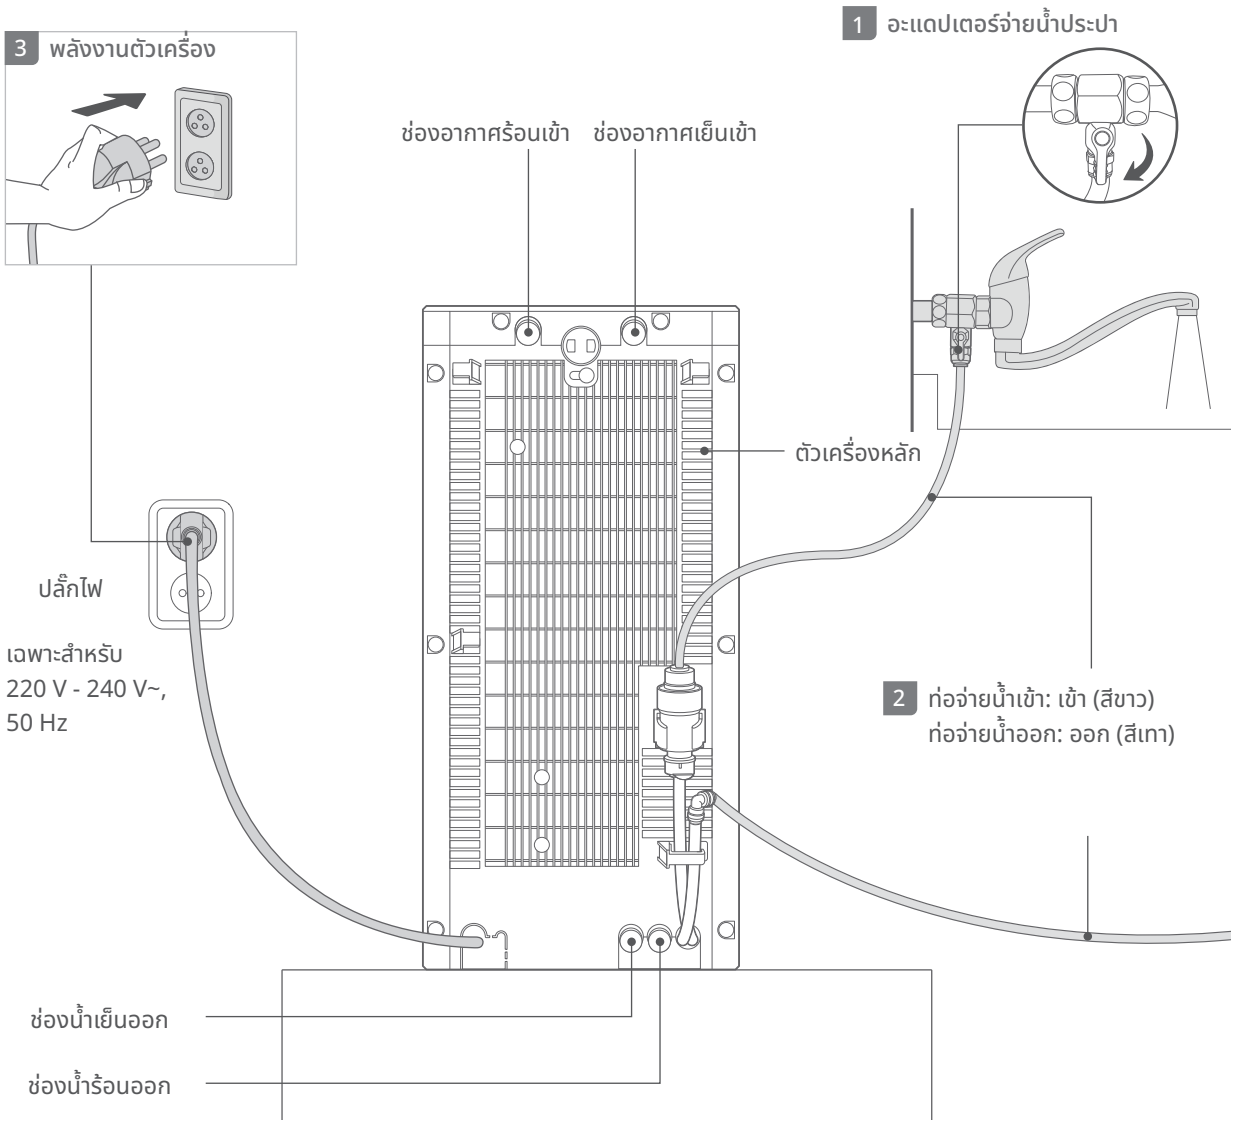

* สภาพแรงดันน้ำประปา : 138 kPa - 827 kPa

6 ตรวจสอบก่อนใช้งาน

ผลิตภัณฑ์นี้ใช้ไฟฟ้า 220 V - 240 V~, 50 Hz

ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V - 240 V ~, 50 Hz ที่ต่อสายดิน
อุปกรณ์นี้จำเป็นต้องใช้ไฟฟ้าในการทำงาน

เปิดวาล์วจ่ายน้ำประปา

เครื่องกรองน้ำจะทำงานได้อย่างถูกต้องต่อเมื่อจ่ายน้ำประปาเข้าเท่านั้น

เมื่อตัวชี้บอกบนหน้าจอปิดลง ให้ตรวจสอบแหล่งจ่ายน้ำ

เมื่อตัวชี้บอกสถานะบนหน้าจอปิดลง ให้ตรวจดูว่าแหล่งจ่ายพลังงานถูกตัดเนื่องจากไฟดับหรือสาเหตุอื่นๆ หรือไม่

เปลี่ยนไส้กรองเป็นประจำ

การเปลี่ยนไส้กรองเป็นประจำนั้นสำคัญมากต่อคุณภาพของน้ำดื่ม
หากใช้งานไส้กรองเกินอายุการใช้งาน ประสิทธิภาพการอุปกรณ์กรองน้ำอาจลดลง ควรคำนึงถึงรอบการเปลี่ยนไส้กรอง

เมื่อติดตั้งเป็นครั้งแรก ให้ทำการล้างไส้กรอง

เมื่อเสียบปลั๊กไฟแล้ว หน้าจอด้านหน้าจะเปลี่ยนเป็นหน้าจอรอการล้าง
ในตอนนี้ หากกดปุ่มจ่ายน้ำ การล้างจะเริ่มต้น การล้างใช้เวลา 11 นาที
ขณะล้างด้วยน้ำอุณหภูมิห้อง ซึ่งเป็นขั้นตอนเริ่มต้นของการล้าง จะมีการจ่ายน้ำด้วยก๊อกจ่ายน้ำ ดังนั้นให้เตรียมถังรองที่มีขนาด 3 ลิตรขึ้นไป

หากท่านไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน โปรดถอดปลั๊กไฟ


ปิดวาล์วจ่ายน้ำประปา และถอดสายไฟ

เมื่อไม่ได้ใช้งานเป็นเวลานาน เพื่อสุขอนามัย ให้จ่ายน้ำเย็น/น้ำร้อนประมาณ 2-3 นาที จ่ายน้ำอุณหภูมิห้องประมาณ 30 วินาทีเพื่อระบายน้ำทั้งหมดที่อยู่ภายใน

เมื่อไม่ได้ใช้งานเป็นเวลานาน เพื่อสุขอนามัย ให้จ่ายน้ำเย็น/น้ำร้อนประมาณ 2-3 นาที จ่ายน้ำอุณหภูมิห้องประมาณ 30 วินาทีเพื่อระบายน้ำทั้งหมดที่อยู่ภายใน


1 ปุ่มและตัวชี้บอก

ตัวชี้บอก

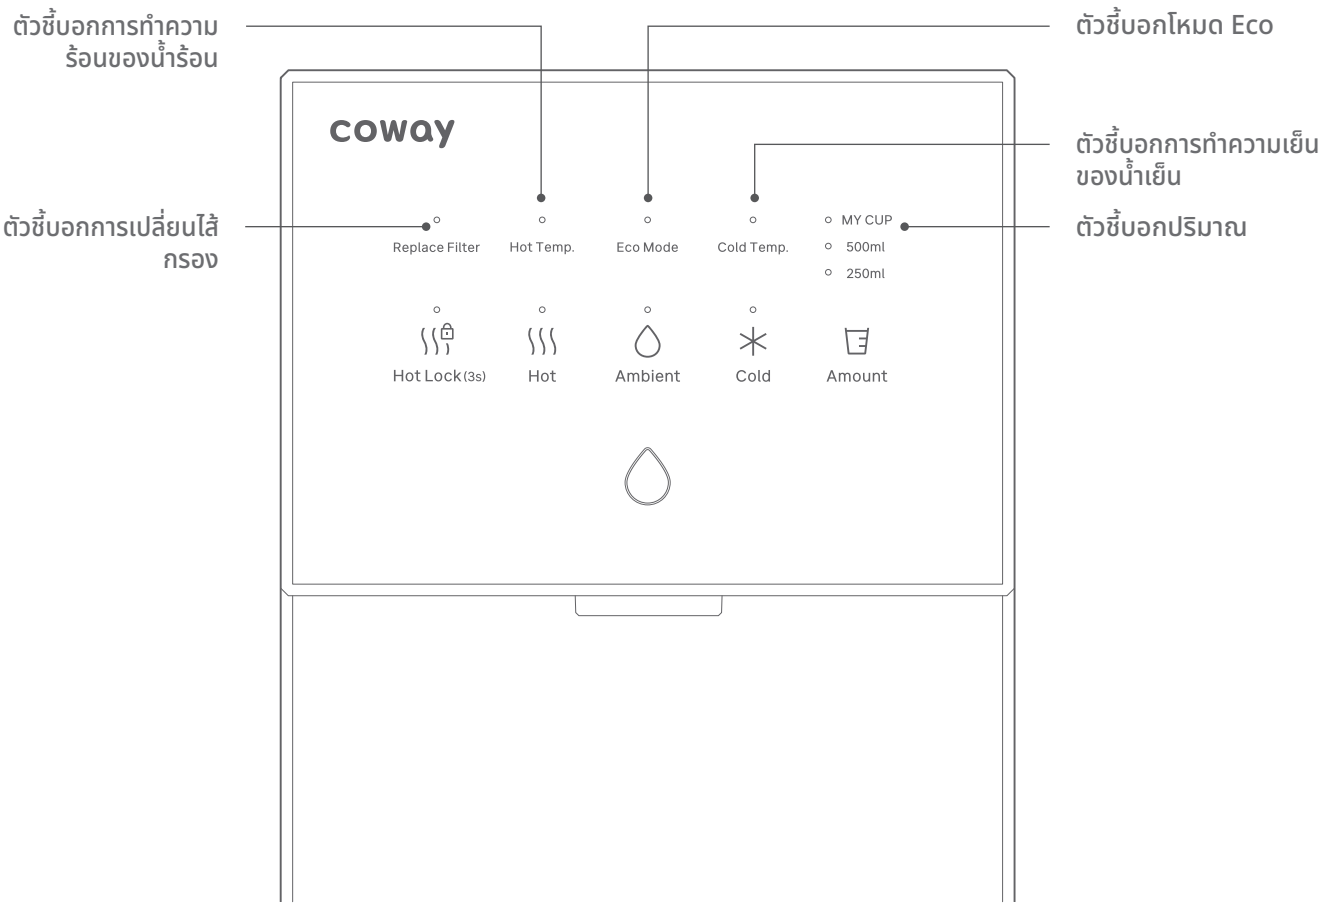


ไอคอนแจ้งเตือนสถานะ

การแจ้งเตือนสถานะต่อไปนี้จะแสดงบนหน้าจอด้านหน้าของผลิตภัณฑ์:
• การแจ้งเตือนสถานะจะไม่แสดงเมื่อมีการรายงานข้อผิดพลาด



ตัวชี้บอกการเปลี่ยนไส้กรอง

ตัวชี้บอกจะเปิดขึ้นหรือกะพริบเมื่อถึงรอบการเปลี่ยนตัวกรอง
(สำหรับการตั้งค่าดูแลด้วยตนเองเท่านั้น)




ตัวชี้บอกโหมด Eco

ตัวชี้บอกนี้จะติดขึ้นเมื่อตั้งค่าโหมด Eco



ตัวชี้บอกปริมาณ

ตัวชี้บอกจะแสดงหน่วยปริมาณการจ่ายน้ำ (มล.)
ก่อนการตั้งค่า My Cup ตัวชี้บอกจะแสดงเป็น
250 มล. → 500 มล. →250 มล.
เมื่อการตั้งค่า My Cup ตัวชี้บอกจะแสดงเป็น
250 มล. → 500 มล. →MY CUP → 250 มล.



ตัวชี้บอกการทำความร้อนของน้ำร้อน

ตัวชี้บอกจะติดขึ้นตามอุณหภูมิน้ำร้อนในปัจจุบัน
- น้ำร้อน (อุ่น): ไฟ LED สีขาว
- น้ำร้อน (ร้อนจัด): ไฟ LED สีแดง
(หากฟังก์ชันน้ำร้อนปิดอยู่ ตัวชี้บอกนี้จะดับลง)




ตัวชี้บอกการทำความเย็นของน้ำเย็น


ตัวชี้บอกจะติดขึ้นตามอุณหภูมิน้ำเย็นในปัจจุบัน
- น้ำเย็น (เย็นเล็กน้อย): ไฟ LED สีขาว
- น้ำเย็น (เย็นจัด): ไฟ LED สีน้ำเงิน
(เมื่อฟังก์ชันน้ำเย็นปิดอยู่ตัวชี้บอกนี้จะดับลง)

1 ปุ่มและตัวชี้บอก

ปุ่ม

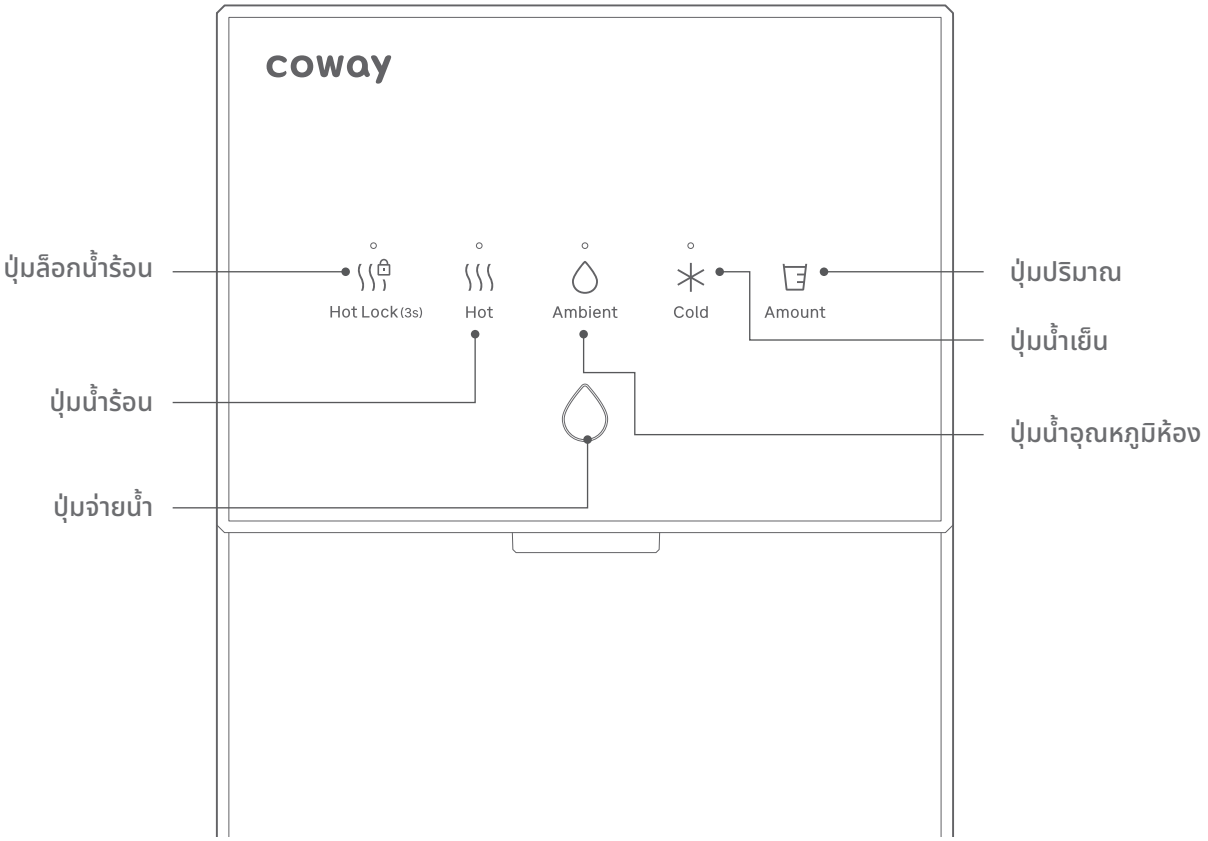

ปุ่ม



ปุ่มล็อกน้ำร้อน
กดค้างไว้ 3 วินาทีเพื่อล็อกหรือปลดล็อกการล็อกน้ำร้อน




ปุ่มน้ำร้อน
แตะปุ่มเมื่อต้องการจ่ายน้ำร้อน



ปุ่มน้ำอุณหภูมิห้อง
แตะปุ่มเมื่อต้องการจ่ายน้ำอุณหภูมิห้อง



ปุ่มน้ำเย็น
แตะปุ่มเมื่อต้องการจ่ายน้ำเย็น




ปุ่มปริมาณ
แตะเพื่อเลือกปริมาณการจ่ายน้ำที่ต้องการ
* 3 ตัวเลือก (250 มล., 500 มล., MY CUP) (ถ้าไม่ได้ตั้งค่า MY CUP จะมีตัวเลือก 250 มล. และ 500 มล.)
* ปริมาณน้ำที่จ่ายอาจแตกต่างกันไปโดยขึ้นอยู่กับสภาพแวดล้อมในการใช้งาน



ปุ่มจ่ายน้ำ
กดปุ่มเพื่อจ่ายน้ำกดอีกครั้งเพื่อหยุดจ่ายน้ำ


1 ปุ่มและตัวชี้บอก

ฟังก์ชันหลัก

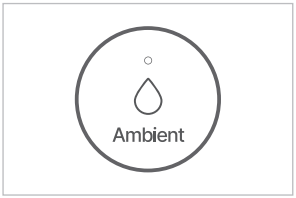

ฟังก์ชันน้ำอุณหภูมิห้อง


กดปุ่มน้ำอุณหภูมิห้อง และตรวจดูว่าตัวชี้บอกน้ำอุณหภูมิห้องบนหน้าจอติดหรือไม่

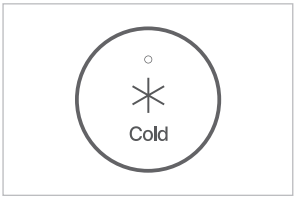

ฟังก์ชันน้ำเย็น

กดปุ่มน้ำเย็น และตรวจดูว่าตัวชี้บอกน้ำเย็นบนหน้าจอติดหรือไม่

- ตัวชี้บอกอุณหภูมิน้ำเย็นเปิดอยู่เนื่องจากโหมดน้ำเย็นติดอยู่
- หากท่านใช้ผลิตภัณฑ์เป็นครั้งแรกหรือไม่ได้ใช้การจ่ายน้ำเย็นเป็นเวลานาน การทำน้ำให้มีอุณหภูมิเย็นเพียงพอจะใช้เวลาประมาณ 1 ชั่วโมง
- สถานะเริ่มต้นเป็นเปิด
- ในการเปิดฟังก์ชัน ให้กดปุ่มน้ำเย็นค้างไว้นานกว่า 3 วินาที
- ในการปิดฟังก์ชัน ให้กดปุ่มน้ำเย็น ปุ่มน้ำอุณหภูมิห้อง และปุ่มปริมาณพร้อมกันค้างไว้นานกว่า 3 วินาที

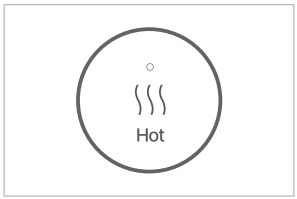

ฟังก์ชันน้ำร้อน

แตะที่ปุ่มน้ำร้อน และตรวจดูว่าตัวชี้บอกน้ำร้อนบนหน้าจอติดหรือไม่

- ตัวชี้บอกอุณหภูมิน้ำร้อนติดอยู่เนื่องจากโหมดน้ำร้อนเปิดอยู่
- หากท่านใช้ผลิตภัณฑ์เป็นครั้งแรกหรือไม่ได้ใช้การจ่ายน้ำร้อนเป็นเวลานาน การทำน้ำให้มีอุณหภูมิร้อนเพียงพอจะใช้เวลาประมาณ 30 นาที
- สถานะเริ่มต้นเป็นเปิด
- ในการเปิดฟังก์ชัน ให้กดปุ่มน้ำร้อนค้างไว้นานกว่า 3 วินาที
- ในการปิดฟังก์ชัน ให้กดปุ่มน้ำร้อน ปุ่มน้ำอุณหภูมิห้อง และปุ่มปริมาณพร้อมกันค้างไว้นานกว่า 3 วินาที
- เมื่อจ่ายน้ำครั้งแรก การจ่ายปริมาณน้ำคงที่อาจมีการรอทำงานเล็กน้อย ซึ่งเป็นการทำงานปกติ

- เมื่อไม่มีน้ำเย็นจ่ายออกมา โปรดตรวจดูว่าตัวชี้บอกน้ำเย็นบนหน้าจอเปิดอยู่หรือไม่
- เมื่อทำการจ่ายน้ำร้อน โปรดใช้ความระมัดระวังเพื่อหลีกเลี่ยงโอกาสในการถูกน้ำร้อนลวก
- เมื่อทำการจ่ายน้ำร้อน ให้นำถ้วยไว้ใกล้ๆ กับก๊อกน้ำ เนื่องจากน้ำอาจกระเซ็น
- หากท่านได้ยินเสียงเตือน ตัวชี้บอกที่ปุ่มล็อกน้ำร้อนแสดงว่าไม่มีน้ำร้อน ให้ตรวจสอบฟังก์ชันล็อกน้ำร้อน
- เมื่อทำการจ่ายน้ำร้อน อาจเกิดหินปูนขึ้นได้ โดยขึ้นอยู่กับสภาพการใช้งาน
  หากท่านพบสสารแปลกปลอมสีขาว โปรดติดต่อศูนย์บริการ Coway ที่ 1421 เพื่อรับบริการ
  * สารแปลกปลอมสีขาวคือหินปูน ซึ่งเกิดจากเกิดความร้อนกับแร่ธาตุในน้ำ
- เมื่อไม่ได้ใช้น้ำร้อนเป็นเวลานาน ให้ปิดฟังก์ชันน้ำร้อนโดยการกดปุ่มน้ำร้อน + ปุ่มน้ำอุณหภูมิห้อง + ปุ่มปริมาณ ค้างไว้นานกว่า 3 วินาที
- เมื่อตั้งค่าโหมด ECO ระบบจะปรับอุณหภูมิของน้ำเย็นและน้ำร้อนโดยอัตโนมัติ
  (น้ำอาจร้อนหรือเย็นน้อยลง ซึ่งไม่ใช่การทำงานผิดปกติของเครื่องใช้หรือประสิทธิภาพลดลงแต่อย่างใด)
- มีความเสียงที่จะเกิดแผลไหม้ หากถอดจุกระบายน้ำร้อนออกในขณะที่กำลังทำน้ำร้อน
- หากน้ำกระเด็นมาก โปรดใช้ส่วนขยายก๊อกน้ำ
  นอกจากนี้ โปรดตรวจดูว่าท่อระบายอุดตันหรือไม่

2 วิธีการใช้งาน

วิธีการกดน้ำ

01. เลือกอุณหภูมิที่ท่านต้องการ

โหมดน้ำอุณหภูมิห้องจะเป็นค่าตั้งต้นระหว่างช่วงเวลาสแตนด์บาย



น้ำอุณหภูมิห้อง: กดปุ่มน้ำอุณหภูมิห้อง




น้ำเย็น : กดปุ่มน้ำเย็น





น้ำร้อน : กดปุ่มน้ำร้อน


02. เลือกปริมาณการจ่ายน้ำที่ต้องการ

ท่านสามารถเลือกปริมาณได้ตามลำดับ 250 มล., 500 มล. และ My Cup (ปริมาณที่ผู้ใช้ปรับแต่งไว้)

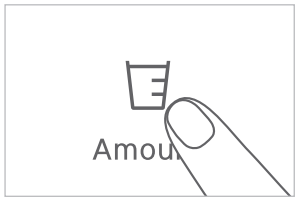

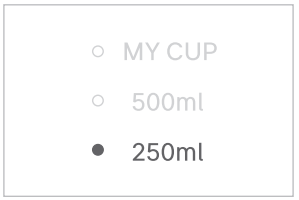


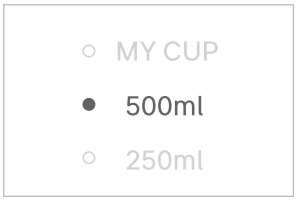

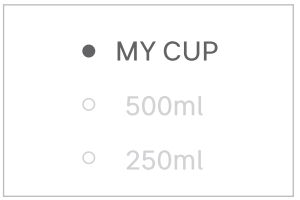

* เมื่อไม่ได้ตั้งค่าฟังก์ชัน MY CUP ค่าเริ่มต้นคือ 250 มล. และ 500 มล.

03. กดปุ่มจ่ายน้ำ

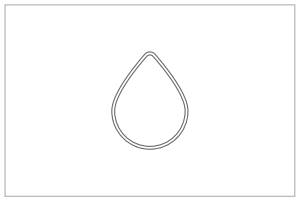


กดเพื่อจ่ายน้ำ และการจ่ายน้ำจะหยุดลงเมื่อท่านกดปุ่มอีกครั้ง


* เมื่อกดปุ่มนี้ค้างไว้ 2 วินาที ท่านสามารถจ่ายน้ำได้อย่างต่อเนื่อง

3 การตั้งค่าระบบ

01. ฟังก์ชันล็อกน้ำร้อน

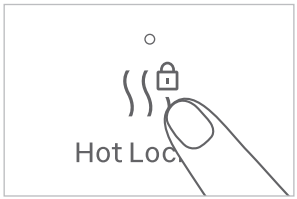


กดปุ่ม [ล็อกน้ำร้อน(🔒)] ค้างไว้ 3 วินาที

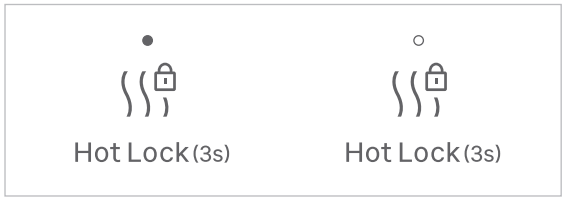

การล็อกน้ำร้อนเปิดใช้งานหรือปิดใช้งานอยู่


02. ล็อกฟังก์ชันทั้งหมด

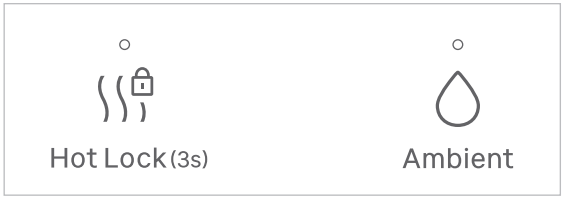


เปิดใช้งานหรือปิดใช้งานปุ่มฟังก์ชันล็อกทั้งหมด โดยกดปุ่มล็อกน้ำร้อนและปุ่มน้ำอุณหภูมิห้องค้างไว้นานกว่า 3 วินาที
(เหมาะกับการใช้งานเมื่อทำความสะอาด)

3 การตั้งค่าระบบ

03. ฟังก์ชัน My Cup

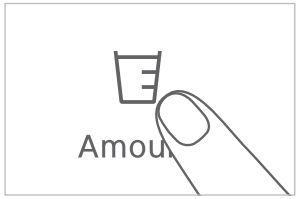

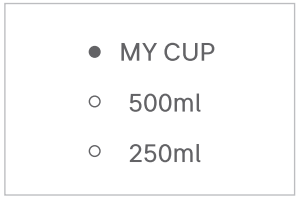

กดปุ่มปริมาณน้ำค้างไว้นานกว่า 3 วินาที

* เมื่อทำงานขณะที่ตั้งค่า MY CUP ไว้แล้ว การตั้งค่าจะรีเซ็ต กดปุ่มประเภทน้ำที่ต้องการ
* โหมด MY CUP ตั้งค่าเฉพาะปริมาณน้ำเท่านั้น และไม่เกี่ยวข้องกับประเภทน้ำที่เลือก กดปุ่มจ่ายน้ำเพื่อจ่ายน้ำในปริมาณที่ต้องการ และกดปุ่มนี้อีกครั้งเพื่อหยุด
* ช่วงปริมาตรที่ปรับได้: 120 มล. ~ 1000 มล.


- โหมด MY CUP ตั้งค่าเฉพาะปริมาณน้ำเท่านั้น และไม่เกี่ยวข้องกับประเภทน้ำที่เลือก
- ท่านสามารถตั้งค่า MY CUP ได้ระหว่าง 120 มล. และ 1,000 มล. ปริมาณที่สูงเกิน 1,000 มล. จะกลับมาที่ค่าเริ่มต้น 1,000 มล.
- เมื่อตั้งค่า MY CUP ไว้ ลำดับการเลือกคือ 250 มล., 500 มล. และ MY CUP
  (เมื่อไม่ได้ตั้งค่าหรือปิดใช้งานอยู่ ลำดับการเลือกคือ 250 มล., 500 มล. และ 250 มล.)
- ปิดใช้งานการตั้งค่า MY CUP โดยการกดปุ่มปริมาณค้างไว้นานกว่า 3 วินาที

04. ฟังก์ชันโหมด Eco



ท่านสามารถประหยัดพลังงานได้โดยการลดระดับการทำงานในการทำน้ำเย็นและน้ำร้อน
(เมื่อตั้งค่าโหมด ECO น้ำเย็นจะมีความเย็นน้อยลง และน้ำร้อนจะร้อนน้อยลง)
- เมื่อกดปุ่มน้ำร้อนและน้ำอุณหภูมิห้องพร้อมกันค้างไว้นานกว่า 3 วินาที ตัวชี้บอกโหมด Eco จะติดและฟังก์ชันจะถูกตั้งค่า (เมื่อกดค้างไว้อีกครั้งนานกว่า 3 วินาที ฟังก์ชันจะปิดใช้งานและตัวชี้บอกดับลง)

05. ฟังก์ชันเงียบ

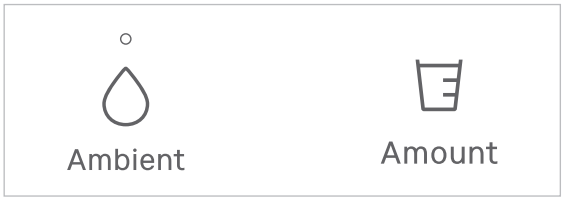

สามารถใช้ฟังก์ชันเงียบโดยกดปุ่มน้ำอุณหภูมิห้องและปุ่มปริมาณพร้อมกันค้างไว้นานกว่า 3 วินาท
(กดปุ่มค้างไว้นานกว่า 3 วินาทีอีกครั้งเพื่อปิดใช้งานฟังก์ชัน)

06. ฟังก์ชันระบายน้ำอัตโนมัติ

เมื่อไม่ใช้งานนาน 24 ชั่วโมง ระบบจะระบายน้ำในถังเก็บน้ำเย็น 30 วินาที เพื่อทำให้แน่ใจในการจ่ายน้ำสะอาด

1 วิธีทำความสะอาด


ตัวเครื่องหลัก



ช่วงเวลาที่แนะนำ: ทุก 2 - 4 สัปดาห์
วิธีการ: เช็ดด้วยผ้าที่แห้งและนุ่ม หากสกปกรกมาก ให้ใช้ผ้าเปียกหมาดๆ เช็ดผลิตภัณฑ์

- อย่าฉีดน้ำบนผลิตภัณฑ์โดยตรง
- อย่าใช้ทินเนอร์ เบนซิน หรือสารทำความสะอาดที่มีวัสดุผงขัด หรือผ้าหยาบในการทำความสะอาด


ถาดรองน้ำ

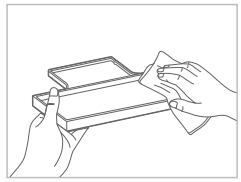


ช่วงเวลาที่แนะนำ: ทุก 2 - 4 สัปดาห์
วิธีการ: เช็ดด้วยผ้าที่แห้งและนุ่ม หากสกปรกมาก ให้ใช้ผ้าเปียกหมาดๆ เช็ดผลิตภัณฑ์

- อย่าปิดเครื่องในขณะที่เครื่องกำลังทำงาน


ปลายก๊อกน้ำ

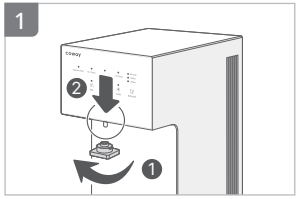


ถอดปลายก๊อกน้ำโดยการหมุนตามเข็มนาฬิกา
*ถอดปลายก๊อกน้ำออก

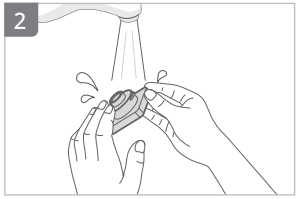

ล้างปลายก๊อกน้ำด้วยน้ำ

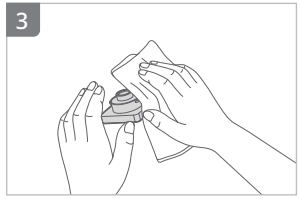


หลังจากล้างแล้ว เช็ดปลายก๊อกน้ำด้วยผ้าที่นุ่มและแห้ง

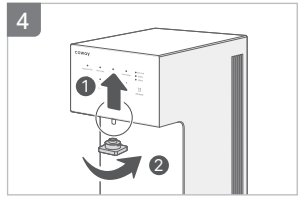


ประกอบปลายก๊อกน้ำโดยการหมุนทวนเข็มนาฬิกา

- อย่าใช้สารเคมีทำความสะอาด


วิธีการระบายน้ำในถังเก็บน้ำเย็น

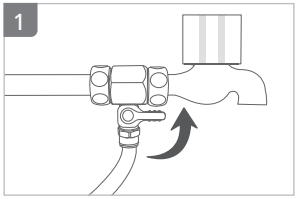


ปิดวาล์วจ่ายน้ำประปา

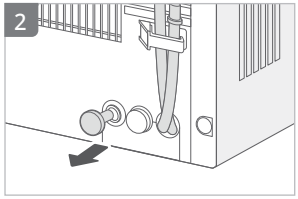


เปิดจุกช่องจ่ายน้ำเย็นที่ด้านหลังของผลิตภัณฑ์

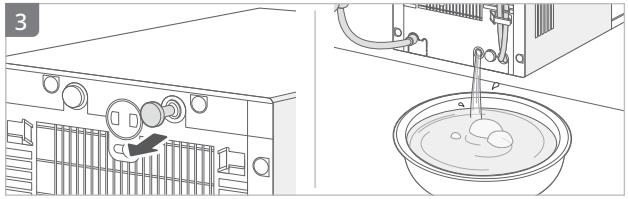


หลังจากนั้นค่อยเปิดจุกที่ช่องอากาศเย็นที่ด้านหลังของผลิตภัณฑ์ (เนื่องจากน้ำจะไหลออกมาทันทีที่เปิดช่องอากาศเย็นเข้า ให้เตรียมภาชนะแยกไว้ต่างหากล่วงหน้า)

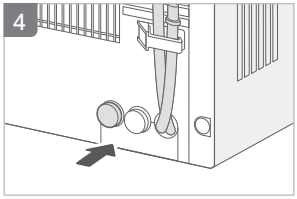

หลังจากการระบายน้ำเสร็จสิ้นแล้ว ให้ปิดจุกกลับเข้าที่ช่องน้ำเย็นออก

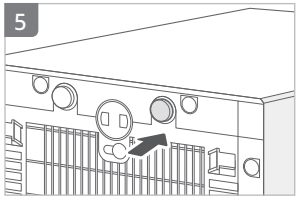


หลังจากการระบายน้ำเสร็จสิ้นแล้ว ให้ปิดจุกกลับเข้าที่ช่องอากาศเย็นเข้า

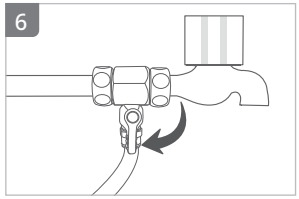


เปิดวาล์วจ่ายน้ำประปา

1 วิธีทำความสะอาด


วิธีการระบายน้ำในถังเก็บน้ำร้อน

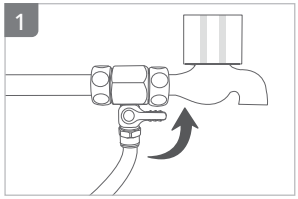


ปิดวาล์วจ่ายน้ำประปา

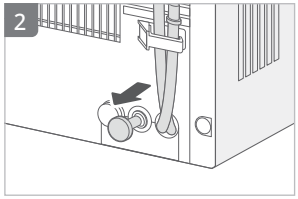


เปิดจุกช่องจ่ายน้ำร้อนที่ด้านหลังของผลิตภัณฑ์

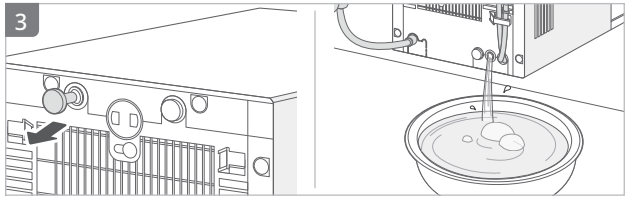


หลังจากนั้นค่อยเปิดจุกที่ช่องอากาศร้อนที่ด้านหลังของผลิตภัณฑ์ (เนื่องจากน้ำจะไหลออกมาทันทีที่เปิดช่องอากาศร้อนเข้า ให้เตรียมภาชนะแยกไว้ต่างหากล่วงหน้า) เมื่อเปิดช่องอากาศร้อนเข้าด้านบนก่อน น้ำร้อนจะไหลออกมาก่อน ซึ่งเป็นอันตราย กรุณาปฏิบัติตามลำดับอย่างเคร่งครัด

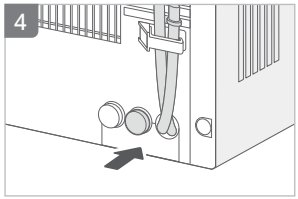

หลังจากการระบายน้ำเสร็จสิ้นแล้ว ให้ปิดจุกกลับเข้าที่ช่องน้ำร้อนออก

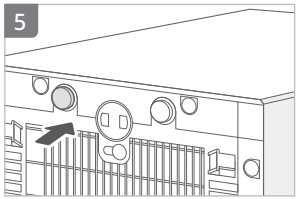

หลังจากการระบายน้ำเสร็จสิ้นแล้ว ให้ปปิดจุกกลับเข้าที่ช่องอากาศร้อนเข้า

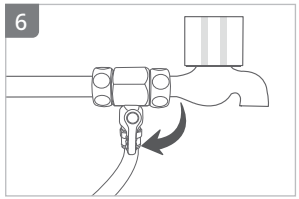


เปิดวาล์วจ่ายน้ำประปา

- ขณะระบายน้ำเย็นและน้ำร้อน ท่านจำเป็นต้องเปิดฝา ‘น้ำเย็น/น้ำร้อนออก’ จากนั้นจึงเปิดฝา ‘ช่องอากาศเย็น/ร้อนเข้า’ (หากลำดับย้อนกลับ น้ำจะระบายขณะเปิดฝาด้านล่าง การระบายน้ำร้อนมีความเสี่ยงของการถูกน้ำร้อนลวก โปรดตรวจสอบให้แน่ใจว่าปฏิบัติตามลำดับและใช้งานโดยการต่อวาล์วสวิตช์ไปที่ ‘น้ำร้อนออก’)
- เมื่อระบายน้ำเย็นและน้ำร้อนเสร็จสิ้นแล้ว ให้ปิดฝาที่ถอดออกมาทั้งหมดกลับเข้าที่อีกครั้ง
(หากใช้งานเครื่องใช้โดยไม่ปิดฝาเข้าที่ จะทำให้เกิดการรั่วไหลนอกเครื่องกรองน้ำ ดังนั้นโปรดใช้ความระมัดระวัง)

2 การเปลี่ยนไส้กรอง

กระบวนการทำน้ำสะอาด

Coway ทำน้ำดื่มด้วยระบบทำน้ำดื่ม 2 ขั้นตอน

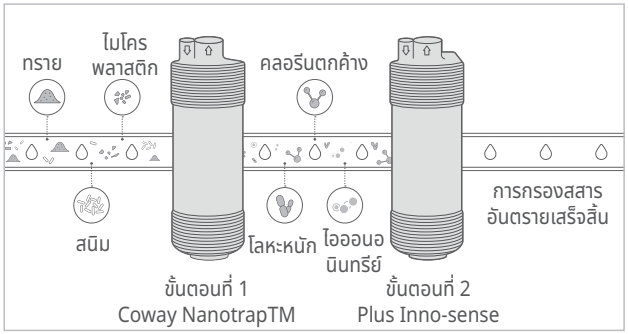

ขั้นตอนที่ 1: ไส้กรอง Coway Nanotrap™
Coway Nanotrap™ ช่วยลดจุลชีพต่างๆ เศษผงที่ลอยอยู่ในน้ำ ประปา อนุภาคฝุ่นโลหะหนัก (ปรอท ตะกั่ว เหล็ก และอะลูมิเนียม) แบคทีเรีย (อีโคไล) และไวรัส (โนโรไวรัส)

ขั้นตอนที่ 2: ไส้กรอง Plus Inno-Sense (D)
ไส้กรอง Plus Inno-Sense ช่วยปรับปรุงรสชาติของน้ำโดย การช่วยลดสสารกำเนิดกลิ่น สารมลพิษที่เจือปน คลอไรด์ตกค้าง สารประกอบอินทรีย์ระเหยง่าย และสารมลพิษอื่นๆ

การเปลี่ยนไส้กรอง


หากคุณใช้ไส้กรองที่ไม่ใช่ของแท้หรือใช้ไส้กรองของแท้ที่ใช้งานนานเกินไป ประสิทธิภาพการทำงานโดยรวมของเครื่องกรองน้ำ อาจลดลงได้ ดังนั้นจึงควรตรวจสอบเป็นระยะๆ

ชื่อไส้กรอง	ระยะเวลาเปลี่ยนที่คาดไว้
ไส้กรอง Coway Nanotrap™	8 เดือน
ไส้กรอง Plus Inno-Sense	8 เดือน


- หากท่านต้มน้ำกรอง อาจทำให้เกิดตะกอนสีขาวได้ นี่คือผลของแร่ธาตุในน้ำ มิใช่สิ่งแปลกปลอม

2 การเปลี่ยนไส้กรอง


วิธีการเปลี่ยนไส้กรอง

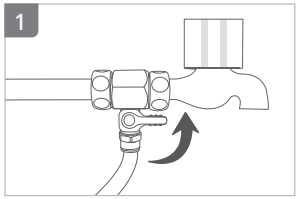


ปิดวาล์วจ่ายน้ำประปา

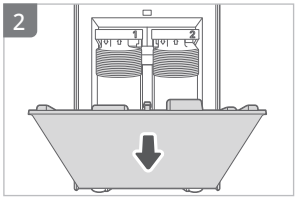


กดด้านบนของฝาครอบไส้กรอง
เพื่อถอดออก

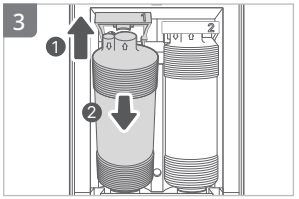


ยกที่ใส่ไส้กรองเพื่อถอดไส้กรอง
ออก

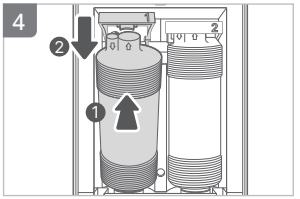


ใส่ไส้กรองใหม่จากด้านล่างและ
สอดให้เข้ากับรูด้านบน
กดที่ใส่ไส้กรองลงจนสุด

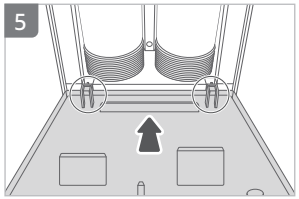

ใส่ตะขอด้านล่างสองตัวแล้วยก
ฝาครอบไส้กรองด้านบน

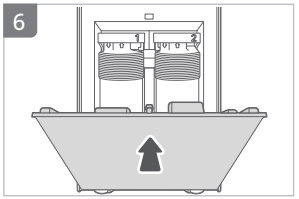

กดฝาครอบเพื่อปิดจนเกิดเสียง
คลิก และฝาจะยึดอยู่กับที่

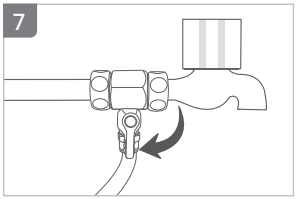

เปิดวาล์วจ่ายน้ำประปา




เมื่อไฟเริ่มกะพริบ น้ำประมาณ
2 ถึง 3 ลิตรจะออกจากช่องจ่าย
น้ำ ก่อนการล้าง ให้วางภาชนะ
ขนาดใหญ่ไว้ใต้ก๊อก

9



ตัวชี้บอกเปลี่ยนไส้กรองกะพริบ และไฟ LED น้ำเย็นติดขึ้นมา กดปุ่มจ่ายน้ำเพื่อเริ่มการล้าง (ยกเลิกการล้างไส้กรองโดย กดปุ่มน้ำเย็นค้างไว้นานกว่า 3 วินาที)


10

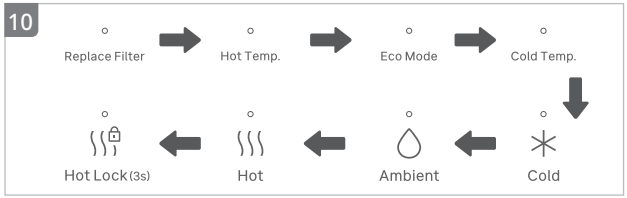

เมื่อการล้างเริ่มต้น ไฟ LED จะติดขึ้นมาตามลำดับ
- การล้างจะดำเนินการตามลำดับน้ำอุณหภูมิห้อง → น้ำร้อน → น้ำเย็น โดยใช้เวลาสูงสุด 11 นาที ขณะล้างน้ำอุณหภูมิห้อง อาจมีน้ำออกจากก๊อกสูงสุด 2 ลิตร ตรวจสอบว่าได้เตรียมภาชนะรองรับน้ำไว้หรือไม่ (สำหรับน้ำร้อนและน้ำเย็น น้ำที่ล้างจะไหลตามท่อระบาย)


ขั้นตอนความคืบหน้าจะแสดงบนตัวชี้บอกปริมาณทางด้านขวา
* กำลังล้างน้ำอุณหภูมิห้อง: ตัวชี้บอก 250 มล. ติดขึ้นมา
* กำลังล้างน้ำร้อน: ตัวชี้บอก 500 มล. ติดขึ้นมา
* กำลังล้างน้ำเย็น: ตัวชี้บอก My CUP ติดขึ้นมา
- เพื่อหยุดการทำงานขณะล้าง ให้กดปุ่มจ่ายน้ำ (กดปุ่มจ่ายน้ำอีกครั้งเพื่อเริ่มต้นใหม่ ในตอนนี้ การล้างจะเริ่มต้นตั้งแต่ต้น เพื่อสุขอนามัย) → สลับเป็นหน้าจอไส้กรองรอทำงาน
- ขณะล้างจะเกิดเสียงดัง เนื่องจากอากาศถูกไล่จากภายใน และเป็นการทำงานปกติ

11

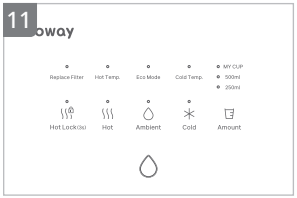

การล้างเสร็จสิ้น ท่านสามารถใช้งานได้



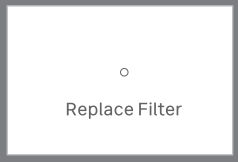

สำหรับรุ่นนี้ จะต้องตั้งค่าโหมดบริการตนเอง
* กดปุ่มล็อกน้ำร้อนและน้ำเย็นค้างไว้นานกว่า 3 วินาที
* ตัวชี้บอกเปลี่ยนไส้กรองกะพริบเมื่อต้องเปลี่ยนไส้กรอง



- สามารถกะรอบเวลาการเปลี่ยนไส้กรองได้อย่างถูกต้องได้โดยการสังเกตคุณภาพน้ำจากก๊อกน้ำ
- รอบการเปลี่ยนไส้กรองนั้นอาจแตกต่างกันไปโดยขึ้นอยู่กับปริมาณการใช้งาน ภูมิภาคที่ใช้งาน ฤดูกาล และคุณภาพของน้ำ
- สมรรถภาพการทำน้ำสะอาดอย่างมีประสิทธิภาพตามข้อมูลจำเพาะของผลิตภัณฑ์ หมายถึงปริมาณขั้นต่ำในการจัดการกับสารมลพิษโดยไม่มีการทำความสะอาด รีไซเคิล หรือเปลี่ยนไส้กรองภายในเครื่องทำน้ำสะอาด ทั้งนี้ไส้กรองแต่ละตัวจะมีรอบเวลาเปลี่ยนแตกต่างกัน

1 คำแนะนำการใช้งานที่ถูกต้อง

01. การตรวจสอบประจำวัน

ควรตรวจดูสภาพของเครื่องกรองน้ำบ่อยครั้ง เพื่อความปลอดภัยในการใช้งาน

พลังงาน

- ตัวชี้บอกเปิดและปิดในขณะที่ท่านเคลื่อนย้ายปลั๊กไฟในขณะที่เชื่อมต่อพลังงานหรือไม่
- มีส่วนใดของปลั๊กไฟที่ร้อนกว่าปกติหรือไม่
- สีหรือรูปทรงของปลั๊กไฟหรือมีส่วนใดของสายไฟที่เปลี่ยนไปหรือเสียหายหรือไม่

→ หากเกิดปัญหาด้านบนนี้ ให้หยุดใช้งานทันที แล้วติดต่อศูนย์บริการ Coway (1421)

การแสดง

- หน้าจอของผลิตภัณฑ์กะพริบหรือไม่

→ โปรดติดต่อศูนย์บริการ Coway (1421) ทันทีหากหน้าจอกะพริบผิดปกติ

02. วิธีใช้งานอย่างเหมาะสม

หมวดหมู่		วิธีใช้งานอย่างเหมาะสม
การติดตั้ง	การถอดประกอบและการติดตั้งผลิตภัณฑ์	อย่าถอดประกอบหรือติดตั้งผลิตภัณฑ์ตามอำเภอใจ โปรดให้ช่างเทคนิคของ Coway เป็นผู้ดำเนินการ
	สภาพแวดล้อมในการติดตั้ง	อย่าติดตั้งผลิตภัณฑ์ในสภาพแวดล้อมที่น่าจะทำให้เกิดการปนเปื้อน • ในห้องน้ำ บริเวณที่มีหนูและสัตว์รบกวนเยอะ (เช่นมดและแมลงสาบ) • บริเวณไม่มีการรักษาความสะอาดที่ดีและมีการปนเปื้อนอย่างรุนแรง (เช่นเรือ แม่น้ำ ปศุสัตว์ น้ำเสีย ฯลฯ) • บริเวณที่มีความชื้นสูงหรืออยู่ใกล้ทะเล • บริเวณที่รับแสงแดดโดยตรง • บริเวณอื่นๆ ที่ไม่สะอาดเพียงพอสำหรับการติดตั้งเครื่องกรองน้ำ


การใช้งาน	**รูจ่ายน้ำ**	นำมือและปากออกให้ห่างจากรูจ่ายน้ำและหลีกเลี่ยงอย่าให้ถ้วยของผู้ใช้สัมผัสกับชิ้นส่วนนี้ เช็ดแป้นก๊อกน้ำด้วยผ้าแห้งสะอาดหรือผ้าไม่ได้ถักทอสัปดาห์ละครั้ง
	การรับน้ำ	ระมัดระวังอย่าให้เครื่องดื่ม เช่น กาแฟ ชา โซดา หรืออาหารกระเด็นเข้าไปข้างในรูจ่ายน้ำหรือฝาครอบด้านหน้าของผลิตภัณฑ์ หากมีเครื่องดื่มหรือสิ่งแปลกปลอมบนผลิตภัณฑ์ ให้เช็ดออกทันทีเพื่อป้องกันการปนเปื้อน
	ถาดรองน้ำ	อย่าเทกาแฟ เครื่องดื่ม หรืออาหารลงในถาดรองน้ำ อย่าทิ้งน้ำไว้ในถาดรองน้ำนานเกินกว่าหนึ่งวัน ดูแลทำความสะอาดถอดรองน้ำสัปดาห์ละครั้ง
	ไม่ใช้เป็นเวลานาน	เมื่อไม่ได้ใช้งานเป็นเวลานาน เพื่อสุขอนามัย ให้จ่ายน้ำเย็น/น้ำร้อนประมาณ 2-3 นาที จ่ายน้ำอุณหภูมิห้องประมาณ 30 วินาทีเพื่อระบายน้ำทั้งหมดที่อยู่ภายใน
	ผลิตภัณฑ์	อย่าวางสิ่งของบนผลิตภัณฑ์ เนื่องจากมีความเสี่ยงที่จะเกิดการปนเปื้อนหรือความเสียหายได้
ไส้กรอง	**ผลิตภัณฑ์ของแท้**	อย่าใช้ไส้กรองอื่น ที่ไม่ใช้ไส้กรองของแท้จาก Coway
	การเปลี่ยน	โปรดอย่าลืมเปลี่ยนไส้กรองภายในรอบการเปลี่ยนไส้กรองอย่างเหมาะสม
การจัดการ	**ตรวจสอบ**	เพื่อการจัดการน้ำสะอาด การรับบริการดูแลเครื่องกรองน้ำเป็นประจำเป็นสิ่งจำเป็น
	ผู้จัดการ	แจ้ง Coway Cody และช่างเทคนิคของ Coway เพื่อขอรับบริการจัดการดูแลผลิตภัณฑ์ • หากบุคคลที่ไม่ใช่ช่างมืออาชีพเป็นผู้ดูแลการเปลี่ยนชิ้นส่วนและการทำความสะอาดภายใน จะมีความเสี่ยงที่จะเกิดการรั่วไหล
	สภาพแวดล้อม	ควรดูแลให้พื้นที่รอบๆ เครื่องกรองน้ำสะอาดอยู่ตลอดเวลา • ตัวอย่าง: อย่าวางเครื่องไว้ข้างถังขยะ

2 การแก้ไขปัญหา

เครื่องกรองน้ำอาจทำงานผิดปกติเพราะผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น
หากท่านยังไม่สามารถแก้ปัญหาได้หลังจากตรวจสอบรายการต่อไปนี้ โปรดโทรติดต่อศูนย์บริการ Coway

ไม่มีน้ำออกมา

01. ไม่มีน้ำอุณหภูมิห้อง น้ำเย็น หรือน้ำร้อนออกมา

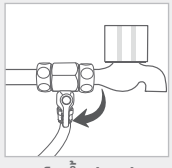ปลั๊กไฟ	ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V - 240 V~, 50 Hz
การระงับแหล่งจ่ายน้ำ	ตรวจดูว่าน้ำประปาที่ต่อกับเครื่องกรองน้ำนั้นไหลตามปกติ
วาล์วน้ำประปา	ตรวจสอบว่าวาล์วน้ำประปาเปิดอยู่หรือไม่ วาล์วน้ำประปามักอยู่ใต้อ่าง และโปรดดูรูปภาพด้านล่างเพื่อดูสถานะเปิดของวาล์วน้ำประปา  • วาล์วน้ำประปา
ท่อพับ	หากท่อพับอยู่น้ำอาจไม่ไหลออกมาในขณะที่ท่อถูกพับหรือปริมาณน้ำอาจแตกต่างกันไป โปรดปรับท่อให้ตรงขึ้น
การเปลี่ยนไส้กรอง	หากไม่เปลี่ยนไส้กรองตามกำหนดเวลา อาจไม่มีน้ำจ่ายออกมาหรือปริมาณน้ำที่จ่ายออกมาอาจลดลง โปรดอย่าลืมเปลี่ยนไส้กรองภายในรอบการเปลี่ยนไส้กรอง

02. ไม่มีน้ำร้อนออกมา

การตั้งค่าการล็อกน้ำร้อน	ตรวจดูว่าผลิตภัณฑ์อยู่ในโหมดล็อกน้ำร้อน หากพบว่าล็อกอยู่ ให้ปลดล็อก หากมีเครื่องหมายล็อกอยู่ถัดจากตัวชี้บอกน้ำร้อน ( ) หรือหากตัวชี้บอกน้ำร้อนเปิดอยู่ หมายความว่าการจ่ายน้ำร้อนถูกล็อกอยู่ (ปิดใช้งาน)

น้ำไหลช้าลง

01. น้ำไหลช้าลง

ปริมาณน้ำที่ใช้	หากอัตราแรงดันและการไหลของน้ำต่ำ จะส่งผลให้การจ่ายน้ำไม่เพียงพอ ในกรณีดังกล่าง โปรดตรวจสอบสภาพการติดตั้ง

อุณหภูมิน้ำไม่ถูกต้อง

01. น้ำเย็นไม่เย็น

ปริมาณน้ำเย็นในการใช้งานแต่ละครั้ง	เมื่อจ่ายน้ำเย็นปริมาณมากในคราวเดียว น้ำเย็นอาจเย็นน้อยลง โปรดใช้งานในอีกสักพัก
ฟังก์ชันน้ำเย็นปิดอยู่	หากตัวชี้บอกน้ำเย็น (✳) ปิดอยู่ หมายความว่าฟีเจอร์น้ำเย็นปิดอยู่ กดปุ่มน้ำเย็นค้างไว้เพื่อเปิดฟีเจอร์นี้ (สำหรับรุ่นที่มีปุ่มตั้งค่า) ให้กดปุ่มปิดน้ำเย็นในการตั้งค่าเพื่อเปิดฟีเจอร์นี้
ระยะห่างจากผนัง	ในการทำน้ำเย็น ความร้อนที่เกิดขึ้นจากภายในจะต้องระบายออกไปข้างนอกเพื่อทำน้ำเย็น โปรดรักษาระยะห่างระหว่างผลิตภัณฑ์และผนัง เพื่อให้ความร้อนภายในผลิตภัณฑ์สามารถระบายออกได้อย่างสะดวก
การตั้งค่าโหมด Eco	เมื่อตั้งค่าโหมด Eco น้ำเย็นอาจเย็นน้อยลง ปรับการตั้งค่า ถ้าจำเป็น

02. น้ำร้อนไม่ร้อน

ปริมาณน้ำร้อนในการใช้งานแต่ละครั้ง	หากมีการจ่ายน้ำปริมาณมากในครั้งเดียว น้ำร้อนอาจจะยังไม่ร้อนเพียงพอ ผลิตภัณฑ์รุ่นนี้เป็นชนิดถังทำความร้อน จึงต้องใช้เวลาในการทำน้ำร้อนอีกครั้ง ระยะเวลาเตรียมน้ำร้อนนั้นอาจแตกต่างกันไปโดยขึ้นอยู่กับอุณหภูมิของสภาพแวดล้อม
ฟังก์ชันน้ำร้อนปิดอยู่	หากตัวชี้บอกน้ำร้อน (⟆⟆⟆) ปิดอยู่ หมายความว่าฟีเจอร์น้ำร้อนปิดอยู่ กดปุ่มน้ำร้อนค้างไว้เพื่อเปิดฟีเจอร์นี้
กำลังเตรียมน้ำร้อน	ผลิตภัณฑ์รุ่นนี้เป็นชนิดถังทำความร้อน จึงต้องใช้เวลาในการทำน้ำร้อน ระยะเวลาเตรียมน้ำร้อนนั้นอาจแตกต่างกันไปโดยขึ้นอยู่กับอุณหภูมิของสภาพแวดล้อม
การตั้งค่าโหมด Eco	เมื่อตั้งค่าโหมด Eco น้ำร้อนอาจร้อนน้อยลง ปรับการตั้งค่า ถ้าจำเป็น

2 การแก้ไขปัญหา

เครื่องกรองน้ำอาจทำงานผิดปกติเพราะผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น
หากท่านยังไม่สามารถแก้ปัญหาได้หลังจากตรวจสอบรายการต่อไปนี้ โปรดโทรติดต่อศูนย์บริการ Coway

มีเสียงดังมาก

01. เครื่องมีเสียงแปลกๆ

ระดับการเอียง	หากติดตั้งเครื่องกรองน้ำบนพื้นที่ไม่แข็งแรงและไม่เรียบ อาจทำให้เกิดเสียงดังได้ ติดตั้งผลิตภัณฑ์นี้บนพื้นเรียบและได้ระดับ
ระยะห่างจากผนัง	ติดตั้งเครื่องกรองน้ำให้ห่างจากผนังด้านหลังและด้านข้างอย่างน้อย 10 ซ.ม.
ตรวจสอบสภาพแวดล้อม	หากมีสิ่งของวางอยู่ด้านหลังหรือบนเครื่องกรองน้ำ อาจทำให้เกิดเสียงดังได้ ในนำสิ่งของออกห่างก่อนการใช้งาน

02. ข้างในผลิตภัณฑ์มีเสียงดังมาก

อุปกรณ์ทำความเย็นล้มเหลว	อาจมีเสียงฮัมในขณะที่อุปกรณ์ทำความเย็นกำลังทำงาน นี่คือเสียงการทำงานของอุปกรณ์ทำความเย็นในการทำให้น้ำเย็น การใช้น้ำเย็นบ่อยครั้งหรืออุณหภูมิภายนอกสูงอาจเพิ่มจำนวนครั้งในการทำงานของอุปกรณ์ทำความเย็น เสียงนี้เป็นเสียงปกติ ดังนั้นท่านไม่จำเป็นต้องกังวลเกี่ยวกับมัน
การระบายน้ำที่ไม่ได้ใช้งาน	เมื่อไม่ใช้งาน เครื่องจะรักษาสุขอนามัยโดยการระบายน้ำโดยอัตโนมัติเป็นประจำ ขณะระบายน้ำอัตโนมัติ อาจเกิดเสียงดังขณะระบายน้ำ ซึ่งไม่ใช่การทำงานผิดปกติ
เสียงการล้าง	เมื่อติดตั้งเครื่องใช้หรือเปลี่ยนไส้กรอง การล้างไส้กรองจะทำงาน ในระหว่างนั้น อาจเกิดเสียงดังเพื่อไล่อากาศออกจากภายใน ซึ่งไม่ใช่การทำงานผิดปกติ

น้ำมีรสชาติแปลกๆ และมีสิ่งแปลกอยู่ปนอยู่

01. น้ำมีรสชาติแปลกๆ

การเปลี่ยนไส้กรอง	หากท่านใช้ ไส้กรองเดิมนานเกินไป อาจจะทำให้ประสิทธิภาพการทำงานของไส้กรองลดลง โปรดอย่าลืมเปลี่ยนไส้กรองภายในรอบการเปลี่ยนไส้กรอง
ไม่ได้ใช้งานเป็นเวลานาน	เมื่อไม่ได้ใช้งานเป็นเวลานาน เพื่อสุขอนามัย ให้จ่ายน้ำเย็น/น้ำร้อนประมาณ 2-3 นาที จ่ายน้ำอุณหภูมิห้องประมาณ 30 วินาทีเพื่อระบายน้ำทั้งหมดที่อยู่ภายใน

หากมีฝ้าน้ำ (น้ำค้าง) ที่ภายใน (ภายนอก) ผลิตภัณฑ์

01. หากมีฝ้าน้ำ (น้ำค้าง) ที่ภายใน (ภายนอก) ผลิตภัณฑ์

ตรวจสอบสภาพแวดล้อม	หากสถานที่ติดตั้งมีความชื้นสูงหรืออยู่ในช่วงฤดูพายุฝนหรือวันฝนตก อาจมีฝ้าน้ำจับที่ภายในหรือภายนอกของผลิตภัณฑ์ เช็ดออกด้วยผ้าแห้ง

3 ข้อมูลจำเพาะ

ชื่อรายการ	เครื่องกรองน้ำ	
ชื่อผลิตภัณฑ์	NEON	
ชื่อรุ่น	CHP-6210N_WT, CHP-6210N_GR	
ประเภทการกรอง	ไส้กรอง Coway Nanotrap™	
อัตราแรงดันไฟฟ้า	220 V - 240 V~, 50 Hz	
การใช้พลังงาน	น้ำเย็น: 0.7 A, น้ำร้อน: 260 W - 310 W, รวม: 350 W - 410 W	
ปริมาณความจุของถังเก็บน้ำ	น้ำเย็น: 1.5 ล., น้ำร้อน: 1 ล., รวม: 2.5 ล. (น้ำอุณหภูมิห้อง: ประเภทกรองน้ำโดยตรง)	
วัสดุไส้กรอง	ไส้กรอง Coway Nanotrap™	ไส้กรอง Plus inno-sense: ไส้กรองก้อนคาร์บอน, ผ้าไม่ได้ถักทอ
ขนาดผลิตภัณฑ์	195 มม. (ก) X 450 มม. (ล) X 405 มม. (ส)	
อุณหภูมิน้ำประปา	5 °C - 35 °C	
อุณหภูมิการทำงาน	5 °C - 35 °C	
แรงดันน้ำประปา	138 kPa - 827 kPa (20 psi ~ 120 psi) ปริมาตรการไหลขั้นต่ำของน้ำประปา 3.0 ลิตร/นาที	
สารทำความเย็น	R-600a	
น้ำหนักผลิตภัณฑ์	15 กก.	

- สำหรับเครื่องกรองน้ำจ่ายน้ำโดยตรง ขนาดถังเก็บน้ำไม่ส่งผลกระทบต่อปริมาณการจ่ายน้ำ
- สำหรับเครื่องกรองน้ำจ่ายน้ำโดยตรง ปริมาณการจ่ายน้ำอาจลดลงเมื่อแรงดันน้ำและการไหลของน้ำลดลง ดังนั้นโปรดปฏิบัติตามคำแนะนำในการติดตั้ง
- การออกแบบและข้อมูลจำเพาะของผลิตภัณฑ์อาจเปลี่ยนแปลงโดยไม่การแจ้งให้ทราบล่วงหน้า เพื่อปรับปรุงคุณภาพของผลิตภัณฑ์ และเพื่อปฏิบัติตามกฎหมาย

4 การรับประกัน

- โปรดอ้างอิงแบบฟอร์มใบสั่งขายเพื่ออ่านนโยบายพื้นฐานของเราในการรับประกันผลิตภัณฑ์ สำหรับข้อกำหนดเพิ่มเติมของการรับประกันผลิตภัณฑ์ โปรดเยี่ยมชมเว็บไซต์ของเรา โปรดทราบว่าข้อกำหนดการรับประกัน ผลิตภัณฑ์ของเรานั้นอาจมีการเปลี่ยนแปลงเพื่อปฏิบัติตามกฎหมายและกฎระเบียบที่เกี่ยวข้องของประเทศไทย
- https://www.coway.co.th/th/terms-of-conditions

ประเทศไทย
ที่อยู่: บริษัท โคเวย์ (ประเทศไทย) จำกัด 1818 อาคารรสา ทู ชั้นที่ 14 ถนนเพชรบุรี แขวงมักกะสัน เขตราชเทวี กรุงเทพมหานคร 10400 คอลเซ็นเตอร์ : 1421

DEAR CUSTOMERS

Thank you for using Coway water purifier.

Please read this User Manual carefully for correct use and maintenance of the product.

You can refer to the User Manual to troubleshoot for product issues while using it.

Please keep this User Manual in a safe place as it includes the product warranty.

I. For Information

1. Features 3
2. Safety information 4
3. Part names and accessories 10
4. Use of accessories and precautions 13
5. How to install 14
6. Checks before use 16

II. How to Use

1. Buttons and indicators 17
2. How to use 23
3. System settings 24


III. Maintenance

1. How to clean 27
2. Filter replacement 30

IV. Others

1. Correct usage guide 33
2. Troubleshooting 35
3. Specification 39
4. Warranty 40


1 Features

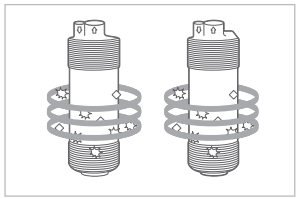

Direct water purification system


Coway Nanotrap™ filter removes microorganisms, bacteria and virus.

Plus Inno-Sense filter (D) removes odor-causing substances (D) to improve water taste.

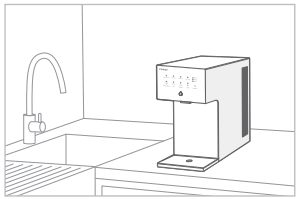


Simple & Compact design

The slim design makes it easy to use even in small spaces.

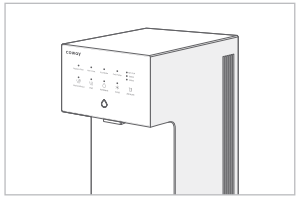


LED indicators

Through the LED display on the control panel & indicator, you can check the operating status of the product.

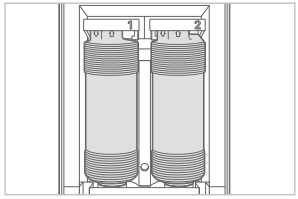

Easy filter replacement

You may easily change two filters simultaneously at home.

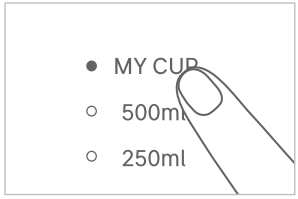

MY CUP mode

You can set the frequently used dispensing amount.

2 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the product correctly.

Danger

Death or serious injury may occur if the instruction is not followed.



Power

Electric shock/fire

- Do not use a damaged or loose outlet.
- Make sure to connect the power plug to a grounded 220 V - 240 V~, 50 Hz outlet.
- Do not pull on the power adapter to move the product.
- Do not touch the power adapter with wet hands.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Connect to potable water supply only.
- Do not connect and disconnect the power adapter repeatedly.
- If water got into the power supply section, then disconnect the power adapter and completely dry it before use.
- Make sure the product is unplugged while the product is being repaired, inspected, or when its parts are being replaced
- If there is any dust or water on the power plug's pins and contact area, wipe them off completely.
- Do not connect multiple products to one power outlet. Use a separate socket for the product.
- If you don’t use it for a long time, then disconnect the power adapter.
- Do not arbitrarily connect or modify the power adapter.
- If the power plug is damaged, do not attempt to replace the adapter. Instead, contact the Coway Service center to replace it.

2 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the product correctly.

Danger Death or serious injury may occur if the instruction is not followed.



Installation

Fire	• Do not install the product close to any heat sources.
Electric shock/fire	• Connect the tap water to the inlet pipe. Connecting to the drain pipe may cause malfunction or accidents.
Damage/injury	• Do not apply excessive force or impact to the product. There is risk of bodily harm and product damage.



Use

Electric shock/fire	• Please lock the tap water valve and disconnect the power plug and contact the Coway Service center if there is water leakage from inside the product or if water is puddling around the product.
Electric shock	• If the product produces a strange noise, burning smell, or smoke, immediately unplug it from the electrical outlet and call the Coway Service center.
Fire/performance decline	• Do not place a bowl filled with water, medicine, food, metallic objects, or any flammable materials on the product. Do not clean by spraying water and do not wipe the product using benzene or other thinners.
Electric shock/ damage	• Do not place candles or cigarettes on top of the product.



Others

Electric shock/fire
Electric shock/ damage

- Unplug the power adapter before cleaning.
- Do not open, repair, or remodel the product.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Refrigerant

- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- The refrigerant used in this product is isobutane, which is a combustible natural gas.
  For your safety, contact your local community center before throwing away to safely dispose of this product.
- Do not damage pipes, etc. while disposing of this product.
- Refrigerant leakage from the refrigerant pipe (tube) may cause a fire hazard or personal injury, so move away flames or flammable materials for ventilation.

2 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the product correctly.

Warning

Severe injury or property damage may occur.

Installation

Damage/breakage
Electric shock/fire

- This appliance is intended to be used in household and similar applications such as
  → staff kitchen areas in shops, offices and other working environments;
  → farm houses and by clients in hotels, motels and other residential type environments;
  → bed and breakfast type environments;
  → catering and similar non-retail applications.

Use

Injury

- The refrigerant used in this product is isobutane, which is a combustible natural gas. For your safety, contact your local community center before throwing away to safely dispose of this product.
- Do not damage pipes, etc. while disposing of this product.



The mark on this product is a caution mark for fire hazard/flammable substances.

Caution

Minor injury or property damage may occur.



Use

Burns

- Hot water is very hot, so avoid a direct contact with your body.

Breakdown/injury

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance.

Others

- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the product correctly.

Caution Minor injury or property damage may occur.



Management

Malfunction


- You must use the new hose set provided with this product.
- Do not reuse old hose-sets.

Malfunction/fire

- This device uses a flammable refrigerant, so keep the blower hole clean and the exterior of the product clean for an encased structure.
- Refrigerant leakage from the refrigerant pipe (tube) may cause a fire hazard or personal injury, so move away flames or flammable materials for ventilation.
- Close the water tank cover inside completely before use.
- Do not use electrical appliances inside the storage unit unless they are of the type recommended by the manufacturer.

3 Part names and accessories

Front/Rear

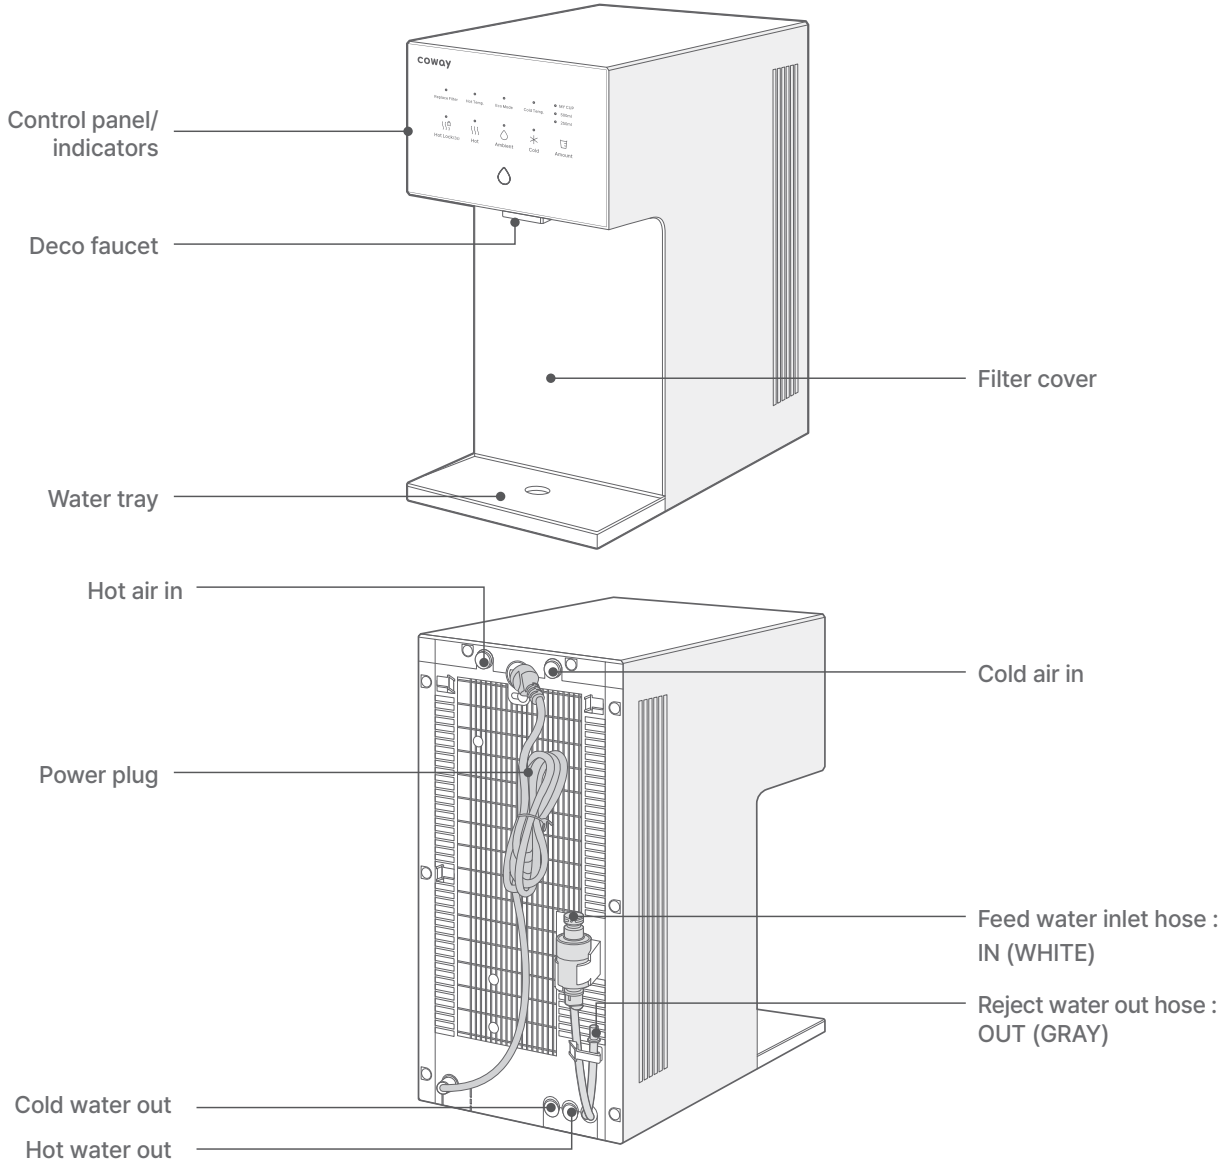


3 Part names and accessories

Accessories



User manual




Distance maintenance rod



Locking clip (1/4", 5 EA)



Fitting elbow



Tubing-twin covering




Cable tie



Extension faucet


Inside the body

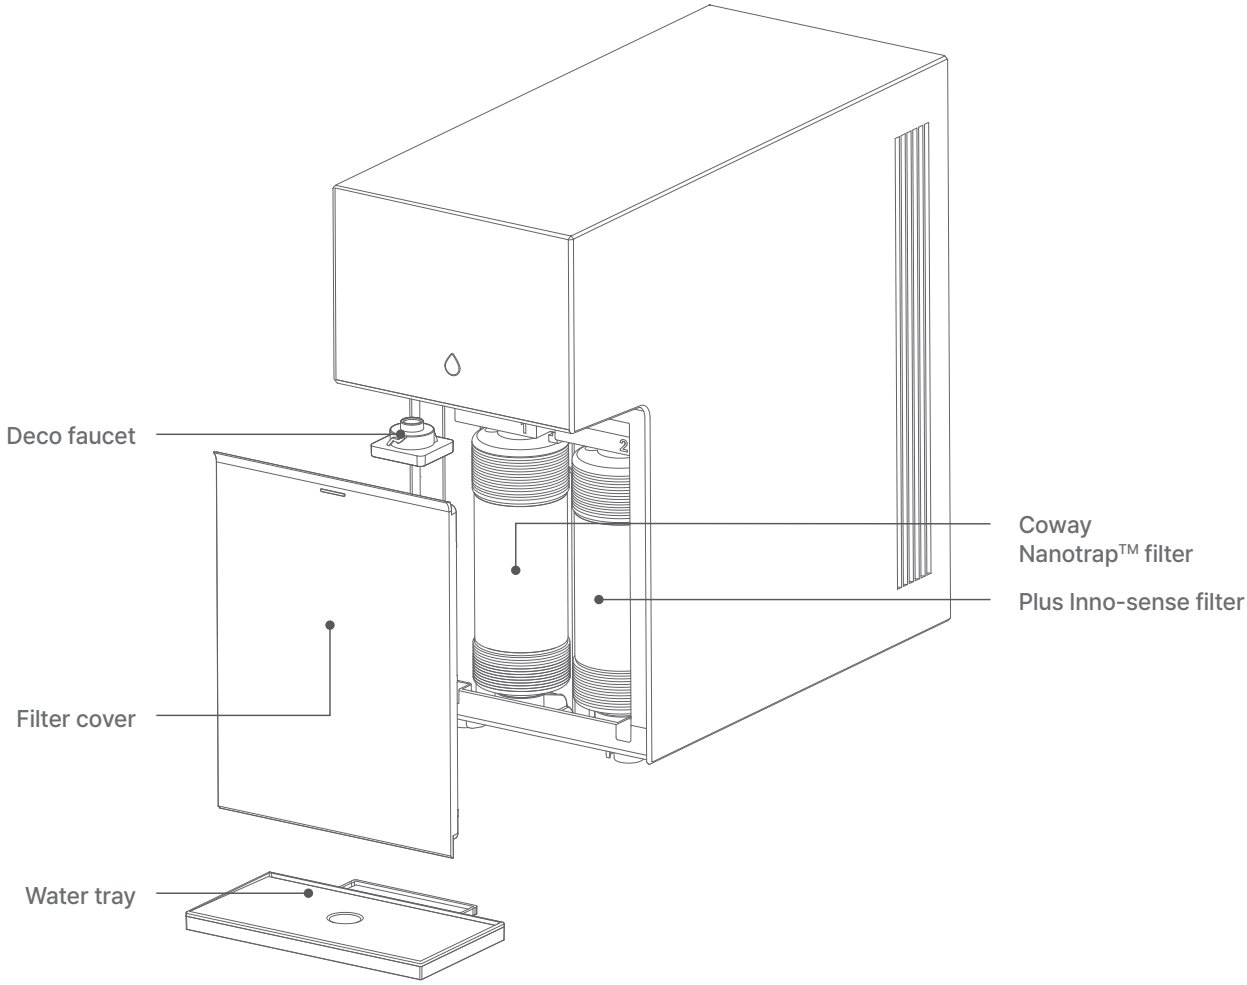


- Tools for cleaning the product and for filter replacement are not provided along with the product.
- Product servicing by specialists is provided to customers who registered for rental and membership.

4 Use of accessories and precautions

Distance Maintenance Rod

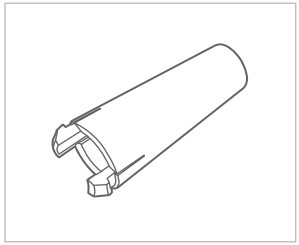

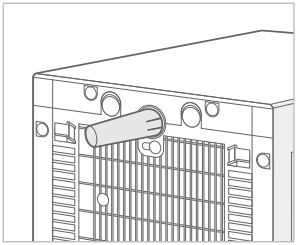

Mount the distance maintenance rod on the back of the product to secure a space between the product and the wall.


Make sure to keep a distance of about 10 cm between the wall and the product in order to dissipate the heat from the heat sink on the back of the product.


How to use the Extension Faucet


When dispensing hot water in low water pressure and low water flow, water splashing may occur.

You can use the extension faucet to minimize water splashing.

Insert the Extended Faucet completely into the tip of the faucet and secure it in place.

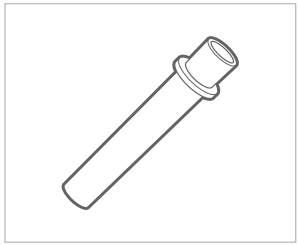

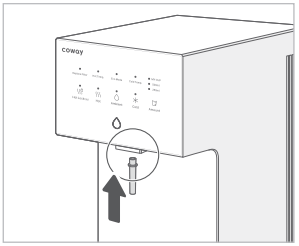

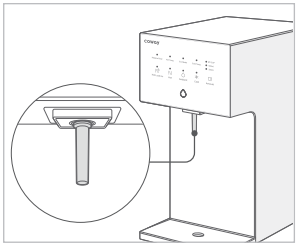

5 How to install

Check before installation

- Install the product in a cool part of the room, on an even surface, out of direct sunlight and away from humidity, dust, and dripping water.
- When installing the water purifier, keep the radiator grill at the rear of the product at least 10cm away from the wall and make sure the floor is firm and flat.
- Turn off power for about 30 minutes before changing to a new location.

- Some residual water used during post-manufacturing inspection may be present in the filter. Do not be alarmed as it is not a used product.
- When installing this new filtration unit, do not reuse the main water supply valve and hose.
- Please consult our technician for more details on installation to guarantee the optimal performance of the product. Coway Service center: 1421

Install it as follows

1 Connect the tap water supply adapter to the water valve.

- Connect it to cold water pipe. If connected to the hot water tubing, the filters can get damaged.

2 Install inlet and drain lines on the body.


- White tubing on back of the body - inlet line, gray tubing - drain line

3 Connect the power plug of the main body.

4 When the appliance is powered on for the first time, flushing is performed. (Flushing takes up to 11 minutes.)

- Avoid installing the water purifier in an area with uneven surface, extreme humidity, extreme light exposure, extreme dust exposure, and water exposure, etc.
- Keep the radiator grille at the rear of the product at least 10 cm away from the wall and make sure that the installation floor is firm.
- Make sure to connect it to the cold water tubing. (If connected to the hot water tubing, the filters can get damaged.)
- This is a natural sound of residual air and incoming water inside the product and filter escaping, which disappears after the initial flushing is completed. (It is not a product malfunction.)

5 How to install

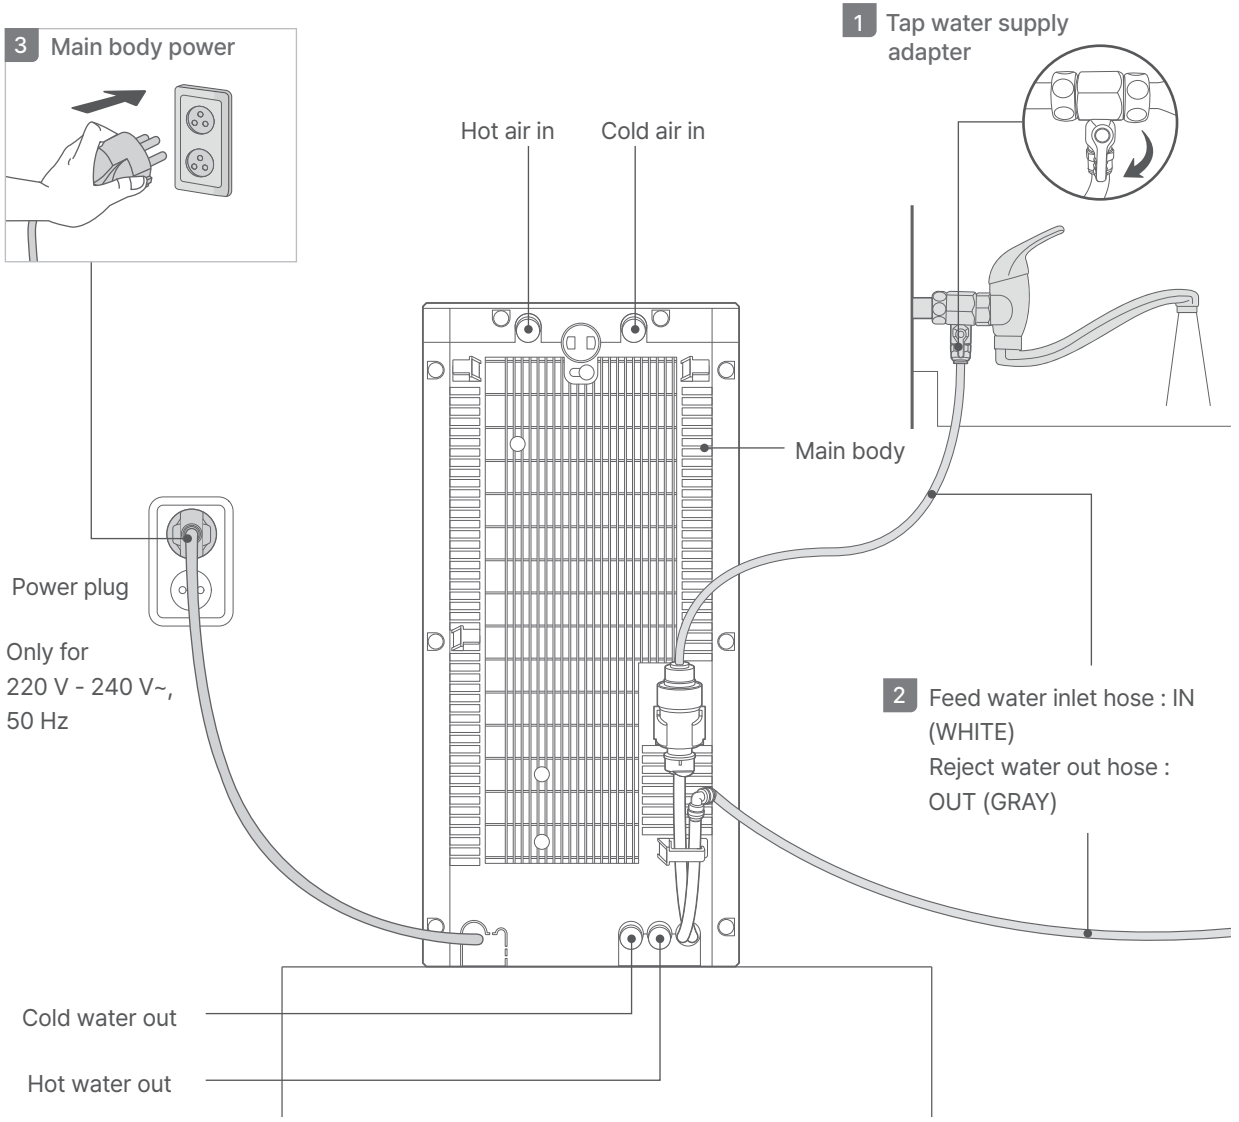

∗ Tap water pressure conditions : 138 kPa - 827 kPa

6 Checks before use

This product is for 220 V - 240 V~, 50 Hz.

Make sure to connect the power adapter to a grounded 220 V - 240 V~, 50 Hz outlet.
It requires a power supply to operate.

Open the tap water supply valve

The water purifier can work properly only when the tap water is supplied.

When the indicator on the display is off, check the power supply.

When the indicator in the indication part is turned off, check if the power supply was shut off due to power failure or other causes.

Replace the filter regularly.

Regular replacement of filter is critical in ensuring clean water quality.
If the filter is used beyond its service life, the performance of the water filtration device will deteriorate. Take note of the filter replacement cycle.

When installing for the first time, perform filter flushing.

When the power is connected, the front screen changes to a flushing standby screen.
At this time, dispensing button is pressed, flushing begins. It takes up to 11 minutes.
When ambient flushing, which is the initial stage of flushing, water is dispensed with an dispensing faucet, so prepare a tool that is 3L or larger.

If you do not want to use it for a long time, please disconnect the power.


Close the tap water supply valve and unplug the power cord.

When not used for a long time, for hygiene, dispense cold water/hot water for about 2~3 minutes, ambient water for about 30 seconds to drain all the water inside.

When not used for a long time, for hygiene, dispense cold water/hot water for about 2~3 minutes, ambient water for about 30 seconds to drain all the water inside.

1 Buttons and indicators


Indicators

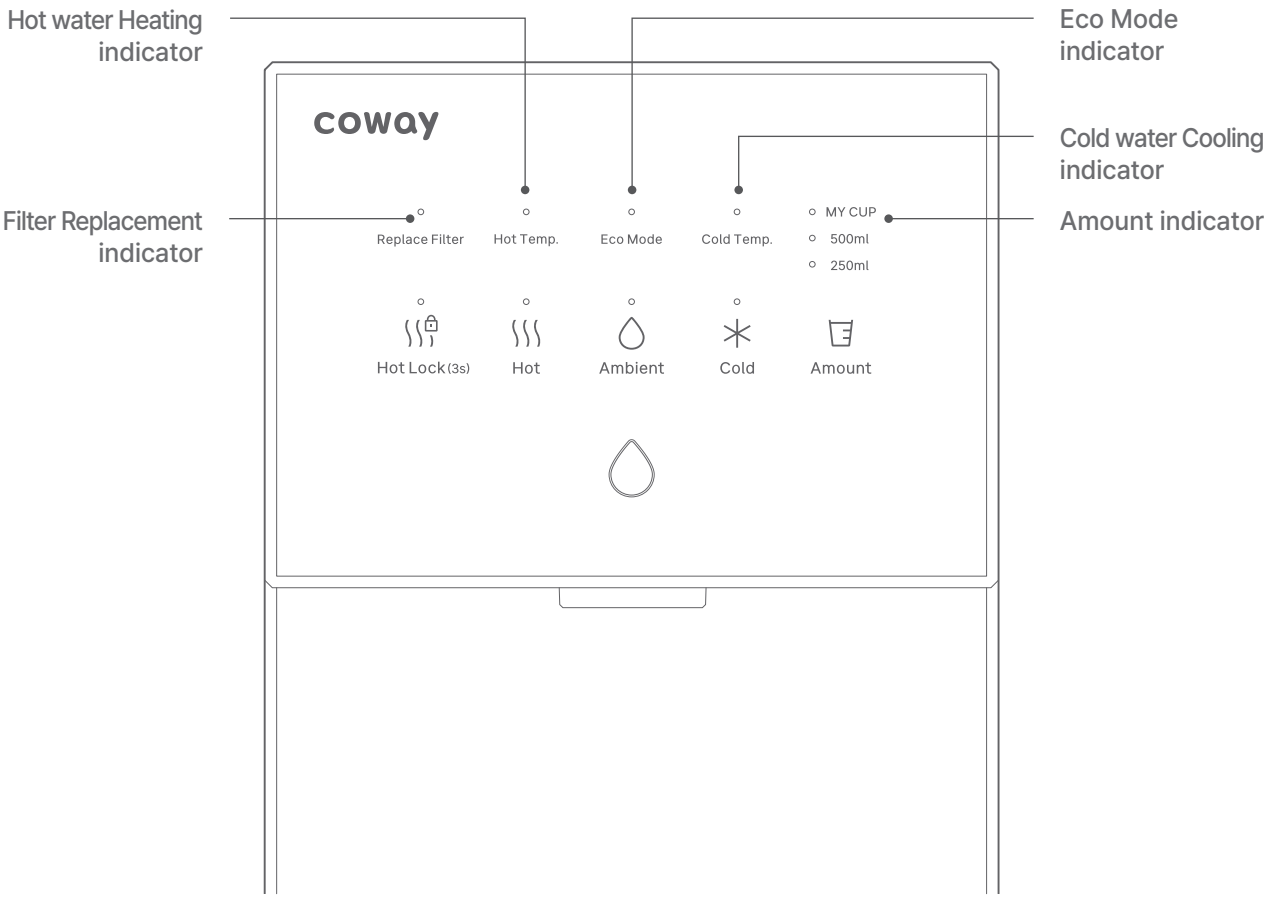

Status notification icon


The following status notifications are displayed on the front top display of the product:

- Status notifications are not displayed when an error is reported.



Filter Replacement indicator

The indicator turns on or blinks when the filter replacement cycle arrives. (Self-care Settings only)




Hot water Heating indicator

The indicator turns on based on the current hot water temperature.

- Hot water (weak): WHITE LED
- Hot water (strong): RED LED

(If the hot water function is turned off, the indicator is turned off.)



Eco Mode indicator

The indicator turns on when setting Eco Mode.



Cold water Cooling indicator

The indicator turns on based on the current cold water temperature.

- Cold water (weak): WHITE LED
- Cold water (strong): BLUE LED

(If the cold water function is turned off, the indicator is turned off.)



Amount indicator


It displays the units of dispensing amount(ml).

Before My Cup is set, it is displayed as 250 ml → 500 ml →250 ml.


Once My Cup is set, it will be displayed as 250 ml → 500 ml →MY CUP → 250 ml.

1 Buttons and indicators

Buttons

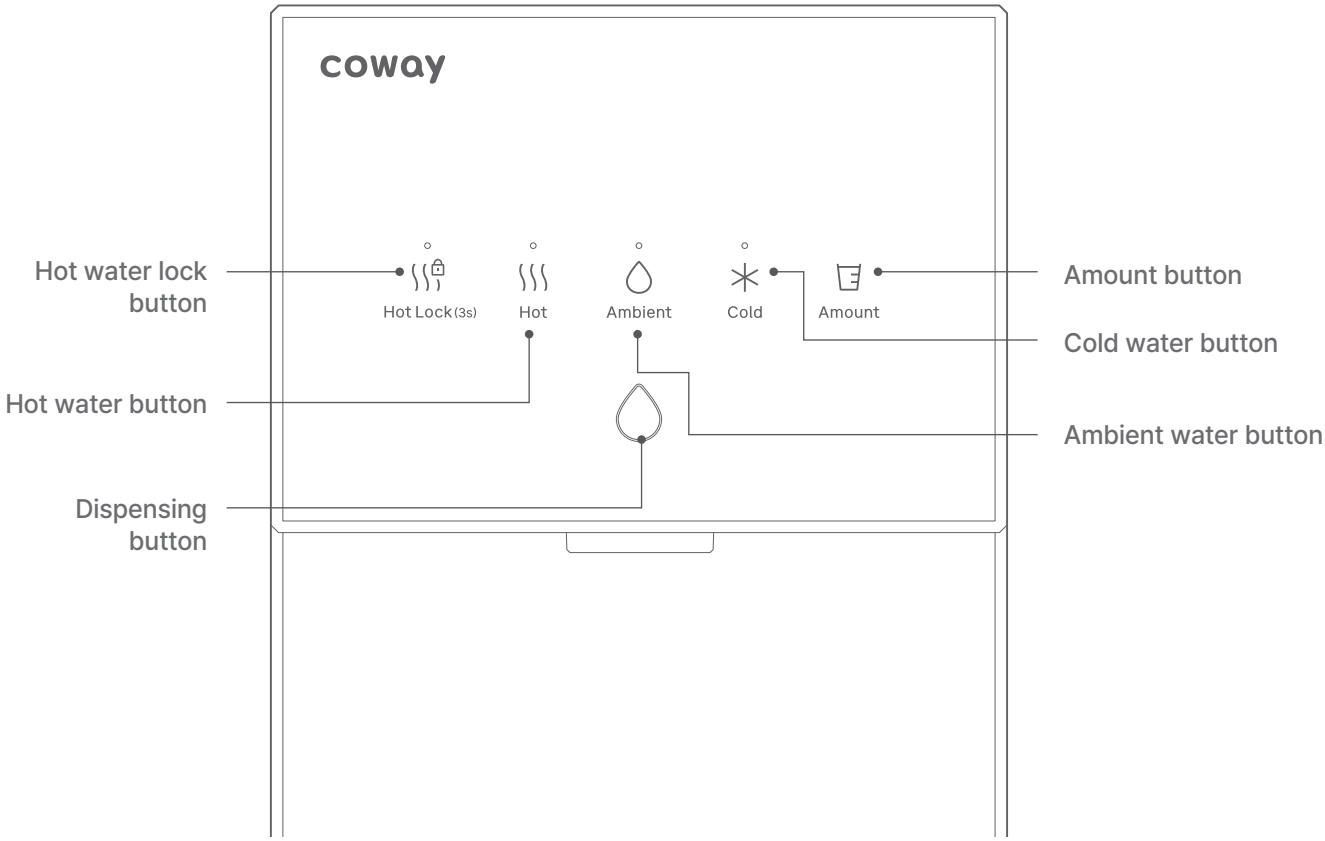

Buttons



Hot water lock button

Press and hold for 3 seconds to lock or unlock the hot lock.



Hot water button

Touch it when you want to dispense hot water.




Ambient water button

Touch it when you want to dispense Ambient water.



Cold water button

Touch it when you want to dispense Cold water.



Amount button

Touch it to select desired dispensing amount.

* 3 options (250 ml, 500 ml, MY CUP)
  (If MY CUP is not set, 250 ml and 500 ml)
* The amount of extracted water may differ depending on the use environment.




Dispensing button

Press the button to dispense, press it again to stop dispensing.


1 Buttons and indicators

Main function

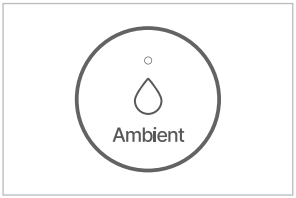

Ambient water function


Press the ambient water button and check that the ambient water indicator on the display is on.

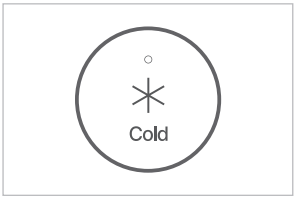

Cold water function

Press the cold water button and check that the cold water indicator on the display is on.

- Cold water temperature indicator is on as the cold water mode is on.
- If you are using the product for the first time or did not use cold water dispensing for a while, it takes about 1 hour to dispense adequate temperature of cold water.
- The initial status is ON.
- To turn on the function, press the cold water button for more than 3 seconds.
- To turn off the function, press the cold water, ambient water, and fixed amount buttons simultaneously for more than 3 seconds.

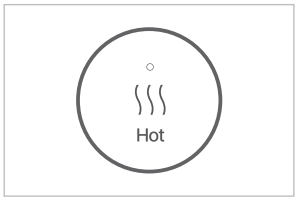

Hot water function

Press the hot water button and check that the hot water indicator on the display is on.

- Hot water temperature indicator is on as the hot water mode is on.
- If you are using the product for the first time or did not use hot water dispensing for a while, it takes about 30 minutes to dispense adequate temperature of hot water.
- The initial status is ON.
- To turn on the function, press the hot water button for more than 3 seconds.
- To turn off the hot water function, press the hot water, ambient water, and amount buttons simultaneously for more than 3 seconds.
- When dispensing for the first time, there may be a little standby for fixed amount dispensing, which is normal.

- If cold water is not being extracted, please check to see whether the cold water indicator on the display unit is turned on.
- When extracting hot water, pay special attention to avoid possible burns.
- When extracting hot water, keep the cup close to the faucet as the water may splash.
- If you hear warning sounds and look toggle Hot Lock button indicator with no hot water, check the hot lock function.
- When hot water is extracted, white debris (lime) may occur depending on the conditions of use.
  If you find a white foreign substance, please contact Coway Service center at 1421 for service.
  * White foreign substance is lime, which is produced by heating of the minerals in water.
- When not using hot water for a long time, turn off the hot water function by press Hot water button + Ambient water button + Amount button for more than 3 seconds.
- When the ECO Mode is set, the temperatures of cold water and hot water are automatically adjusted.
  (Water may be less hot or less cold, which is not a malfunction of the appliance or performance degradation.)
- There is a risk of burns if the hot water drain plug is removed while the hot water is heated.
- If there is significant water splashing, please use the Extension faucet.
  Besides, please check if the drainage pipe is clogged.

2 How to use

To get water

01. Select your desired water temperature.

Ambient water mode is set by default in standby time.



Ambient water: Press the ambient water button




Cold water : Press the cold water button





Hot water : Press the hot water button


02. Select the desired dispensing amount.

You can select in the order of approx. 250 ml, approx. 500 ml, and My Cup (User customized amount).

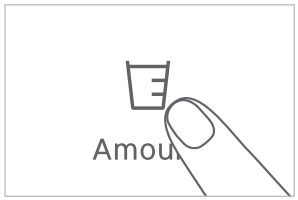

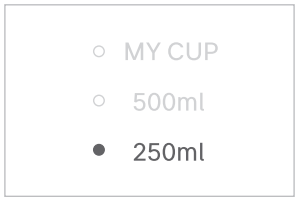


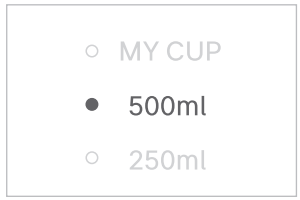

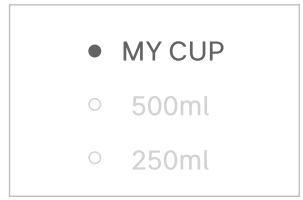

* When the MY CUP function is not set, it defaults to 250 ml and 500 ml.

03. Press the dispensing button.

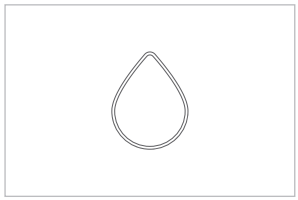


Press to dispense water and the water dispensing will stop once you press the button again.


* When pressing the button for 2 seconds, you can dispense continuously.

3 System settings

01. Hot water lock function

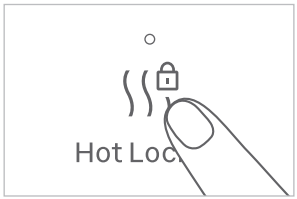


Press the [Hot Lock(🔒)] button for 3 seconds.

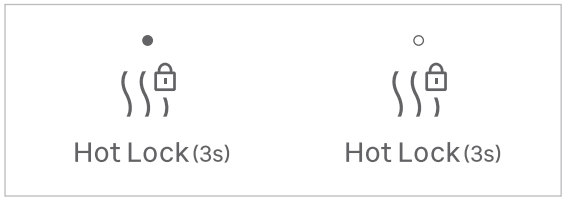

The hot water lock is activated or deactivated.


02. All Lock function

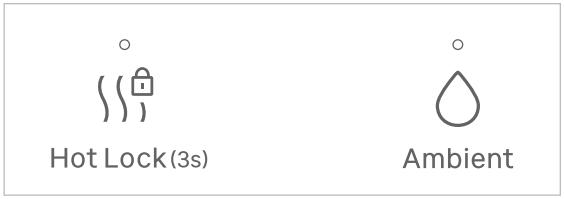


To enable or disable the button all lock function, press the Hot Lock and Ambient buttons for more than 3 seconds.
(It is convenient to use it when cleaning.)

3 System settings

03. My Cup function

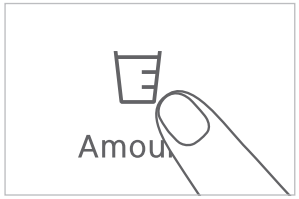

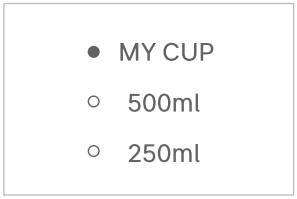

Press the amount button for more than 3 seconds.

* When performed while MY CUP is already set, the setting will be reset. Press the desired water type button.
* MY CUP mode only sets amount and is not related to the selected water type. Press the Extraction button to brew the desired amount of water and press the button again to stop.
* Adjustable volume range : 120 ml ~ 1000 ml.

- MY CUP mode only sets amount and is not related to the selected water type.
- You can set MY CUP between 120 ml and 1,000 ml. Any amount over 1,000 ml will default to 1,000 ml.
- When MY CUP is set, it is selected in the order of 250 ml, 500 ml, and MY CUP. (When it is not set or disabled, it is selected in the order of 250 ml, 500 ml, and 250 ml.)
- To disable MY CUP settings, press the amount button for more than 3 seconds.


04. Eco Mode function



You can save energy by lowering performance of cold water and hot water.
(When the ECO Mode is set, cold water is maintained less cold, and hot water less hot.)

- When the hot water button and ambient water button are pressed simultaneously for more than 3 seconds, the Eco Mode indicator is turned on and the function is set. (When pressing again for more than 3 seconds, the function is disabled and the indicator turns off.)

05. Silent function

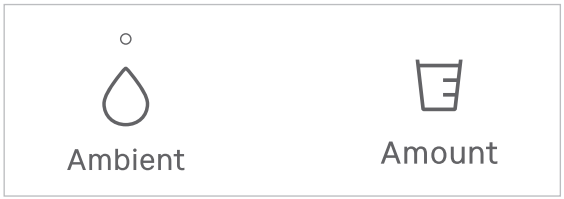

To use the Silent Function, press and hold both the ambient water and amount buttons simultaneously for more than 3 seconds. (Press them for more than 3 seconds again to disable the function.)

06. Auto Drain function

When not used for 24 hours, the system will drain the cold water tank for 30 seconds to ensure a supply of clean water.

1 How to clean


Main body



Recommended intervals: Every 2 - 4 weeks
Method: Use a dry and soft cloth to wipe it off. If the degree of contamination is severe, use a slightly wet cloth to wipe it.

- Do not spray water directly to the product.
- Do not use thinner, benzene or agent containing abrasives or rough cloths to clean it.


Water tray

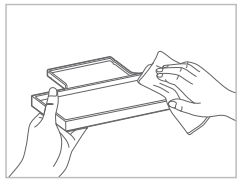


Recommended intervals: Every 2 - 4 weeks
Method: Use a dry and soft cloth to wipe it off. If the degree of contamination is severe, use a slightly wet cloth to wipe it.

- Do not turn off the power while working.

Deco faucet

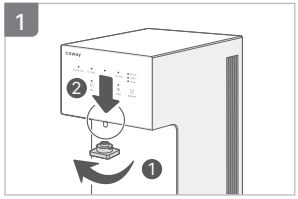


Detach the deco faucet by turning it clockwise.
* Remove deco faucet

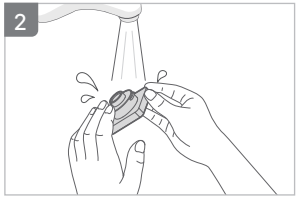

Rinse the deco faucet with water.




After rinsing, wipe the deco faucet with a soft, dry cloth.

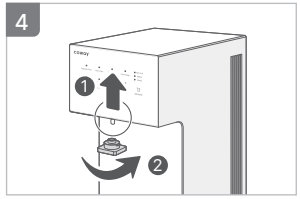


Attach the deco faucet back by turning it counter clockwise.

- Do not use chemicals or detergents.


How to drain the cold water tank

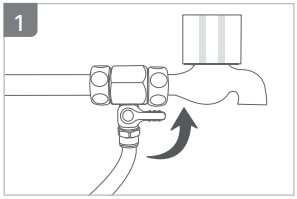


Close the tap water supply valve.

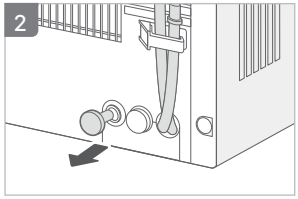


Removing the cap from COLD OUT on the back of the product.

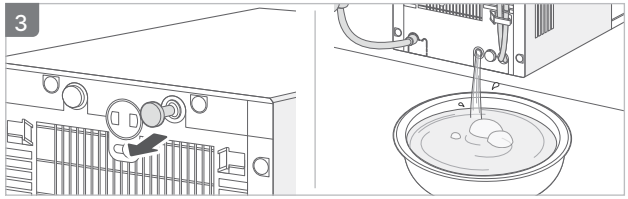


Removing the cap from COLD AIR IN on the back of the product.
(Since water comes out as soon as opening the upper Cold Air in tap, prepare a separate container in advance.)

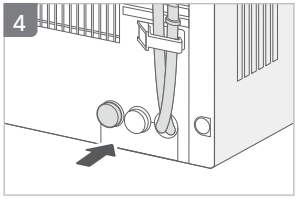

After drainage is complete, screw the cap back onto the COLD OUT.

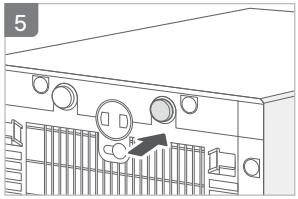


After drainage is complete, screw the cap back onto the COLD AIR IN.

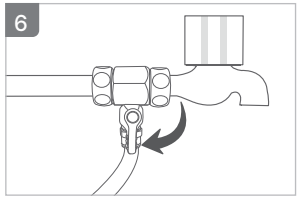


Open the tap water supply valve.

1 How to clean


How to drain the hot water tank

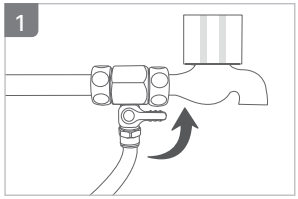


Close the tap water supply valve.

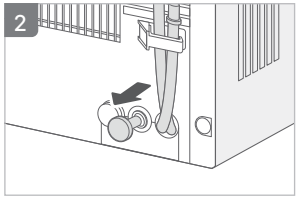


Removing the cap from HOT OUT on the back of the product.

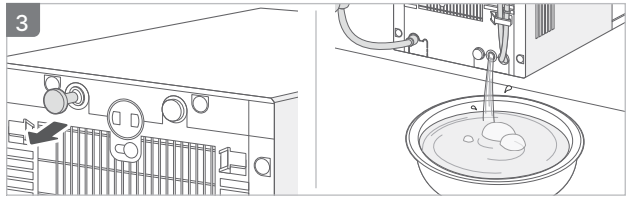


Removing the cap from HOT AIR IN on the back of the product.
(Since water comes out as soon as opening the upper Hot Air in tap, prepare a separate container in advance. When opening the upper Hot Air in tap first, hot water comes out first, which is dangerous. Be sure to conform to the order.)

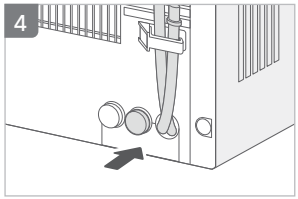

After drainage is complete, screw the cap back onto the HOT OUT.

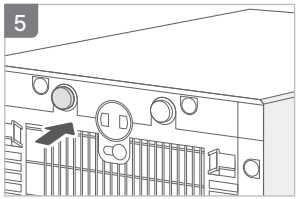

After drainage is complete, screw the cap back onto the HOT AIR IN.

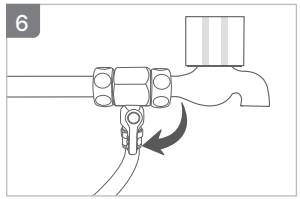


Open the tap water supply valve.

- When draining cold water and hot water, it is necessary to remove the lower 'COLD/HOT OUT' cap and then remove the upper 'COLD/HOT AIR IN' cap. (If the order is reversed, water is drained while removing the lower cap. For draining hot water, since there is a risk of burn, make sure to conform to the order and use it by connecting the switch valve to 'HOT OUT'.)
- When draining cold water and hot water is complete, all the removed caps must be assembled again. (If the appliance is used without the caps assembled, leakage occurs outside the water purifier, so be careful.)

2 Filter replacement

Water purification process

Coway manages drinking water with a 2-stage purification system.

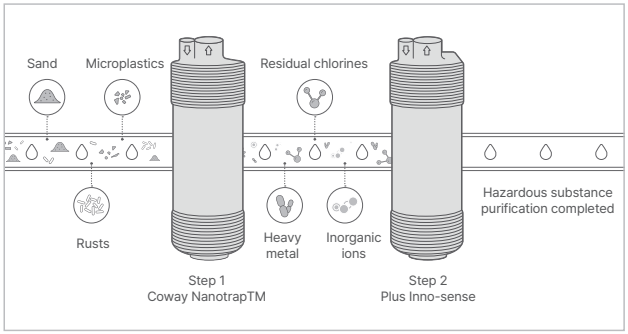

Stage 1 : Coway Nanotrap™ filter
Coway Nanotrap™ removes microorganisms such as suspended solids in tap water, particulate heavy metals (mercury, lead, iron, aluminum), bacteria (E.coli), and virus (norovirus).

Stage 2 : Plus Inno-Sense Filter (D)
Plus Inno-Sense filter improves the water taste by removing odor-causing substances, dissolved pollutants, residual chlorides, volatile organic compounds and other pollutant.

Filter replacement


If you use a non-authentic filter or a filter that has been used for too long, the overall performance of the water purifier may decrease so check it periodically.

Filter name	Expected replacement cycle
Coway Nanotrap™ filter	8 months
Plus Inno-sense filter	8 months


- If you boil purified water it can generate white precipitants.
  It is the effect of minerals in the water, not foreign substances.

2 Filter replacement


How to replace filter

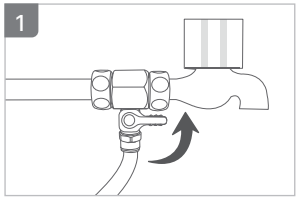


Close the tap water supply valve.

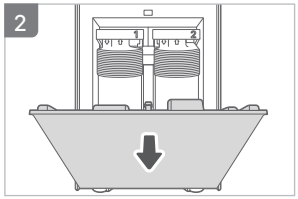


Press the top of the filter cover to remove it.

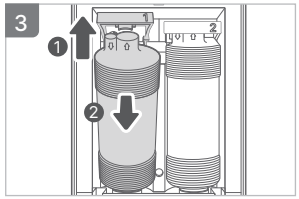


Lift the filter holder to remove the filter.

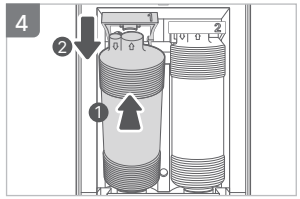


Insert a new filter from the bottom and insert it by fitting with the above hole. Press the filter holder to go all the way down.

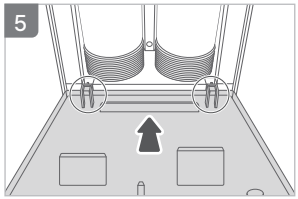

Insert the two lower hooks and lift the upper filter cover.

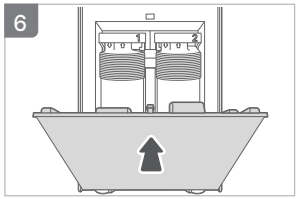

Press the cover to close it with a click sound, and it will secure in place.

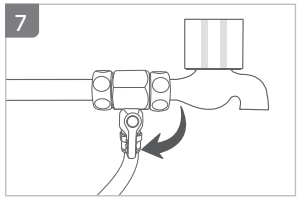

Open the tap water supply valve.




When the flushing starts, about 2 to 3 liters of purified water will be extracted from the outlet. Before flushing, place the large amount container under the spout.

9



The Replace Filter indicator blinks and the Cold LED turns on. Press the Dispensing button to start flushing. (To cancel filter flushing, press the Cold button for more than 3 seconds.)

10

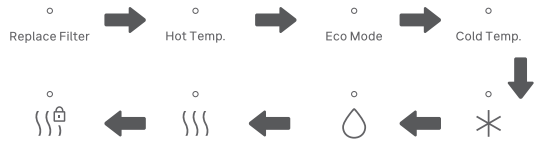

When flushing starts, the indicator LED is turned on in order.

- Flushing is performed in the order of ambient water → hot water → cold water for up to 11 minutes. When flushing ambient water, up to 2 liters of water may come out to the spout. Check if the container is prepared to receive water.(For hot water and cold water, flushing is performed in the drain flow path.)

The progress stage is displayed on the amount indicator on the right.

* Ambient water flushing in progress: 250 ml indicator turns on
* Hot water flushing in progress: 500 ml indicator turns on
* Cold water flushing in progress: My CUP indicator turns on


- To stop operation during flushing, press the dispensing button. (Press the dispensing button again to restart. At this time, flushing starts from the beginning for hygiene.) → Switches to the filter standby screen.
- During flushing, large noise occurs as air goes out from the inside, and this is a normal operation.

11



Flushing has been completed.
You may use it.



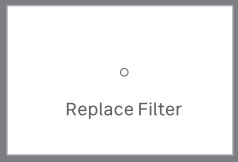

For this model, the self-service mode needs to be set.
* Press Hot Lock and Cold for more than 3 seconds.
* The Replace Filter indicator blinks when the filter needs to be replaced



- Expected filter replacement cycle can be properly estimated based on the faucet water quality.
- Filter replacement cycle may different depending on the amount used, region of use, season,and water quality.
- The effective water purification amount according to the product specifications means the minimal processing amount for pollutants without cleaning, recycling or replacing the inner filters of the water purifier and so on. There is a difference from the expected replacement cycle of individual filter.

1 Correct usage guide

01. Daily inspection

Check the condition of the water purifier frequently for safe use.

Power

- Is the indicator turning 'on' and 'off' as you move the plug when power is connected?
- Is any part of the power plug hotter than usual?
- Is the color or shape of the power plug or part of the power cord changed or damaged?

→ If the above problem occurs, stop using it immediately and contact the Coway Service center (1421)

Display

- Is the product display blinking?

→ Please contact the Coway Service center (1421) immediately if it is blinking abnormally.

02. Proper method of use

Category		Proper method of use
Installation	Product disassembly and installation	Do not disassemble or install the product arbitrarily; have our Coway Technician perform the task.
	Installation environment	Do not install in an environment where the product is likely to be contaminated. • In the toilet, places with many rats and pests (e.g. ants, cockroaches) • Places with poor sanitation management and severe contamination (e.g. ships, rivers, livestock, wastewater, etc) • Extreme humidity or salty seawater areas • Places with exposure to direct sunlight • Other unsanitary environment judged to be inappropriate for water purifier installation


Use	Dispensing hole	Keep hands and mouth away from the dispensing holes and avoid having users' cups in contact with the part. Wipe the deco faucet with a clean dry cloth or non-woven fabric once a week.
	Water collection	Make sure that beverage such as coffee, tea, soda, or food splash does not get inside of the dispensing holes or on the front cover of the product. If beverages or foreign substances are on the product, wipe it immediately to prevent contamination.
	Water tray	Do not throw away coffee, drinks, or food other than residual water into the tray. Do not leave the water in the water tray for more than one day. Clean and care for the water tray once a week.
	Non-use for long-term	When not used for a long time, for hygiene, dispense cold water/hot water for about 2~3 minutes, ambient water for about 30 seconds to drain all the water inside.
	Product	Do not place objects on the product as there is a risk of contamination or damage.
Filter	Genuine product	Do not use filters other than Coway genuine filters.
	Replacement	Please make sure to change the filter within the filter replacement cycle and manage it.
Management	Check	For clean water management, it is necessary to receive water purifier management services on a regular basis.
	Manager	Request Coway Cody and Coway Technician for product management. • If non-professionals take care of parts replacement and internal cleaning, there may be a risk such as water leakage.
	Surroundings	Manage continuously not to make the area around the water purifier unsanitary. • Example: Don't put it next to the trash can.

2 Troubleshooting

The water purifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons.
If you cannot solve the problem after checking the following items, please call the Coway Service center.

Water doesn’t come out

01. Any ambient water, cold water or hot water don't come

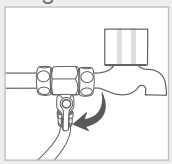Power plug	Make sure the power plug is plugged into a 220 V - 240 V~, 50 Hz outlet.
Suspension of water supply	Check if the water purifier installed- tap water is running normally .
Tap water valve	Check if the tap water valve is open. The tap water valve is usually under the sink and refer to the image below to see the open status of the tap water valve.  • Tap water valve
Hose bending	If the hose is bent or water may not come out if the hose is folded or the amount of water may vary. Please straighten it out.
Filter replacement	If the filter is not replaced in time, water may not come out or the dispensed water amount may be reduced. Please make sure to change the filter within the replacement cycle.

02. Hot water doesn’t come out

Setting the hot water lock	Check if the product is in hot water lock, and if it is locked, unlock it. If there is a lock mark next to the hot water indicator ( ) or if the hot water lock indicator is on, hot water dispensing is locked (disabled).

The water is flowing slower.

01. The water is flowing slower.

Amount of water use	If the water pressure and flow rate are low, resulting in insufficient water dispensing. In such cases, please check the installation conditions.

The water temperature is not right

01. The Cold water is not cold

Cold water amount per use	When dispensing a large amount of cold water at once, cold water may be less cold. Please use it after a while.
Cold water function off	If the cold water indicator (✳) is off, the cold water feature is off. Press and hold the cold water button to turn on the feature. (For models with setting button) Press the cold water OFF button in settings to turn on the feature.
Distance between walls	When making cold water, the heat generated inside must be discharged to the outside to make cold water. Please keep the distance between the product and the wall so that the heat inside the product is dissipated smoothly.
Eco Mode setting	When the Eco Mode is set, it may be less cold. Adjust the settings if needed.

02. The hot water is not hot

The hot water amount per use	If a large amount of hot water is dispensed at one time, the hot water may not be hot enough. This model is a storage heating type and requires time to prepare hot water again. The preparation time for hot water may vary depending on the environment temperature.
Hot water function off	If the hot water indicator (⟆⟆⟆) is off, the hot water feature is off. Press and hold the hot water button to turn on the feature.
Hot water is getting ready	This model is a storage heating type and requires time to prepare hot water. The preparation time for hot water may vary depending on the environment temperature.
Eco Mode setting	When the Eco Mode is set, hot water may be less hot. Adjust the settings if needed.

2 Troubleshooting

The water purifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons.
If you cannot solve the problem after checking the following items, please call the Coway Service center.

There is a lot of noise.

01. It has weird noise.

Leveling state	If the water purifier is installed on a weak or uneven surface, noise may be generated. Install on a hard and level surface.
Distance between walls	Install the water purifier at least 10cm away from the back and left/right walls.
Environment check	If objects are placed behind or on top of the water purifier, noise may be produced. Put objects away before use.

02. There is a lot of noise in the product.

Cooler failure	A buzzing noise may occur when the cooler is operating. This is the operating noise of the cooler to keep the cold water cold. Frequent use of cold water or high outside temperature may increase the number of operations of the cooler. This noise is normal, so you don't worry about it.
Draining unused water	When not used, hygiene is maintained by automatically draining on a regular basis. When automatic draining is performed, large noise may occur when draining water, which is not a malfunction.
Flushing noise	When installing the appliance or replacing the filter, filer flushing is performed. At this time, large noise may occur when taking out air from the inside, which is not a malfunction.

Water tastes strange and there are foreign substances.

01. Water tastes strange.

Filter replacement	If you use the same filter for too long, it may decrease filter performance. Please make sure to change the filter within the replacement cycle.
Not in use for a long time	When not used for a long time, for hygiene, dispense cold water/hot water for about 2~3 minutes, ambient water for about 30 seconds to drain all the water inside.

There is frost (dew) on the inside (outside) of the product.

01. There is frost (dew) on the inside (outside) of the product.

Environment check	If it is humid at the installation site, or during the monsoon or rainy day, frost may form inside or outside the product. Wipe off with a dry towel.

3 Specification

Item Name	Water Purifier	
Product Name	NEON	
Model Name	CHP-6210N_WT, CHP-6210N_GR	
Water Purification Type	Coway Nanotrap™ filter	
Rated Voltage	220 V - 240 V~, 50 Hz	
Power Consumption	Cold Water: 0.7 A, Hot Water: 260 W - 310 W, Total: 350 W - 410 W	
Water Tank Amount	Cold Water: 1.5 L, Hot Water: 1 L, Total: 2.5 L (Ambient water: direct water type)	
Filter Material	Coway Nanotrap™ filter	Plus inno-sense filter: Carbon block filter, Non Woven fabric
Product Size	195 mm(W) × 450 mm(D) × 405 mm(H)	
Tap Water Temperature	5 °C - 35 °C	
Working Temperature	5 °C - 35 °C	
Tap Water Pressure	138 kPa - 827 kPa (20 psi ~ 120 psi) minimum tap water capacity 3.0 L/min	
Refrigerant	R-600a	
Product Weight	15 kg	

- For direct water purifiers, the tank size does not impact the amount of extraction.
- With direct water purifiers, the extraction amount may be reduced in low pressure and low flow conditions, so please follow the installation guidelines.
- The product design and specification can be changed without prior notice to improve the product quality and to facilitate the application of laws.

4 Warranty

- Please refer to your Sales Order Form for our basic policy for the product warranty. For more detailed terms of the product warranty, please visit our website. Please note that the terms of our product warranty are subject to change from time to time in compliance with the relevant Thailand laws and regulations.
- https://www.coway.co.th/th/terms-of-conditions

ประเทศไทย
ที่อยู่: บริษัท โคเวย์ (ประเทศไทย) จำกัด 1818 อาคารรสา ทู ชั้นที่ 14 ถนนเพชรบุรี แขวงมักกะสัน เขตราชเทวี กรุงเทพมหานคร 10400 คอลเซ็นเตอร์ : 1421

5 Memo

5 Memo

001

9252204

coway

www.coway.co.th