
# เครื่องซักผ้า อบผ้า

coway

CWD10060T5-TH

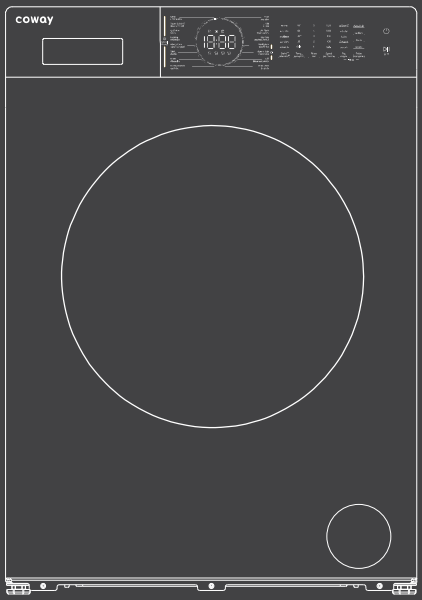


## คู่มือผู้ใช้ ▶

คู่มือการใช้งานนี้ มีข้อมูล ที่สำคัญ และคำแนะนำ ที่เราจะแนะนำให้คุณปฏิบัติตามเพื่อให้ได้ผลลัพธ์ ที่ดี ที่สุดจาก เครื่องซักผ้า อบผ้า

# สารบัญ

ข้อมูลจำเพาะของผลิตภัณฑ์ ..... 1

ข้อควรระวังด้านความปลอดภัย ..... 2

คำแนะนำที่สำคัญ ..... 4

ส่วนประกอบของเครื่องซักผ้า ..... 5

การติดตั้งเครื่องซักผ้า..... 6

ใช้งานเครื่องซักผ้า..... 10

การซ่อมบำรุง..... 20


การแก้ไขปัญหา ..... 23

ภาคผนวก ..... 25

# ข้อมูลจำเพาะของผลิตภัณฑ์

| | |
|---|---|
| รุ่น | CWD10060T5-TH |
| แรงดันไฟฟ้า | 220-240V~ / 50Hz |
| แรงดันน้ำ | 0. 05-0. 8MPa |
| ความจุในการซัก/ปั่นแห้ง | 10. 0/10. 0kg |
| ความจุการอบแห้ง | 6. 0kg |
| พลังงานความร้อนสำหรับการซัก | 1700-1900W |
| พลังการอบแห้ง | 1350-1450W |
| ขนาดภายนอก (W*D*H)mm | 595*620*850mm |

## แผนภาพวงจร

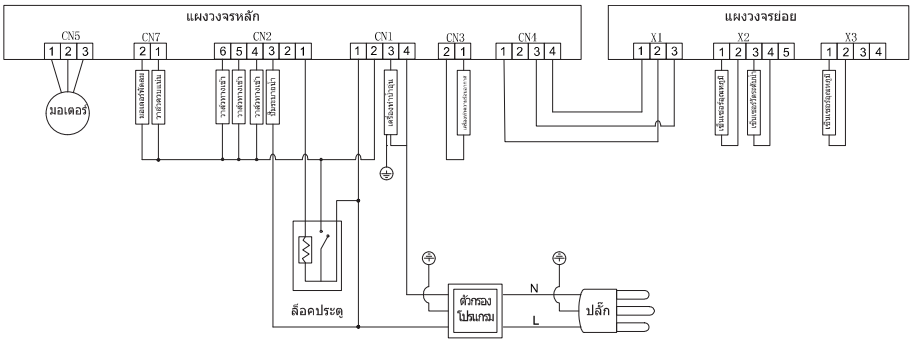


## ⚠หมายเหตุ:

1. รูปภาพทั้งหมดในคู่มือใช้สำหรับแผนผังเท่านั้น ซึ่งอาจจะแตกต่างจากเครื่องที่คุณซื้อ
2. ฟังก์ชันจริงและข้อมูลในรูปแบบเหนือกว่า

# ข้อควรระวังด้านความปลอดภัย

## ⚠ คำเตือน

**เพื่อลดความเสี่ยงจากการเกิดเพลิงไหม้ ไฟฟ้าช็อต หรือการบาดเจ็บขณะใช้งานอุปกรณ์ โปรดปฏิบัติตามข้อควรระวังพื้นฐาน รวมถึงข้อแนะนำดังต่อไปนี้:**

- หากสายไฟชำรุด จะต้องเปลี่ยนโดยผู้ผลิต ตัวแทนบริการ หรือบุคคลที่มีคุณสมบัติคล้ายคลึงกัน เพื่อหลีกเลี่ยงอันตราย
- ต้องใช้ชุดท่อใหม่ที่มาพร้อมกับเครื่องซักผ้า และไม่ควรใช้ชุดท่อเก่าซ้ำ
- เครื่องใช้ไฟฟ้านี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถทางร่างกาย ประสาทสัมผัส หรือทางจิตใจที่ลดลง หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้อุปกรณ์โดยบุคคลที่รับผิดชอบด้านความปลอดภัย ควรมีผู้ดูแลเด็ก ๆ เพื่อให้แน่ใจว่าพวกเขาไม่ได้เล่นกับเครื่องใช้ไฟฟ้า (คำเตือนนี้ไม่ใช่สำหรับตลาดยุโรป)
- เครื่องใช้ไฟฟ้านี้สามารถใช้ได้โดยเด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีข้อจำกัดทางร่างกาย ประสาทสัมผัส หรือความสามารถทางจิตใจลดลง หรือขาดประสบการณ์และความรู้ หากพวกเขาได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าอย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจจะเกิดขึ้น เด็กไม่ควรเล่นกับเครื่องใช้ไฟฟ้านี้ การทำความสะอาดและการบำรุงรักษาไม่ควรทำโดยเด็กที่ไม่ได้รับการดูแล (คำเตือนนี้สำหรับตลาดยุโรป)
- เครื่องใช้ไฟฟ้านี้สามารถใช้ได้โดยเด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีข้อจำกัดทางร่างกาย ประสาทสัมผัส หรือความสามารถทางจิตใจลดลง หรือขาดประสบการณ์และความรู้ หากพวกเขาได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าอย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจจะเกิดขึ้น เด็กไม่ควรเล่นกับเครื่องใช้ไฟฟ้านี้ การทำความสะอาดและการบำรุงรักษาไม่ควรทำโดยเด็กที่ไม่ได้รับการดูแล (คำเตือนนี้สำหรับตลาดยุโรป)
- พรมต้องไม่ปิดกั้นช่องระบายอากาศบริเวณฐานของเครื่องซักผ้า
- ควรเก็บให้ห่างจากเด็กที่มีอายุต่ำกว่า 3 ปี เว้นแต่จะได้รับการดูแลอย่างต่อเนื่อง
- เครื่องใช้ไฟฟ้านี้มีวัตถุประสงค์เพื่อใช้ในครัวเรือนและการใช้งานที่คล้ายกัน เช่น:
  - พื้นที่ครัวของพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ
  - บ้านไร่
  - พื้นที่สำหรับลูกค้าในโรงแรม โมเทล และสภาพแวดล้อมประเภทที่พักอาศัยอื่นๆ
  - สภาพแวดล้อมประเภทที่พักพร้อมอาหารเช้า
  - พื้นที่สำหรับใช้งานส่วนกลางในแฟลตหรือห้องซักผ้า
- ระมัดระวังว่าแรงดันไฟฟ้าและความถี่จะต้องเหมือนกันกับของเครื่องซักผ้า
- เพื่อความปลอดภัยของคุณ จะต้องเสียบปลั๊กสายไฟเข้ากับเต้ารับที่มีสายดิน ตรวจสอบอย่างรอบคอบและตรวจสอบให้แน่ใจว่าซ็อกเก็ตติดตั้งอย่างถูกต้องและต่อสายดินได้อย่างน่าเชื่อถือ
- อย่าใช้เต้ารับที่มีกระแสไฟน้อยกว่าเครื่องซักผ้า
- อย่าใช้งานเครื่องซักผ้าเมื่อมีชิ้นส่วนขาดหายหรือแตกหัก
- ห้ามดึงปลั๊กไฟออกขณะที่มือเปียก

# ข้อควรระวังด้านความปลอดภัย


- เปลี่ยนสายไฟที่หลุดลุ่ยและปลั๊ก/เต้ารับที่หลวมทันที
- ถอดปลั๊กเครื่องซักผ้าก่อนทำความสะอาดหรือทำการซ่อมแซมใดๆ
- โปรดตรวจสอบว่าน้ำในถังซักระบายออกแล้วหรือไม่ก่อนเปิดประตู โปรดอย่าเปิดประตูหากมีน้ำปรากฏให้เห็น
- ประตูกระจกอาจมีความร้อนสูงระหว่างการทำงาน ให้เด็กและสัตว์เลี้ยงอยู่ห่างจากเครื่องซักผ้าระหว่างการทำงาน
- ตรวจสอบให้แน่ใจว่าช่างเทคนิคที่ผ่านการรับรองต้องเชื่อมต่อน้ำและอุปกรณ์ไฟฟ้าตามคำแนะนำของผู้ผลิตและกฎระเบียบด้านความปลอดภัยในท้องถิ่น
- ก่อนใช้งานเครื่องนี้ ต้องถอดบรรจุภัณฑ์และสลักเกลียวขนส่งทั้งหมดออก มิฉะนั้นเครื่องซักผ้าอาจได้รับความเสียหายร้ายแรงขณะซักผ้า
- ห้ามใช้สารที่ไวไฟและระเบิดได้หรือเป็นพิษ น้ำมันเบนซินและแอลกอฮอล์ ฯลฯ ไม่ควรใช้เป็นผงซักฟอก โปรดเลือกผงซักฟอกที่เหมาะกับการซักด้วยเครื่องเท่านั้น
- ระวังน้ำร้อนลวกในขณะที่เครื่องซักผ้าระบายน้ำร้อนออก
- อย่าถอดปลั๊กเครื่องซักผ้าโดยการดึงสายไฟ จับปลั๊กให้แน่นเสมอแล้วดึงออกจากเต้ารับโดยตรง
- หากเครื่องใช้ไฟฟ้าเก่าของคุณไม่ได้ใช้งานแล้ว แนะนำให้ถอดปลั๊กออก
- วัสดุบรรจุภัณฑ์อาจเป็นอันตรายต่อเด็ก โปรดเก็บวัสดุบรรจุภัณฑ์ทั้งหมด (ถุงพลาสติก โฟม ฯลฯ) ให้ห่างจากเด็ก
- ห้ามปีนขึ้นไปนั่งบนฝาด้านบนของเครื่อง
- สัตว์เลี้ยงและเด็กอาจปีนเข้าไปในเครื่องได้ ตรวจสอบเครื่องก่อนดำเนินการทุกครั้ง
- อย่าพิงประตูเครื่องซักผ้า

# คำแนะนำที่สำคัญ

- เครื่องซักผ้าในครัวเรือนไม่ได้มีวัตถุประสงค์เพื่อการติดตั้งแบบ Built-in
- เครื่องซักผ้านี้ใช้ภายในอาคารเท่านั้น
- ตรวจสอบให้แน่ใจว่าไม่มีสิ่งของอยู่ในกระเป๋า ของมีคมและของแข็ง เช่น เหรียญ เข็มกลัด ตะปู สกรู หรือหิน ฯลฯ อาจทำให้เครื่องซักผ้าเสียหายร้ายแรงได้
- โปรดอย่าลืมถอดน้ำและแหล่งจ่ายไฟออกทันทีหลังจากซักเสื้อผ้าแล้ว
- ไม่ควรติดตั้งเครื่องซักผ้าในห้องอาบน้ำหรือห้องที่เปียกชื้นมาก รวมทั้งในห้องที่มีวัตถุไวไฟ หรือกัดกร่อน
- ก่อนการซักเสื้อผ้าในครั้งแรก เครื่องซักผ้าจะต้องทำงานหนึ่งรอบของขั้นตอนทั้งหมดโดยไม่มีผ้าอยู่ข้างใน
- ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใดๆ ของเครื่องซักผ้า เว้นแต่คุณจะได้รับคำแนะนำเป็นพิเศษสำหรับการซ่อมของผู้ใช้ และมีทักษะความรู้ในการซ่อมแซมชิ้นส่วน
- ห้ามมิให้ซักพรมและเสื้อชั้นในที่ใส่ลวดเหล็ก
- ห้ามเติมน้ำด้วยมือระหว่างการซัก
- เมื่อขนย้ายเครื่องควรระบายน้ำที่สะสมอยู่ในเครื่องออกก่อน จับเครื่องอย่างระมัดระวัง ห้ามจับส่วนที่ยื่นออกมาแต่ละส่วนไว้บนเครื่องขณะยกเครื่อง ไม่สามารถใช้ประตูเครื่องเป็นที่จับระหว่างการขนย้ายได้
- เครื่องซักผ้าที่มีวาล์วทางเข้าเดียวสามารถเชื่อมต่อกับแหล่งจ่ายน้ำเย็นเท่านั้น เครื่องซักผ้าที่มีวาล์วทางเข้าคู่สามารถเชื่อมต่อกับน้ำร้อนและน้ำเย็นได้

# เก็บรักษาคำแนะนำเหล่านี้

## เป็นเครื่องใช้ภายในบ้านเท่านั้น

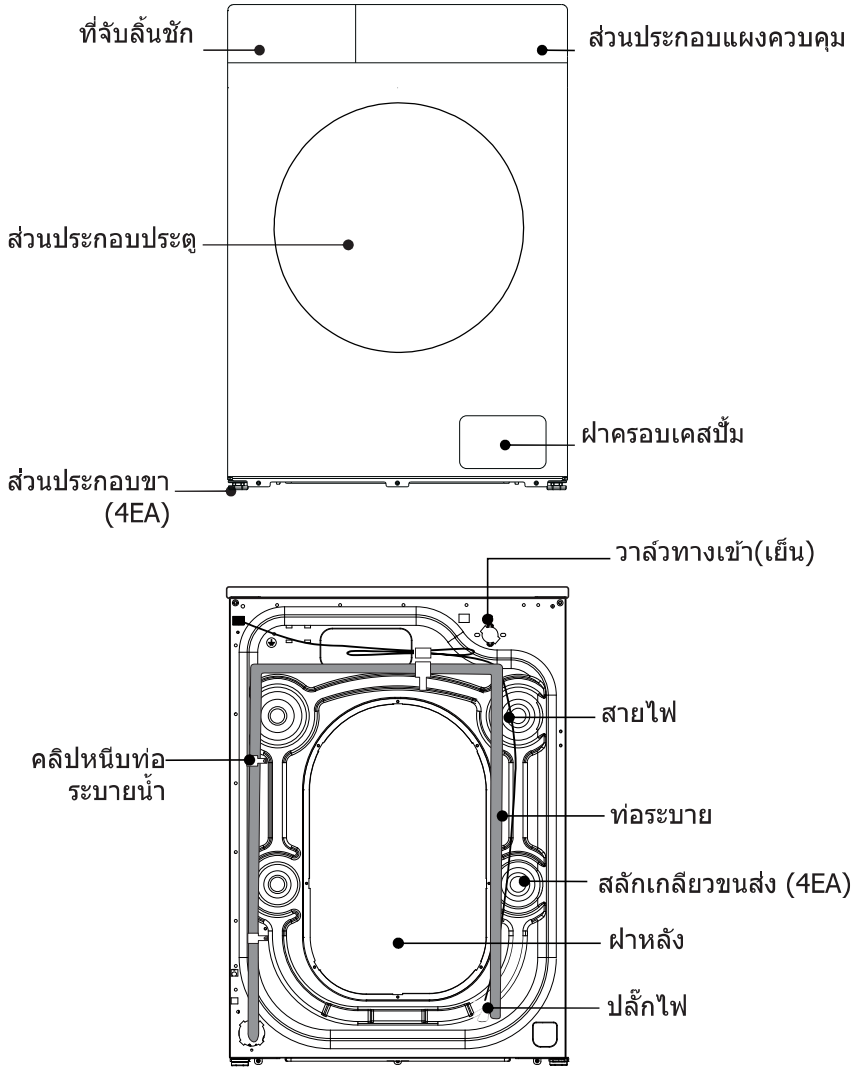


* ภาพประกอบเป็นเพียงตัวอย่างแผงควบคุมรุ่นตัวอย่างง่ายๆ
ภาพประกอบนี้ใช้เพื่อการอ้างอิงเท่านั้น โปรดดูผลกระทบที่เกิดขึ้นจริง

# การติดตั้งเครื่องซักผ้า

**⚠ หมายเหตุ:**

เราขอแนะนำว่าเครื่องซักผ้าใหม่ของคุณควรติดตั้งโดยช่างเทคนิคเครื่องใช้ไฟฟ้าที่มีคุณสมบัติเหมาะสม หากคุณรู้สึกว่าคุณมีทักษะในการติดตั้งเครื่องซักผ้า โปรดอ่านคำแนะนำในการติดตั้งอย่างละเอียดก่อนทำการติดตั้ง


## ■ เครื่องมือที่จำเป็น

คุณอาจจำเป็นต้องมีเครื่องมือต่อไปนี้เพื่อช่วยคุณในการติดตั้งเครื่องซักผ้า:

- กรรไกร
- คีม
- ไขควงมาตรฐาน
- ถุงมือ
- ประแจ

## ■ การแกะบรรจุภัณฑ์เครื่องซักผ้า

นำเครื่องซักผ้าออกจากบรรจุภัณฑ์และตรวจสอบว่ามีความเสียหายใด ๆ ในระหว่างการขนส่งหรือไม่ ตรวจสอบให้แน่ใจว่าได้รับสิ่งของทั้งหมด (ตามที่แสดงด้านล่าง) ในกระเป๋าที่แนบมาด้วย หากมีความเสียหายต่อเครื่องซักผ้าระหว่างการขนส่ง หรือมีรายการใดสูญหายหรือเสียหาย โปรดติดต่อตัวแทนจำหน่ายในพื้นที่ทันที

| ท่อน้ำเย็น (ต่อเข้ากับแหล่งจ่ายน้ำเย็น) | ฝาครอบรู (4EA) (ใช้สำหรับอุดรูสลักเกลียวขนส่ง) | ขายึดรองรับท่อน้ำทิ้ง (ใช้คล้องปลายท่อน้ำทิ้ง) | ประแจ (1 . ใช้ปรับส่วนล่างของตัวเครื่อง 2. ถอดสลักเกลียวขนย้ายที่ด้านหลังของตัวเครื่อง) |
|---|---|---|---|
|  |  |  |  |

## ■ เลือกสถานที่

ก่อนการติดตั้งเครื่องซักผ้า จะต้องเลือกตำแหน่งที่มีคุณลักษณะดังต่อไปนี้:


- พื้นผิวแข็ง แห้ง และได้ระดับ (หากไม่ได้ระดับ โปรดทำให้ได้ระดับตามรูปต่อไปนี้ "ขาปรับระดับได้")
- หลีกเลี่ยงแสงแดดโดยตรง
- มีการระบายอากาศที่เพียงพอ
- อุณหภูมิโดยรอบจะต้องอยู่ระหว่าง 0-40°C
- ความชื้นโดยรอบจะต้องต่ำกว่า 95% (เมื่ออุณหภูมิอยู่ที่ 25°C)
- เก็บให้ห่างจากแหล่งความร้อน เช่น ถ่านหินหรือก๊าซ ตรวจสอบให้แน่ใจว่าเครื่องซักผ้าจะไม่วางทับสายไฟ อย่าติดตั้งเครื่องซักผ้าบนพื้นพรม
- แนะนำให้ติดตั้ง โดยเว้นระยะห่างด้านข้างไม่ต่ำกว่า 3 มม. และด้านบนไม่ต่ำกว่า 2 มม.

# การติดตั้งเครื่องซักผ้า

## ■ ถอดสลักเกลียวขนส่ง

ก่อนใช้เครื่องซักผ้านี้ ต้องถอดสลักเกลียวขนส่งออกจากด้านหลังของเครื่องซักผ้าก่อน โปรดทำตามขั้นตอนต่อไปนี้เพื่อถอดสลักเกลียว:


⚠ เก็บสลักเกลียวขนส่งให้เหมาะสมเพื่อใช้ในครั้งต่อไป

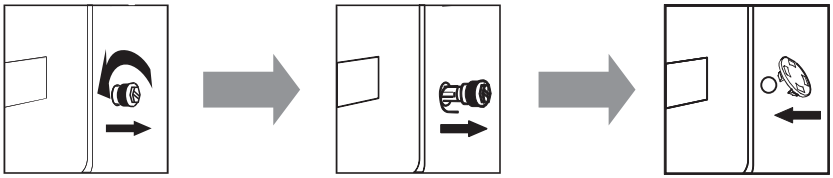


1. คลายสลักยึดขนส่งทั้งสี่
2. ใช้ประแจจับหัวน็อตแต่ละอันแล้วดึงฝานส่วนที่กว้างของรูทำซ้ำสำหรับสลักเกลียวแต่ละตัว
3. เติมรูด้วยฝาพลาสติกที่ให้มา

## ■ ปรับระดับเครื่องซักผ้า

ติดตั้งหรือวางเครื่องซักผ้าภายใต้อุณหภูมิสิ่งแวดล้อมไม่ต่ำกว่า 0°C แต่ต้องไม่อยู่กลางแจ้ง เพราะอาจทำให้ตัวควบคุมการตั้งโปรแกรมเสียหายได้

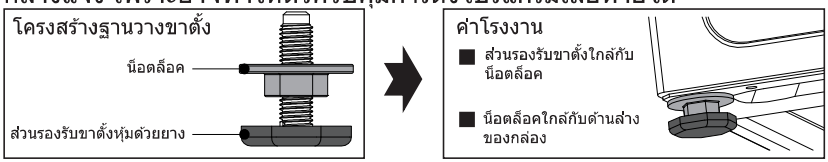


⚠ **หมายเหตุ:** เพื่ออำนวยความสะดวกในการติดตั้ง สต๊ัดของขาตั้งจากโรงงานอาจไม่ถูกล็อคทั้งหมด โปรดแน่ใจว่าได้ล็อคขาตั้งทั้งสี่ก่อนที่จะปรับระดับ

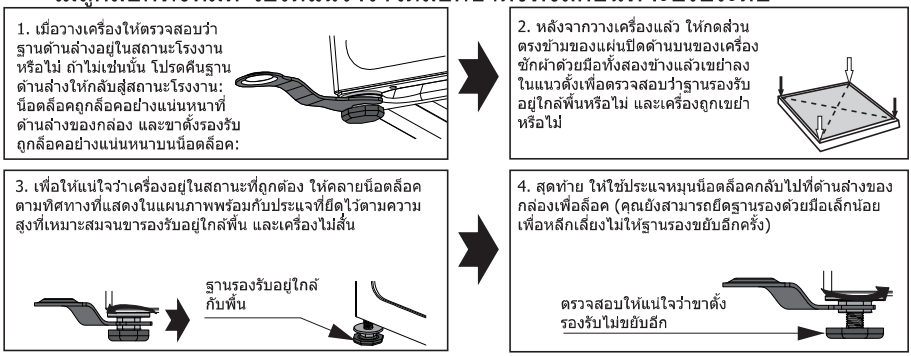


**⚠ ข้อควรระวัง**


1. เครื่องจะต้องได้รับการปรับระดับและมั่นคงอย่างสมบูรณ์เมื่อขารองรับทั้งสี่อยู่ใกล้พื้น ลดขาตั้งลงให้มากที่สุดเท่าที่จะเป็นไปได้โดยบนพื้นฐานการปรับระดับเครื่อง
2. การปรับระดับที่ไม่เหมาะสมอาจทำให้เกิดเสียงดัง เครื่องมีการสั่น การเคลื่อนตัวของเครื่องจักร และปรากฏการณ์ผิดปกติอื่น ๆ
3. ช่องระบายอากาศได้รับการออกแบบไว้ที่ด้านล่างของตัวเครื่อง (ป้องกันการอุดตัน) ติดตั้งเครื่องซักผ้าบนพื้นแข็ง เรียบ และกันลื่น อย่าวางเครื่องซักผ้าไว้บนผ้าห่มนุ่ม ๆ หรือพื้นไม้ หรือโต๊ะทำงานและขาตั้งต่างๆ เพื่อหลีกเลี่ยงความเสียหายที่ไม่จำเป็น

# การติดตั้งเครื่องซักผ้า


ท่อน้ำที่ให้มาอาจแตกต่างกันไปขึ้นอยู่กับรุ่น โปรดปฏิบัติตามคำแนะนำสำหรับท่อน้ำที่ให้มา

## ■ เชื่อมต่อท่อทางเข้า


### การเชื่อมต่อกับก๊อกน้ำแบบเกลียว

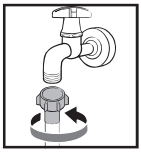

1. เชื่อมต่อท่อน้ำเข้ากับก๊อกน้ำ จากนั้นหมุนขั้วต่อตามเข็มนาฬิกาตามภาพ

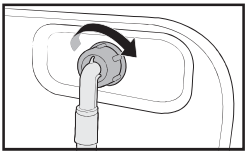


2. เชื่อมต่อปลายอีกด้านของท่อน้ำเข้ากับวาล์วทางเข้าที่ด้านหลังของเครื่องซักผ้า หมุนท่อตามเข็มนาฬิกาเพื่อขันให้แน่น

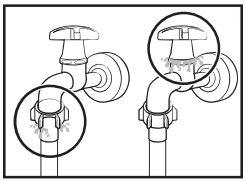


3. เปิดก๊อกน้ำแล้วตรวจดูว่ามีรอยรั่วบริเวณจุดเชื่อมต่อหรือไม่ หากมีน้ำรั่วให้ทำซ้ำขั้นตอนข้างต้น


### การเชื่อมต่อกับก๊อกน้ำแบบไม่เกลียว

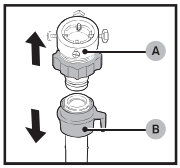



1. ถอด**อะแดปเตอร์(A)** ออกจา**กท่อน้ำ(B)**

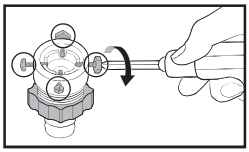


2. ใช้ไขควงปากแฉกเพื่อคลายสกรูสี่ตัวบนอะแดปเตอร์

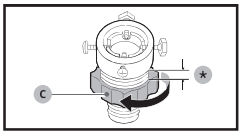


3. จับอะแดปเตอร์และหมุนชิ้น**ส่วน (C)** ไปตามทิศทางลูกศรเพื่อคลายออก 5mm (*) จากนั้นคลายสกรูสี่ตัวบนอะแดปเตอร์

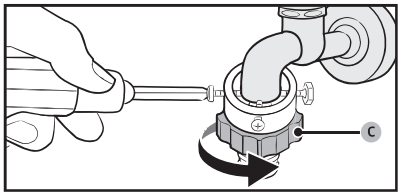



4. ใส่อะแดปเตอร์เข้ากับก๊อกน้ำ จากนั้นขันสกรูให้แน่นขณะยกอะแดปเตอร์
5. หมุน**ส่วน (C)** ตามทิศทางลูกศรเพื่อขันให้แน่น

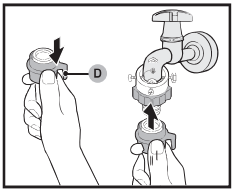


6. ขณะดึงชิ้น**ส่วน (D)** บนท่อน้ำออก ให้เชื่อมต่อท่อน้ำเข้ากับอะแดปเตอร์ จากนั้นจึงปล่อย**ส่วน (D)** ท่อพอดีกับอะแดปเตอร์และมีเสียงคลิก
7. หากต้องการเชื่อมต่อท่อน้ำให้เสร็จสมบูรณ์ โปรดดูที่ 2 และ 3 ในส่วน "**การเชื่อมต่อกับก๊อกน้ำแบบเกลียว**"


**⚠ หมายเหตุ:**

- หากมีการรั่วซึมกับท่อหลังการเชื่อมต่อ ให้ทำซ้ำขั้นตอนเพื่อต่อท่อทางเข้า
- ห้ามบิดงอท่อ
- ตรวจสอบการเชื่อมต่อท่อทางเข้าอย่างระมัดระวังก่อนใช้งานเครื่องซักผ้าในแต่ละครั้ง

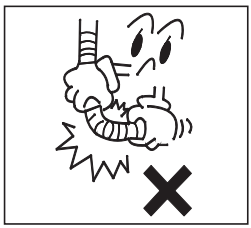


# การติดตั้งเครื่องซักผ้า

## ■ ต่อท่อระบายน้ำ

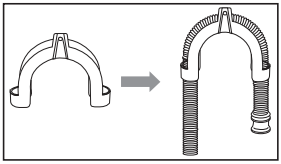


- ท่อระบายน้ำจะต้องวางสูงเหนือพื้น 65-100 mm. มิฉะนั้นอาจทำให้การระบายน้ำไม่ดี
- คุณสามารถใช้ขายึดรองรับท่อระบายน้ำที่ให้มาเพื่อคล้องท่อระบายน้ำเข้ากับผนัง ขาตั้ง หรืออ่างซักผ้าได้
- ตรวจดูให้แน่ใจว่าการเชื่อมต่อท่อทั้งหมดแน่นดี

**⚠ หมายเหตุ:**

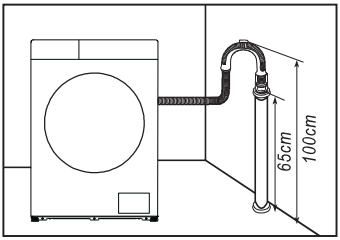


- ปลายท่อระบายน้ำไม่สามารถแช่น้ำได้เพื่อให้เครื่องซักผ้าทำงานได้ตามปกติ

## ■ เชื่อมต่อไฟฟ้า

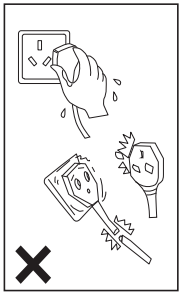

- เนื่องจากกระแสไฟฟ้าสูงสุดที่ไหลผ่านตัวเครื่องคือ 10A เมื่อคุณใช้ฟังก์ชันทำความร้อน โปรดตรวจสอบให้แน่ใจว่าระบบจ่ายไฟ (กระแสไฟ แรงดันไฟฟ้า และสายไฟ) ที่บ้านของคุณสามารถตอบสนองความต้องการโหลดปกติของเครื่องใช้ไฟฟ้าได้
- โปรดเชื่อมต่อไฟฟ้าเข้ากับเต้ารับที่ติดตั้งอย่างถูกต้องและต่อสายดินอย่างเหมาะสม
- ตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้าที่เพลตของคุณเท่ากับแรงดันไฟฟ้าที่กำหนดของเครื่อง
- ปลั๊กไฟต้องตรงกับเต้ารับ
- ห้ามใช้ปลั๊กหรือเต้ารับอเนกประสงค์เป็นสายไฟต่อ
- อย่าเชื่อมต่อและดึงปลั๊กออกด้วยมือที่เปียก
- เมื่อดึงปลั๊กออก ให้จับปลั๊กให้แน่นแล้วดึงออก อย่าดึงสายไฟแรง ๆ
- หากสายไฟชำรุดหรือมีร่องรอยการแตกหัก จะต้องเลือกหรือซื้อสายไฟชนิดพิเศษจากผู้ผลิตหรือศูนย์บริการเพื่อเปลี่ยนใหม่

**⚠ คำเตือน**

1. เครื่องใช้ไฟฟ้านี้จะต้องต่อสายดินอย่างถูกต้อง หากมีไฟฟ้าลัดวงจร การต่อสายดินสามารถลดความเสี่ยงจากไฟฟ้าช็อตได้
2. เครื่องซักผ้าจะต้องทำงานในวงจรแยกจากเครื่องใช้ไฟฟ้าอื่น มิฉะนั้นตัวป้องกันไฟอาจสะดุดหรือฟิวส์อาจไหม้ได้

# ใช้งานเครื่องซักผ้า

**⚠ หมายเหตุ:**

**ตรวจสอบให้แน่ใจว่าเครื่องของคุณได้รับการติดตั้งอย่างถูกต้องก่อนการใช้งาน**

ก่อนการซักเสื้อผ้าครั้งแรก คุณต้องรันรอบให้ครบทั้งหมดโดยไม่มีเสื้อผ้า


**เพื่อทำสิ่งนี้:**

1. เชื่อมต่อแหล่งจ่ายไฟและน้ำ
2. ใส่ผงซักฟอกเล็กน้อย (ประมาณ 10 กรัม) ลงในลิ้นซักแล้วปิด
3. กดปุ่ม ⏻ **เปิด/ปิด**
4. หมุนปุ่มไปที่โปรแกรม "⏍ ผ้าฝ้าย"
5. กดปุ่ม ▷|| **เริ่ม/หยุด**


วิธีนี้จะช่วยขจัดน้ำที่เหลือจากการทดสอบการทำงานของผู้ผลิตออกจากเครื่อง

## ■ จัดเรียงเสื้อผ้า

โปรดอ่านคำแนะนำนี้อย่างละเอียดเพื่อหลีกเลี่ยงความล้มเหลวของเครื่องซักผ้าและความเสียหายของเสื้อผ้า

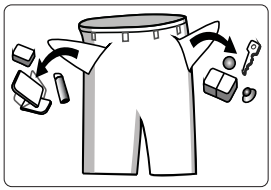

1. อย่าใส่เสื้อผ้าเกินพิกัดความจุที่กำหนด
2. จัดเรียงผ้าตามสีและตามป้ายดูแลรักษา เสื้อผ้าส่วนใหญ่จะมีป้ายการดูแลรักษาสิ่งทอ อยู่ที่ปกเสื้อหรือตะเข็บด้านข้าง
3. ตรวจสอบให้แน่ใจว่าทุกช่องว่างเปล่า วัตถุแปลกปลอม (เช่น ตะปู เหรียญ คลิปหนีบกระดาษ ฯลฯ ) อาจทำให้เสื้อผ้าและส่วนประกอบภายในเครื่องเสียหายได้
4. ปิดซิป ยึดตะขอ ฯลฯ ก่อนซัก
5. เสื้อผ้าที่จะซักก็ควรแยกตามสี เสื้อผ้าสีเข้มไม่ควรซักร่วมกับเสื้อผ้าสีอ่อนโดยเฉพาะ
6. บริเวณที่สกปรกาก คราบสกปรก ฯลฯ ควรได้รับการทำความสะอาดล่วงหน้าด้วยน้ำยาซักผ้า น้ำยาขจัดคราบ ฯลฯ
7. กลับเสื้อผ้าที่เป็นขุยได้ง่ายและมีพื้นผิวทำด้วยผ้าขนสัตว์ก่อนใส่ลงในเครื่อง

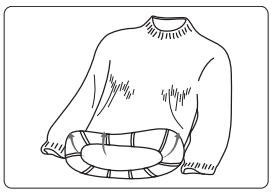

**⚠ หมายเหตุ: ตรวจสอบให้แน่ใจว่าไม่มีเสื้อผ้าติดอยู่ระหว่างประตูกับซีล**

## ■ ใส่ผงซักฟอก


- ดึงลิ้นซักผงซักฟอกออกมา

⏍ **ช่องซักล่วงหน้า:** ใช้ผงซักฟอกหรือแป้ง ใช้สำหรับโปรแกรมซักล่วงหน้าเท่านั้น

⏍ **ช่องซักหลัก:** ใช้ผงซักฟอกสำหรับซักหลัก น้ำยาปรับผ้านุ่ม ผงซักฟอกสำหรับแช่ผ้า น้ำยาฟอกขาว และ/หรือน้ำยาขจัดคราบ

❀ **ช่องใส่สารปรับผ้านุ่ม :** ใส่สารเติมแต่ง เช่น น้ำยาปรับผ้านุ่ม อย่าเกิน**เส้นสูงสุด**

# ใช้งานเครื่องซักผ้า

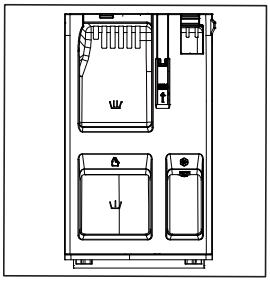

- ใส่น้ำยาปรับผ้านุ่มลงในช่อง
- โปรดเลือกผงซักฟอกชนิดที่เหมาะสมสำหรับอุณหภูมิการซักต่าง ๆ เพื่อให้ได้ผลการซักที่ดีที่สุดโดยสิ้นเปลืองน้ำและพลังงานน้อยลง
- ควรเติมผงซักฟอก/น้ำยาปรับผ้านุ่มเพียงหนึ่งครั้งเท่านั้น โปรดดูคำแนะนำของผู้ผลิตสำหรับปริมาณผงซักฟอก/น้ำยาปรับผ้านุ่ม
- ผงซักฟอกที่มากเกินไปจะทำให้เกิดฟองจำนวนมาก ล้นได้ง่าย และส่งผลต่อการละลายของผงซักฟอก ส่งผลให้การชะล้างลำบาก

# ใช้งานเครื่องซักผ้า

**⚠ หมายเหตุ:**


1. โปรดเลือกผงซักฟอกชนิดที่เหมาะสมสำหรับอุณหภูมิการซักต่าง ๆ เพื่อให้ได้ผลการซักที่ดีที่สุดโดยสิ้นเปลืองน้ำและพลังงานน้อยลง
2. ควรเติมผงซักฟอก/น้ำยาปรับผ้านุ่มเพียงหนึ่งครั้งเท่านั้น โปรดดูคำแนะนำของผู้ผลิตสำหรับปริมาณผงซักฟอก/น้ำยาปรับผ้านุ่ม
3. ห้ามเปิดลิ้นชักใส่ผงซักฟอกในขณะที่เครื่องซักผ้ากำลังทำงาน
4. เพื่อป้องกันการอุดตันของช่อง จะต้องเจือจางสารที่มีความเข้มข้นสูง (น้ำยาปรับผ้านุ่มหรือผงซักฟอก) ด้วยน้ำก่อนนำไปใช้
5. ระดับของเหลวไม่ควรเกินเครื่องหมาย MAX ของกล่องจ่ายน้ำยา

## ■ ขั้นตอนการซัก


① เชื่อมต่อท่อทางเข้าและเปิดก๊อกน้ำ




② เสียบปลั๊กไฟ



③ วางท่อระบายน้ำ



④ เปิดประตู ใส่เสื้อผ้าแล้วปิด; ใส่ผงซักฟอกลงในกล่องผงซักฟอกแล้วปิดกล่อง

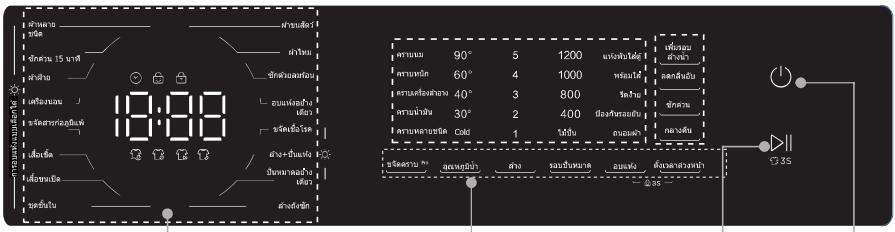


⑥ เลือกโปรแกรมตามความต้องการ

⑦ การตั้งค่าส่วนบุคคล เช่น "ประเภทคราบ อุณหภูมิการซัก และจำนวนครั้งที่ล้าง"


⑧ กดปุ่มเริ่ม

⑤ กดปุ่มเปิด/ปิดเครื่อง

# ใช้งานเครื่องซักผ้า

## บทนำแผงควบคุม

ภาพต่อไปนี้เป็นตัวอย่างง่ายๆ ของแผงควบคุมเครื่องซักผ้า โปรดทราบว่ามีไว้เพื่อการอ้างอิงเท่านั้น และผลิตภัณฑ์จริงอาจแตกต่างกันไป (จะไม่มีการแจ้งให้ทราบล่วงหน้าหากมีการอัพเกรดแผงควบคุม)

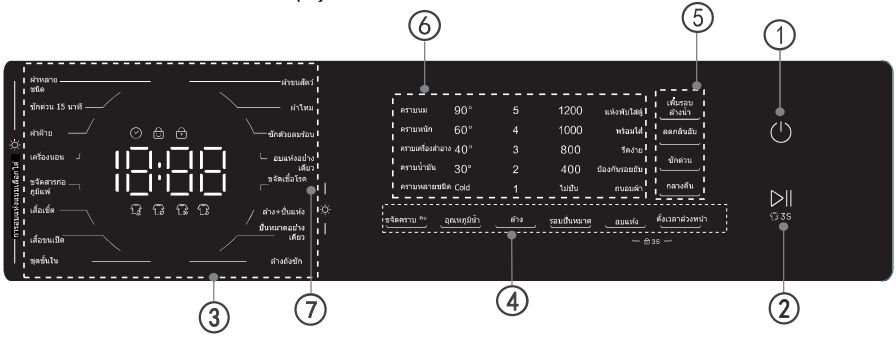


### ① ปุ่ม เพาเวอร์

- กดปุ่ม "เพาเวอร์" ค้างไว้ 2 วินาทีเพื่อเปิดหรือปิดเครื่อง
- เครื่องซักผ้าจะปิดเครื่องโดยอัตโนมัติหากไม่มีการทำงานเพิ่มเติมภายใน 10 นาที หลังจากเปิดและเปิดเครื่อง

### ② ปุ่ม เริ่ม/หยุดชั่วคราว

- เมื่อเครื่องซักผ้าอยู่ในสถานะสแตนด์บาย ให้กดปุ่มเพื่อเริ่มหรือหยุดเครื่อง
- กดปุ่มนี้ค้างไว้ 3 วินาที เพื่อปลดล็อคประตูสำหรับการโหลดผ้าในระหว่างการซัก
- สำหรับการโหลดผ้าขณะซัก ไม่ควรเปิดประตูโดยใช้แรงเมื่อระดับน้ำในถังซักสูงหรืออุณหภูมิน้ำสูงเกินไป ซึ่งไม่ปลอดภัย

### ③ พื้นที่แสดงรอบการทำงาน

หมุนปุ่มควบคุมเพื่อเลือกรอบการซักที่คุณต้องการ
รอบการทำงานที่สอดคล้องกับตำแหน่งปัจจุบันของปุ่มควบคุมจะถูกเลือกตามค่าเริ่มต้นเมื่อคุณเปิดเครื่อง

### ④ พื้นที่ปุ่มฟังก์ชัน

- ในพื้นที่นี้ เมื่อเลือกฟังก์ชัน พารามิเตอร์ที่สอดคล้องกันจะปรากฏบนหน้าจอแสดงผลด้านบน
  ไอคอนที่เลือกจะสว่างขึ้นเต็มที่ ไอคอนตัวเลือกจะสว่างขึ้นครึ่งหนึ่ง และไอคอนที่ไม่ใช่ตัวเลือกจะไม่สว่างขึ้น

# ใช้งานเครื่องซักผ้า

## บทนำแผงควบคุม

- **อุณหภูมิน้ำ**

  กดปุ่มเพื่อเลือกอุณหภูมิระหว่าง น้ำเย็น 30°C, 40°C, 60°C และ 90°C อุณหภูมิต่ำสุดและสูงสุดในแต่ละรอบจะแตกต่างกัน
- **ล้าง**

  กดปุ่มเพื่อเลือก 1 ครั้ง, 2 ครั้ง, 3 ครั้ง, 4 ครั้ง และ 5 ครั้ง เวลาล้างขั้นต่ำและสูงสุดที่ตั้งไว้ในแต่ละรอบจะแตกต่างกัน
- **รอบปั่นหมาด**

  กดปุ่มเพื่อเลือกความเร็วระหว่างไม่ปั่น, 400, 800, 1000, 1200. ความเร็วต่ำสุดและสูงสุดที่ตั้งไว้ในรอบต่างๆ จะแตกต่างกัน
- **อบแห้ง**

  กดปุ่มเพื่อเลือกโหมดอบแห้งในตู้, แห้งพับใส่ตู้, ถนอมผ้า ป้องกันรอยยับ รีดง่าย ไม่แห้ง หากเลือกพร้อมใส่ไอคอนจะสว่างขึ้นเต็มที่ และไอคอนอื่นๆ จะสว่างขึ้นครึ่งหนึ่ง
- **ตั้งเวลาล่วงหน้า**

  เลือกตั้งเวลาล่วงหน้าและไอคอนจะสว่างขึ้นพร้อมกัน หากไม่ได้เลือกไอคอนไอคอนจะไม่สว่างขึ้น พื้นที่แสดงผลจะแสดงตัวเลือกการหน่วงเวลาตั้งแต่ 3 ชม. ถึง 24 ชม. กดตั้งเวลาล่วงหน้าอีกครั้งเพื่อปิดฟังก์ชั่นตั้งเวลาล่วงหน้าเมื่อแสดง 24 ชม.
- **ล็อคป้องกันเด็ก**

  กดปุ่มอบแห้งและตั้งเวลาล่วงหน้าพร้อมกันค้างไว้ 3 วินาทีเพื่อเปิดใช้ Child Lock ไอคอน "ล็อคเด็ก" บนหน้าจอแสดงผลจะสว่างขึ้นพร้อมกันกับเพลงแจ้งเตือน

**⑤ เพิ่มรอบล้างน้ำ กันยับ ซักด่วน กลางคืน**

- **เพิ่มรอบล้างน้ำ:** ปิด (ไฟติดครึ่งหนึ่ง) เปิด (ไฟติดเต็มที่) ไอคอนจะสว่างขึ้นเมื่อฟังก์ชั่นเปิดใช้งาน
- **ลดกลิ่นอับ:** ปิด (ไฟติดครึ่งหนึ่ง) เปิด (ไฟติดเต็มที่) ไอคอนจะสว่างขึ้นเมื่อฟังก์ชั่นเปิดใช้งาน เครื่องซักผ้าจะทำงานเป็นช่วงๆ หลังการซักเสร็จสิ้นเพื่อลดรอยยับของผ้าและหลีกเลี่ยงกลิ่นที่ไม่พึงประสงค์
- **ซักด่วน:** ปิด (ไฟติดครึ่งหนึ่ง) เปิด (ไฟติดเต็มที่) ไอคอนจะสว่างขึ้นเมื่อฟังก์ชั่นเปิดใช้งาน เครื่องซักผ้าจะเร่งความเร็วและเวลาที่แสดงบนพื้นที่แสดงผลจะเปลี่ยนแปลง ความเร็วรอบจะยังคงเป็นค่าเริ่มต้นหากคุณไม่เลือกฟังก์ชั่นนี้
- **กลางคืน:** ปิด (ไฟติดครึ่งหนึ่ง) เปิด (ไฟติดเต็มที่) ไอคอนจะสว่างขึ้นเมื่อฟังก์ชั่นเปิดใช้งาน ยกเว้นการแจ้งเตือนประเภทคำเตือน เสียงปุ่มและการแจ้งเตือนอื่นๆ จะถูกปิดเสียง และความเร็วจะลดลง

# ใช้งานเครื่องซักผ้า

## บทนำแผงควบคุม

### ⑥ หน้าจอแสดงผล

- แสดงพารามิเตอร์ที่สอดคล้องกันของรอบการซักปัจจุบัน เช่น คราบ อุณหภูมิ เวลาในการล้าง ความเร็ว และการอบแห้ง
- (ตั้งเวลาล่วงหน้า) เวลาที่สอดคล้องกันจะแสดงบนหน้าจอของปุ่มควบคุม และไอคอนจะสว่างขึ้นเมื่อฟังก์ชันเริ่มทำงาน

### ⑦ ขจัดเชื้อโรค

- ขจัดเชื้อโรค: คุณสามารถฆ่าเชื้อและดับกลิ่นเสื้อผ้าได้ในน้ำอุณหภูมิ 60°C หากเสื้อผ้าของคุณใช้วัสดุที่ทนความร้อน คุณสามารถเลือกใช้น้ำ 90°C เพื่อฆ่าเชื้ออย่างทั่วถึงได้

## บทนำสู่รอบการซัก

**คู่มือสำหรับรอบการซัก**

| รอบการซัก | ประเภทผ้าที่เหมาะกับการซัก | อุณหภูมิที่เลือกได้ (°C) | ความเร็วที่เลือกได้ (รอบ/นาที) | ค่าสูงสุดที่แนะนำความจุการซัก+ปั่นแห้ง (kg) | ค่าสูงสุดที่แนะนำความสามารถในการอบแห้ง (kg) |
|---|---|---|---|---|---|
| ผ้าหลายชนิด | สำหรับการซักผสมผ้าฝ้ายและใยเคมี | น้ำเย็น - 40 | ไม่ปั่น -1200 | 6 | 5 |
| ซักด่วน 15 นาที | สำหรับการซักผ้าเปื้อนน้อย เสื้อผ้าฤดูร้อนบางๆ และเสื้อผ้าที่เพิ่งซื้อมาใหม่ | น้ำเย็น - 40 | ไม่ปั่น - 1000 | 2 | 1 |
| ผ้าฝ้าย | สำหรับการซักผ้าฝ้าย | น้ำเย็น - 90 | ไม่ปั่น -1200 | 10 | 6 |
| เครื่องนอน | สำหรับซักเครื่องนอน/สิ่งทอภายในบ้าน | น้ำเย็น - 60 | ไม่ปั่น -1200 | 6 | 4 |
| ขจัดสารก่อภูมิแพ้ | สำหรับการซักเสื้อผ้าเด็ก | น้ำเย็น - 60 | ไม่ปั่น /800/1000/1200 | 5 | 5 |
| เสื้อขนเป็ด | สำหรับการซักผ้าขนเป็ด | น้ำเย็น - 40 | ไม่ปั่น - 800 | 2 | 2 |
| ผ้าขนสัตว์ | สำหรับการซักผ้าขนสัตว์ | น้ำเย็น - 40 | ไม่ปั่น - 800 | 2 | / |
| ซักด้วยลมร้อน | สำหรับการซักผ้าที่ต้องการขจัดกลิ่นและรอยยับ | - | - | / | 2 |
| อบแห้งอย่างเดียว | สำหรับการตากผ้าธรรมดา | - | ไม่ปั่น -1200 | 6 | 5 |
| ขจัดเชื้อโรค | สำหรับการซักผ้าที่ทนความร้อน | 60/90 | ไม่ปั่น /800/1000/1200 | 2 | 5 |
| ล้าง+ปั่นแห้ง | สำหรับการล้างและปั่นผ้า | -- | ไม่ปั่น -1200 | 10 | 5 |
| ล้างถังซัก | สำหรับการทำความสะอาดถังซักด้วยอุณหภูมิสูง | 60/90 | 800 | 0 | / |
| ปั่นหมาดอย่างเดียว | เพื่อการปั่นผ้า | -- | ไม่ปั่น -1200 | 10 | 5 |
| เสื้อเชิ้ต | สำหรับการซักเสื้อเชิ้ตและเสื้อผ้าฤดูร้อนบางๆ | น้ำเย็น - 40 | ไม่ปั่น - 1000 | 2 | 2 |
| ผ้าไหม | สำหรับการซักผ้าไหมและผ้าเนื้อละเอียดอื่นๆ | น้ำเย็น - 40 | ไม่ปั่น - 800 | 2 | / |
| ชุดชั้นใน | สำหรับการซักชุดชั้นใน | น้ำเย็น - 60 | ไม่ปั่น -1200 | 3 | 3 |

คำเตือน

- คุณไม่ควรเติมผงซักฟอกลงในช่องใส่ผงซักฟอกอีกหากผงซักฟอกนั้นใช้ไม่หมด อาจส่งผลให้ใช้ผงซักฟอกมากเกินไป ทำให้เกิดฟองล้น ล้างออกยาก และเกิดผลเสียอื่นๆ
- สำหรับเสื้อผ้าที่เปื้อนเล็กน้อย สามารถควบคุมระยะเวลาและประสิทธิภาพการซักในแต่ละรอบได้อย่างดี แต่สำหรับเสื้อผ้าที่สกปรกมาก คุณสามารถเติมผงซักฟอกเพิ่มตามความเหมาะสม ลดปริมาณผ้าที่ซัก หรือเลือกโปรแกรมที่มีระยะเวลาการทำงานนานขึ้นตามสภาพจริง
- เครื่องซักผ้านี้มาพร้อมกับฟังก์ชั่นการป้องกันการไม่สมดุลโดยการเปลี่ยนตำแหน่งและคลายผ้าหลายครั้ง ทำให้เวลาซักผ้านานขึ้น ซึ่งถือเป็นสภาวะปกติ
- โปรดอย่าสัมผัสเครื่องขณะกำลังอบผ้าเพื่อหลีกเลี่ยงการถูกลวก

## หมายเหตุเกี่ยวกับฟังก์ชันการอบแห้ง

### ☒ เสื้อผ้าที่ไม่ควรตากแห้ง

- ผ้าที่มีสัญลักษณ์ "ห้ามอบแห้ง"
- ผ้าขนสัตว์หรือผ้าแคชเมียร์หรือผ้าที่มีผ้าแคชเมียร์เพื่อหลีกเลี่ยงการหดตัว
- ผ้าที่บอบบาง (เช่น ผ้าไหม) เพื่อหลีกเลี่ยงรอยยับ
- ผ้าที่ทำจากโฟมยางหรือวัสดุที่คล้ายกัน
- ผ้าที่มีเจลจัดแต่งผมหรือวัสดุที่คล้ายกัน เพื่อหลีกเลี่ยงการเกิดก๊าซพิษ

### ☒ เสื้อผ้าที่ไม่ควรตากแห้ง

- ผ้าที่ผ่านการเคลือบด้วยตัวทำละลายไวไฟ (เช่น น้ำยาขจัดคราบและน้ำมันเบนซิน) เพื่อป้องกันการระเบิด
- เสื้อผ้าที่เปียกน้ำจนหยด เพื่อหลีกเลี่ยงการอบผ้าที่ไม่มีประสิทธิภาพและการสิ้นเปลืองเวลาและไฟฟ้า

### ⚠ หมายเหตุเกี่ยวกับฟังก์ชันการอบแห้ง

- เมื่อคุณใช้ฟังก์ชันการอบแห้ง ผ้าที่ต้องการอบแห้งควรอยู่ในความสามารถในการอบแห้งสูงสุดเพื่อประสิทธิภาพการอบแห้งที่ดี
- แรงดันน้ำต่ำและการไหลเข้าของน้ำที่ไม่ดีอาจส่งผลให้ประสิทธิภาพการอบแห้งลดลง

# ใช้งานเครื่องซักผ้า

- หากผ้าที่ต้องอบเกินความสามารถในการอบสูงสุด โปรดอบเป็นชุดๆ
- โปรดตรวจสอบว่าเสื้อผ้าเหมาะสำหรับการอบแห้งหรือไม่ก่อนใช้งานฟังก์ชันการอบแห้ง อย่านำเสื้อผ้าที่ทำจากวัสดุต่างกันมาผสมกันเพื่ออบแห้ง
- โปรดทำให้เสื้อผ้าที่ทำจากวัสดุพิเศษ (เช่น ผ้าฝ้ายและขนเป็ด) แห้งหลังจากเลือกโปรแกรมการซักที่เหมาะสม
- หากคุณต้องการอบผ้าที่ซักมือ โปรดเลือกรอบความเร็วสูงสุดในโปรแกรมซักเพื่อเพิ่มประสิทธิภาพและลดเวลาในการอบผ้า
- เมื่อเริ่มรอบการอบแห้ง รอบการปั่นจะเริ่มโดยอัตโนมัติเช่นกัน เวลาที่แสดงหมายถึงเวลาการอบที่เหลืออยู่ ในขณะที่เวลาการอบจริงจะขึ้นอยู่กับสภาพการกระจายตัวของเสื้อผ้าหลังการปั่น คุณสามารถเพิ่มหรือลดจำนวนเสื้อผ้าเพื่อเพิ่มประสิทธิภาพในการอบผ้าได้
- ในระหว่างรอบการอบแห้ง เวลาที่เหลือที่แสดงบนหน้าจอเป็นเพียงเวลาโดยประมาณ ระยะเวลาการอบแห้งจริงอาจจะนานหรือสั้นกว่านั้น ขึ้นอยู่กับความแตกต่างของวัสดุผ้าและระดับการอบแห้ง
- เสื้อผ้าที่ตากแห้งอาจยืดออกหรือหดตัวได้ในระดับต่างๆ ขึ้นอยู่กับวัสดุและองค์ประกอบของผ้า
- ห้ามสัมผัสหรือเปิดประตูในระหว่างการอบแห้งเพื่อหลีกเลี่ยงการถูกลวก
- เปิดประตูหลังจากเสร็จสิ้นรอบการอบแห้ง และนำเสื้อผ้าออกหลังจากเย็นลงแล้ว (โดยเฉพาะเสื้อผ้าที่มีซิปโลหะ) เพื่อหลีกเลี่ยงการถูกลวก
- ระยะเวลาการอบแห้ง หมายถึง เวลาที่เลือกใช้หรือเวลาที่ตั้งค่าโดยอัตโนมัติตามรอบการอบแห้ง

## อ้างอิงน้ำหนักผ้า (อบแห้ง)

|  |  |  |  |  |  |  |  |
|---|---|---|---|---|---|---|---|
| ชุดชั้นใน (ผ้าฝ้ายแท้ ประมาณ 50 g) | ผ้าขนหนู (ผ้าฝ้ายแท้ ประมาณ 70 g) | เสื้อยืด (ผ้าฝ้ายแท้ ประมาณ 150 g) | เสื้อเชิ้ต (ฝ้ายผสมประมาณ 200 g) | ถุงเท้า (ฝ้ายผสมประมาณ 50 g) | ผ้าอ้อม (ประมาณ 100 g) | เสื้อชั้นในแขนยาว (ผ้าฝ้ายแท้ ประมาณ 150 g) | ชุดทำงาน (ประมาณ 600 g) |

# ใช้งานเครื่องซักผ้า


## หมายเหตุเกี่ยวกับฟังก์ชันการอบแห้ง

### ☺ คำเตือน

- ใช้เวลา 60 นาทีในการเสร็จสิ้นรอบการซัก "ซักด่วน 15 นาที"' โดยเป็นเวลาสำหรับการซักและอบแห้งเสื้อเชิ้ตธุรกิจหรือชุดชั้นใน 2 ตัวที่มีน้ำหนักไม่เกิน 0.5 kg โปรดใช้เครื่องโดยให้มีน้ำหนักตามน้ำหนักที่แนะนำเพื่อให้การอบผ้ามีประสิทธิภาพสูงสุด
- เนื่องจากมีการอัพเกรดโครงสร้างและเทคโนโลยี จึงไม่จำเป็นต้องเลือกรอบการอบแห้งด้วยตนเองในเครื่องบางเครื่อง โหมดการอบผ้าและเวลาในการอบผ้าสามารถปรับได้โดยอัตโนมัติตามน้ำหนักของเสื้อผ้าเพื่อให้ได้ประสิทธิภาพการอบผ้าที่ดีที่สุด

## ข้อมูลเบื้องต้นเกี่ยวกับพื้นที่แสดงผล

รูปภาพต่อไปนี้เป็นตัวอย่างง่าย ๆ ของพื้นที่แสดงผล โปรดทราบว่ามีไว้เพื่อการอ้างอิงเท่านั้น และผลิตภัณฑ์จริงอาจแตกต่างกันไป

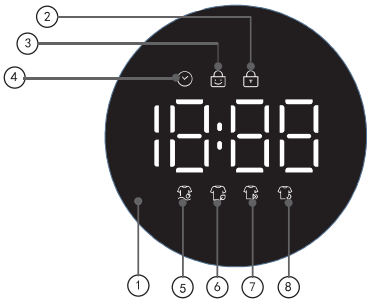


**①พื้นที่แสดงผล**
แสดงเวลาหน่วง เวลาที่เหลืออยู่ ข้อมูลค่าเดือน ฯลฯ

**②กลอนประตู**
หากประตูไม่ได้ปิดหรือล็อคอย่างถูกต้อง ไอคอนจะไม่สว่างขึ้น หากประตูล็อคตามปกติ ไอคอนจะสว่างขึ้นเสมอ

**③ล็อคป้องกันเด็ก**
หากไอคอนสว่างขึ้น แสดงว่าวงจรจะถูกล็อค ความพยายามใด ๆ ที่จะเปลี่ยนแปลงวงจรจะถือเป็นโมฆะ

**④ตั้งเวลาล่วงหน้า**
หากไอคอนกะพริบ แสดงว่าฟังก์ชันหน่วงเวลาได้เปิดใช้งานแล้ว เมื่อระยะเวลาหน่วงสิ้นสุดลง วงจรการซักที่เลือกในปัจจุบันจะหยุดลงโดยสมบูรณ์

**⑤เพิ่มรอบล้างน้ำ**
ฟังก์ชั่นนี้เปิดใช้งานตามค่าเริ่มต้น (ไฟติดเต็มที่) กดอีกครั้งเพื่อกำหนดปริมาณฟังก์ชั่น (ไฟติดครึ่งหนึ่ง) ไอคอนฟังก์ชันจะสว่างขึ้นหากคุณเลือก มิฉะนั้นจะไม่สว่างขึ้น

**⑥ลดกลิ่นอับ**
ไอคอนจะสว่างเต็มที่เมื่อเปิดใช้งานฟังก์ชัน เครื่องจะทำงานเป็นช่วงๆ หลังจากเสร็จสิ้นรอบการซัก คุณสามารถหยุดการทำงานได้ตลอดเวลา กดปุ่มอีกครั้งเพื่อปิดการทำงานของฟังก์ชัน (ไฟติดครึ่งหนึ่ง) เลือกฟังก์ชั่นป้องกันริ้วรอย และไอคอนจะสว่างขึ้น มิฉะนั้นไอคอนจะไม่สว่างขึ้น

**⑦ซักด่วน**
เมื่อฟังก์ชั่นเริ่มทำงาน เครื่องซักผ้าจะเร่งความเร็ว และเวลาที่แสดงบนพื้นที่แสดงผลจะเปลี่ยนไป หากคุณไม่ได้เลือกฟังก์ชั่น ไอคอนจะไม่สว่างขึ้น หากคุณเลือกรอบการทำงานที่ไม่รองรับฟังก์ชันนี้ ไอคอนฟังก์ชันนี้จะยังคงอยู่ในสถานะปิดไฟและไม่สามารถเลือกได้


**⑧กลางคืน**
เสียงขณะกดปุ่มจะไม่มีเสียง และความเร็วจะลดลง เลือกฟังก์ชั่นกลางคืน และไอคอนจะสว่างขึ้น ไม่เช่นนั้นมันจะไม่ติด

หมายเหตุ: เนื่องจากความแตกต่างของการกำหนดค่าของเครื่อง พื้นที่แสดงผลจึงมีไว้สำหรับการอ้างอิงเท่านั้น และผลิตภัณฑ์จริงอาจแตกต่างกันไป

## ■ การแนะนำฟังก์ชั่นอื่นๆ

### ปลดล็อคประตูฉุกเฉิน (ใช้ไม่ได้ในบางรุ่น)

- หากคุณต้องการถอดเสื้อผ้าออกเมื่อมีการตัดไฟเป็นเวลานาน ตรวจสอบให้แน่ใจว่าระดับน้ำในถังซักต่ำกว่าระดับที่ปลอดภัย อุณหภูมิต่ำกว่า 40°C และถังซักด้านในไม่หมุน จากนั้นถอดท่อระบายน้ำออกและลดระดับลง เปลี่ยนท่อเมื่อน้ำหมด
- เปิดฝาครอบปั๊มระบายน้ำที่มุมขวาล่างของด้านหน้า ดึงก้านลงเบาๆ เมื่อได้ยินเสียงเบาๆ ให้เปิดประตูแล้วนำออกหรือใส่เสื้อผ้า
- เปลี่ยนฝาครอบปั๊มท่อระบายน้ำ
- วิธีการนี้สามารถใช้ได้ในกรณีฉุกเฉินเท่านั้น

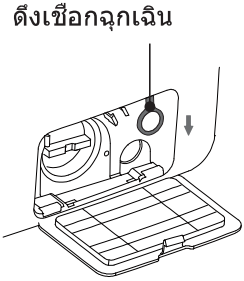


### ฟังก์ชันดำเนินการต่อ

- เครื่องนี้มีฟังก์ชันกลับมาทำงานต่อในกรณีที่ปิดเครื่อง หากไฟฟ้าขัดข้องหรือปลั๊กหลวมในกระบวนการของเครื่องจักร เครื่องสามารถจดจำสถานะการทำงานและกลับมาทำงานต่อได้เมื่อไฟฟ้ากลับมาแล้ว

# ใช้งานเครื่องซักผ้า

## การป้องกันความไม่สมดุล

- เมื่อเครื่องพร้อมจะปั่น เครื่องซักผ้าอาจใช้เวลาสักครู่เพื่อปรับสมดุลของเสื้อผ้าเนื่องจากความไม่สมดุลอย่างมาก
- หากหลังจากนั้นเสื้อผ้าในถังซักยังคงไม่สมดุล ความเร็วการปั่นอาจช้าลงเพื่อหลีกเลี่ยงการสั่นสะเทือนที่รุนแรง
- หากผ้าในถังซักน้อยเกินไป เครื่องอาจไม่ปั่นเนื่องจากการป้องกันที่ไม่สมดุล คุณควรเพิ่มผ้าในเครื่องเพื่อให้เครื่องปั่น

## สปริงเกอร์ (ใช้ไม่ได้ในบางรุ่น)

- เครื่องนี้ใช้เทคโนโลยีการจ่ายผงซักฟอกอัตโนมัติ น้ำจะไหลออกจากกล่องผงซักฟอกเพื่อส่งผงซักฟอกเข้าถังซักด้านใน นอกจากนี้ยังจะฉีดน้ำไปที่กระจกหน้าต่างสังเกตซึ่งมีผลดีกว่าในการทำความสะอาดโฟมและคราบบนเสื้อผ้าและหน้าต่าง สิ่งนี้จะทำให้กระบวนการซักสะอาดขึ้น และสร้างสภาพแวดล้อมการซักที่มีประสิทธิภาพสูง ประหยัดน้ำ และสะอาด!

**หมายเหตุ:** เนื่องจากการอัปเกรดรุ่นผลิตภัณฑ์ การกำหนดค่าฟังก์ชันอาจแตกต่างจากคำอธิบายนี้ โปรดใช้ฟังก์ชันรุ่นจริงเป็นมาตรฐาน!

# การซ่อมบำรุง

การดูแลรักษาเครื่องซักผ้าอย่างเหมาะสมจะช่วยยืดอายุการใช้งาน

**⚠ คำเตือน**

**ก่อนเริ่มทำการบำรุงรักษา กรุณาถอดปลั๊กไฟออกหรือตัดการเชื่อมต่อไฟฟ้าและปิดก๊อกน้ำ**

## ■ ทำความสะอาดถังซักภายใน


คราบสนิมจากโลหะที่เหลืออยู่ในถังควรทำความสะอาดทันทีด้วยผงซักฟอกที่ไม่มีคลอรีน ห้ามใช้ฝอยเหล็กโดยเด็ดขาด

## ■ ทำความสะอาดพื้นผิว


1. หากมีน้ำล้น ให้ใช้ผ้าแห้งเช็ดออกทันที ห้ามใช้ของมีคมกระแทกเครื่องซักผ้า
2. สามารถทำความสะอาดพื้นผิวได้ด้วยผงซักฟอกที่เป็นกลางไม่กัดกร่อนเจือจางเมื่อจำเป็น

# การซ่อมบำรุง


## ■ ทำความสะอาดปั๊มระบายน้ำ

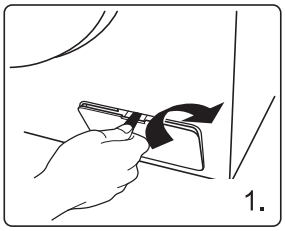


เปิดฝาครอบตัวกรองด้วยเครื่องมือ เช่น เหรียญ ตามทิศทางของกราฟิก

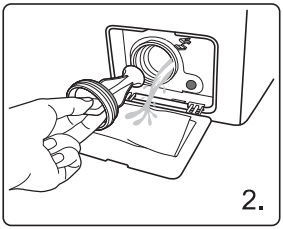


คลายเกลียวตัวกรองและใส่ใจกับน้ำที่เหลือโดยนำสิ่งแปลกปลอมออกจากตัวกรองปั๊มท่อระบายน้ำ

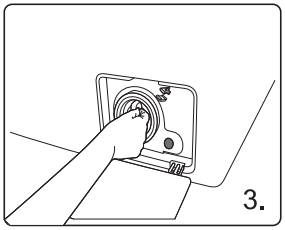



ติดตั้งตัวกรองอีกครั้ง

## ■ ทำความสะอาดตัวกรองวาล์วทางเข้า

ต้องทำความสะอาดตัวกรองน้ำเข้าหากไม่มีน้ำหรือน้ำไม่เพียงพอเมื่อเปิดก๊อกน้ำ


1. ลดแรงดันน้ำ :
   a. ปิดก๊อกน้ำ
   b. เลือกขั้นตอนใดก็ได้ ยกเว้นขั้นตอน "ปั่นหมาดอย่างเดียว"
   c. กดปุ่ม "เริ่ม/หยุด" และให้ขั้นตอนนี้ดำเนินไปประมาณ 40 วินาที
   d. ดึงปลั๊กไฟออก
2. ถอดท่อทางเข้าออกจากก๊อกน้ำ
3. ใช้น้ำล้างตัวกรอง
4. เชื่อมต่อท่อทางเข้าอีกครั้ง

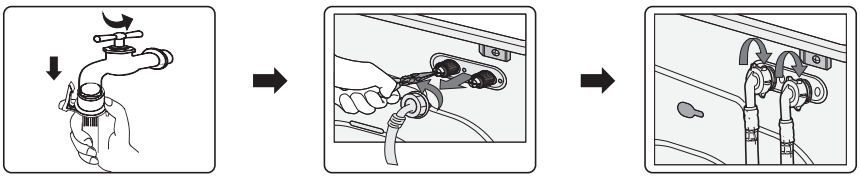

# การซ่อมบำรุง

## ■ ทำความสะอาดลิ้นชักผงซักฟอก

โครงสร้างของกล่องใส่ผงซักฟอกจะแตกต่างกันไปตามรุ่นของเครื่อง โปรดปฏิบัติตามขั้นตอนและวิธีการที่แสดงไว้ด้านล่างเพื่อทำความสะอาดกล่องผงซักฟอก:

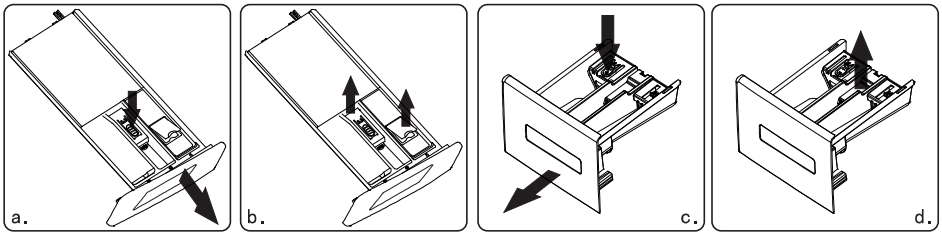


เครื่องจ่ายอัตโนมัติ ตัวจ่ายสารทั่วไป

■ หากมีผงซักฟอกหรือน้ำยาปรับผ้านุ่มหลงเหลืออยู่:
- ♦ เป็นรูป a(c) แสดงให้เห็น ดึงฝาและกดลิมิตร็อดลง ดึงลิ้นชักทั้งหมดออกมา
- ♦ เป็นรูป b(d) แสดงให้เห็น เปิดฝา (ยกออกอย่างช้าๆ) และนำแผ่นกาลักน้ำออกมา (ยกขึ้น)
- ♦ ใช้น้ำประปาหรือแปรงล้างกล่องผงซักฟอกและท่อกาลักน้ำ
- ♦ คืนค่าฝาครอบเคสและท่อกาลักน้ำ แล้วดันลิ้นชักเข้าไป

■ ผงซักฟอกเล็กน้อยจะไหลลงกล่องน้ำเมื่อวาดเคสซึ่งเป็นเรื่องปกติ พยายามอย่าเปิดและปิดกรณีผงซักฟอกสูญหายซ้ำ ๆ

■ ให้ความสนใจกับผงซักฟอกที่หกล้นซึ่งอาจก่อให้เกิดความไม่สะดวกในการปรับ (เช่น การเอียงและการเคลื่อนย้าย ฯลฯ ) เครื่อง (ดึงเคสออกก่อนทำการปรับ)

## ■ ฟื้นตัวจากการแช่แข็ง

เครื่องซักผ้าอาจแข็งตัวเมื่ออุณหภูมิลดลงต่ำกว่า 0°C

1. ปิดเครื่องซักผ้า และถอดปลั๊กไฟ
2. เทน้ำอุ่นเหนือก๊อกน้ำเพื่อคลายท่อน้ำ
3. ถอดท่อน้ำออกแล้วแช่ในน้ำอุ่น
4. เทน้ำอุ่นลงในถังซักแล้วปล่อยทิ้งไว้ประมาณ 10 นาที
5. เชื่อมต่อท่อน้ำเข้ากับก๊อกน้ำอีกครั้ง

**⚠ หมายเหตุ:**

1. เมื่อนำเครื่องซักผ้ากลับมาใช้ซ้ำ ตรวจสอบให้แน่ใจว่าอุณหภูมิโดยรอบสูงกว่า 0°C
2. หากเครื่องซักผ้าของคุณอยู่ในห้องที่มีโอกาสเกิดการแข็งตัวของน้ำได้ง่าย โปรดระบายน้ำที่เหลืออยู่ในท่อระบายน้ำและท่อทางเข้าออกให้หมดจด
3. โปรดติดต่อช่างเทคนิคหากเครื่องซักผ้าของคุณแข็งตัว

# การแก้ไขปัญหา

| ปัญหา | โซลูชั่น |
| --- | --- |
| มีน้ำบางส่วนค้างอยู่ในเครื่อง | นี่เป็นเรื่องปกติและเป็นผลจากการทดสอบน้ำที่ดำเนินการในโรงงาน |
| เครื่องซักผ้าไม่ทำงาน | ตรวจสอบว่าเสียบปลั๊กไฟดีหรือไม่<br>ตรวจสอบว่าก๊อกเปิดอยู่หรือไม่<br>ตรวจสอบว่ากดปุ่ม "เพาเวอร์" หรือไม่<br>ตรวจสอบว่ากดปุ่ม "เริ่ม/หยุดชั่วคราว" หรือไม่<br>ตรวจสอบว่าคุณสมบัติการตั้งเวลาเปิดใช้งานอยู่หรือไม่ |
| น้ำรั่ว | ตรวจสอบและยึดท่อทางเข้า<br>ทำความสะอาดท่อระบายน้ำและขอให้ผู้เชี่ยวชาญมาซ่อมแซมเมื่อจำเป็น |
| เสียงผิดปกติและการสั่นสะเทือนอย่างมาก | ตรวจสอบว่าถอดสลักเกลียวขนส่งออกแล้วหรือไม่<br>ตรวจสอบว่าขาปรับระดับได้ปรับระดับแล้วหรือไม่<br>ตรวจสอบว่ามีการติดตั้งเครื่องซักผ้าบนพื้นแข็งและได้ระดับหรือไม่<br>ตรวจสอบว่ามีปืนปักผมหรือสิ่งของที่เป็นโลหะอยู่ข้างในหรือไม่ |
| ไม่พอใจกับผลการซัก | เลือกขั้นตอนที่เหมาะสม<br>เติมผงซักฟอกในปริมาณที่เหมาะสมตามคำแนะนำในชุดผงซักฟอก |
| เครื่องไม่ตอบสนองหลังจากกดปุ่ม | ตรวจสอบว่าได้เปิดใช้งานคุณสมบัติ "ล็อคป้องกันเด็ก" แล้วหรือไม่<br>กดปุ่ม "เริ่ม/หยุดชั่วคราว" ก่อน จากนั้นจึงกดปุ่มอื่น ๆ |
| เวลาทำงานจริงของขั้นตอนไม่ตรงกับเวลาที่แสดง | ตรวจสอบว่าเสื้อผ้าในถังซักกระจายตัวเพียงพอหรือไม่<br>ตรวจสอบว่าน้ำระบายออกหรือไหลเข้าได้ดีหรือไม่ |
| เครื่องซักผ้าเติมน้ำขณะระบายน้ำ | ตรวจสอบว่าความสูงสูงสุดของท่อระบายน้ำต่ำกว่า 65 ซม. หรือไม่<br>ตรวจสอบว่าท่อระบายน้ำจุ่มอยู่หรือไม่ |

# การแก้ไขปัญหา

| หน่วยแสดงผล | แสดงว่า | โซลูชั่น |
|---|---|---|
| E 1 | เครื่องซักผ้าจะเต็มเมื่อเวลาผ่านไป | ตรวจสอบก๊อกน้ำว่าเปิดอยู่หรือไม่<br>ตรวจสอบแรงดันน้ำว่าต่ำเกินไปหรือไม่<br>ตรวจสอบว่าท่อน้ำมีการท่อน้ำมีการอุดตันหรือไม่ |
| E2 | การระบายน้ำตามเวลา | ตรวจสอบว่าปั๊มระบายน้ำอุดตันหรือไม่<br>ติดต่อช่างเทคนิคหากจำเป็น |
| E3 | ล็อคประตูชำรุด | ปิดประตูให้ดีอีกครั้ง<br>ตรวจสอบว่าเสื้อผ้าติดอยู่ระหว่างประตูและซีลหรือไม่<br>ติดต่อช่างเทคนิคหากจำเป็น |
| E4 | น้ำล้นแล้ว | เติมน้ำโดยอัตโนมัติจนกระทั่งระดับน้ำเหมาะสมกับกระบวนการซัก<br>ติดต่อช่างเทคนิคหากจำเป็น |
| E5 | มอเตอร์ไฟฟ้าขัดข้อง | โปรดติดต่อช่างเทคนิค |
| E6 | เครื่องทำความร้อนไม่ทำงาน | โปรดติดต่อช่างเทคนิค |
| E7 | มีเซ็นเซอร์อุณหภูมิผิดปกติ | โปรดติดต่อช่างเทคนิค |
| E8 | ซอฟต์แวร์/ฮาร์ดแวร์ที่ไม่มีใครเทียบได้บนเมนบอร์ดและแผ่นแปลงความถี่ | โปรดติดต่อช่างเทคนิค |
| E9 | ความล้มเหลวในการสื่อสาร | โปรดติดต่อช่างเทคนิค |
| E10 | อินเวอร์เตอร์ขัดข้อง | โปรดติดต่อช่างเทคนิค |
| E14 | ฮีตเตอร์อบแห้งทำงานล้มเหลว | โปรดติดต่อช่างเทคนิค |
| E15 | เซ็นเซอร์ความร้อนในช่องลมเป่าแห้งออกทำงานล้มเหลว | โปรดติดต่อช่างเทคนิค |

**หมายเหตุ:**
โปรดดูรุ่นที่ซื้อจริงสำหรับการแสดงข้อผิดพลาดที่นี่
รุ่นต่าง ๆ มีการแสดงข้อผิดพลาดที่แตกต่างกัน

# ภาคผนวก

## ■ ป้ายการดูแลรักษาผลิตภัณฑ์ผ้า


วัสดุคงทน


ถนอมผ้าละเอียดอ่อน


สามารถซักผ้าได้ที่อุณหภูมิ 90°C


สามารถซักผ้าได้ที่อุณหภูมิ 60°C


สามารถซักผ้าได้ที่อุณหภูมิ 40°C


สามารถซักผ้าได้ที่อุณหภูมิ 30°C


ผ้าอาจจะซักด้วยมือ


ซักแห้งอย่างเดียว


สามารถฟอกขาวได้ในน้ำเย็น


ห้ามฟอกขาว


สามารถรีดได้ที่อุณหภูมิสูงสุด 200°C


สามารถรีดได้ที่อุณหภูมิสูงสุด 150°C


สามารถรีดได้ที่อุณหภูมิสูงสุด 100°C


ห้ามรีด


สามารถซักแห้งได้โดยใช้ตัวทำละลายใดก็ได้


ซักแห้งด้วยเปอร์คลอไรด์ น้ำมันไฟแช็ค แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น


ซักแห้งด้วยน้ำมันเครื่องบิน แอลกอฮอล์บริสุทธิ์ หรือ R113 เท่านั้น


ห้ามซักแห้ง


วางราบให้แห้ง


สามารถแขวนให้แห้งได้


ตากให้แห้งบนไม้แขวนเสื้อ


ปั่นแห้ง ใช้อุณหภูมิปกติ


ปั่นแห้ง ลดอุณหภูมิ


ห้ามปั่นแห้ง

## ■ การคัดแยกเสื้อผ้า

- ไม่เกินความสามารถในการซักที่กำหนด
- นำสิ่งแปลกปลอมที่อยู่ในเสื้อผ้าออกให้หมด เช่น คลิป เหรียญ และอื่นๆ ในกรณีที่เสื้อผ้าและเครื่องเสียหาย
- ผูกเน็คไท ติดกระดุม ซิป และเย็บเสื้อผ้า ใส่สิ่งของชิ้นเล็ก ๆ (เช่น ผ้าเช็ดหน้า ถุงมือ ถุงเท้า ฯลฯ) เสื้อผ้าที่บิดและสวมใส่ได้ลงในตาข่ายซักก่อนซัก เสื้อผ้าในตาข่ายไม่ควรเกิน 400 g และซักร่วมกับเสื้อผ้าอื่นๆ
- ผสมเสื้อผ้าเล็กและเสื้อผ้าใหญ่เข้าด้วยกัน
- ปิดประตูและอย่าวางเสื้อผ้าไว้ระหว่างประตูกับแหวนซีล

## ■ ใส่เสื้อผ้าที่เป็นระเบียบ

- จัดเรียงเสื้อผ้าตามข้อมูลการซักที่ผู้ผลิตระบุไว้ เช่น ป้ายการซัก ประเภทสิ่งทอ สี และอุณหภูมิการซักที่กำหนด เป็นต้น
- ตรวจสอบว่าสีเสื้อผ้าจางลงในการซักครั้งแรกหรือไม่
- อย่าใส่เสื้อผ้าเข้าไปในเครื่องเป็นเวลานาน เพราะอาจเกิดเชื้อราและทำให้เกิดรอยด่างได้ โปรดล้างให้ทันเวลา
- โปรดซักเสื้อผ้าตามอุณหภูมิที่ควบคุม มิฉะนั้นอาจทำให้สีเปลี่ยนหรือเสียรูป
- ห้ามซักเสื้อผ้าหรือผลิตภัณฑ์กันน้ำ (เช่น ชุดสกี เสื้อกันฝน และผ้าม่าน เป็นต้น)

# ภาคผนวก

## ■ คำเตือนเกี่ยวกับไฟฟ้า

เพื่อหลีกเลี่ยงไฟไหม้ ไฟฟ้าช็อต และอุบัติเหตุอื่น ๆ โปรดจำคำเตือนต่อไปนี้:

- ใช้เฉพาะแรงดันไฟฟ้าที่ระบุบนฉลากแหล่งจ่ายไฟเท่านั้น หากคุณไม่ทราบแรงดันไฟฟ้าที่บ้าน โปรดติดต่อสำนักงานไฟฟ้าในพื้นที่
- เมื่อคุณใช้ฟังก์ชันการทำความร้อน กระแสไฟฟ้าสูงสุดที่ไหลผ่านเครื่องซักผ้าจะสูงถึง 10A ดังนั้น โปรดตรวจสอบให้แน่ใจว่าหน่วยจ่ายไฟ (กระแส แรงดันไฟฟ้า และสายเคเบิล) สามารถตอบสนองความต้องการโหลดปกติสำหรับเครื่องได้
- ป้องกันสายไฟอย่างเหมาะสม สายไฟต้องยึดอย่างดีเพื่อไม่ให้คนหรือสิ่งอื่นสะดุดและเกิดความเสียหาย ต้องให้ความสนใจเป็นพิเศษกับตำแหน่งปลั๊ก
- อย่าทำให้เต้ารับติดผนังมีไฟมากเกินไปหรือขยายสายเคเบิล การโหลดสายไฟมากเกินไปอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้ อย่าดึงปลั๊กไฟออกด้วยมือที่เปียก
- เพื่อความปลอดภัยของคุณ จะต้องเสียบปลั๊กไฟเข้ากับเต้ารับที่มีสายดิน ตรวจสอบอย่างรอบคอบและให้แน่ใจว่าซ็อกเก็ตของคุณต่อสายดินอย่างถูกต้องและเชื่อถือได้

# ภาคผนวก

## ■ การปกป้องสิ่งแวดล้อม

- เครื่องซักผ้าผลิตจากวัสดุรีไซเคิล หากคุณตัดสินใจที่จะทิ้งเครื่องซักผ้านี้ โปรดปฏิบัติตามกฎข้อบังคับในการกำจัดขยะในท้องถิ่น ตัดสายไฟเพื่อไม่ให้เครื่องซักผ้าเชื่อมต่อกับแหล่งจ่ายไฟได้ ถอดประตูออกเพื่อไม่ให้สัตว์เล็กและเด็กติดอยู่ภายในเครื่องซักผ้า
- ห้ามให้ผงซักฟอกเกินปริมาณที่แนะนำในคำแนะนำของผู้ผลิตผงซักฟอก
- ใช้ผลิตภัณฑ์ขจัดคราบและรอยเปื้อนก่อนรอบการซักเฉพาะเมื่อจำเป็นเท่านั้น
- ประหยัดน้ำและไฟฟ้าด้วยการซักเต็มถังเท่านั้น (ปริมาณที่แน่นอนขึ้นอยู่กับโปรแกรมที่ใช้)
- การกำจัดผลิตภัณฑ์นี้อย่างถูกต้อง



เครื่องหมายนี้ระบุว่าไม่ควรทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือนอื่น ๆ ทั่วทั้งสหภาพยุโรป เพื่อป้องกันอันตรายที่อาจเกิดขึ้นต่อสิ่งแวดล้อมหรือสุขภาพของมนุษย์จากการกำจัดของเสียที่ไม่สามารถควบคุมได้ ให้รีไซเคิลอย่างมีความรับผิดชอบเพื่อส่งเสริมการนำทรัพยากรวัสดุกลับมาใช้ใหม่อย่างยั่งยืน หากต้องการคืนอุปกรณ์ที่ใช้แล้ว โปรดใช้ระบบการส่งคืนและการรับคืนหรือติดต่อผู้ค้าปลีกที่คุณซื้อผลิตภัณฑ์ พวกเขาสามารถนำผลิตภัณฑ์นี้ไปรีไซเคิลได้อย่างปลอดภัยต่อสิ่งแวดล้อม

**⚠หมายเหตุ:**


**1. ทดสอบระดับประสิทธิภาพการใช้พลังงานภายใต้ขั้นตอน "▭ ผ้าฝ้าย" (ปรับที่ 40°C + รอบต่อนาทีสูงสุด)**

ทำให้ชีวิตของคุณมีสุขภาพดี และสวยงามทุกวัน!

# WASHER DRYER

coway

CWD10060T5-TH

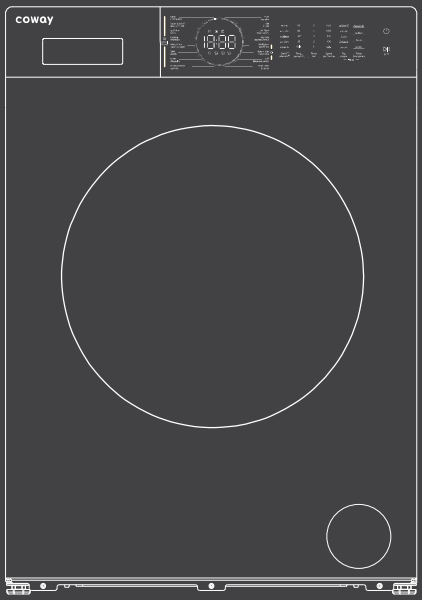


## USER MANUAL ▶

This instruction manual contains important information and recommendations that we would advise you to comply with to obtain the best results from the washer dryer.

# *Contents*

Products Specification..... 1

Safety Precaution..... 2

Important Hints..... 4

Overview of Washing Machine..... 5

Install Washing Machine..... 6

Operate Washing Machine.....10

Maintenance..... 20

Troubleshooting..... 23

Appendix.....25

Products Fiche.....27

_____
*Model number*


_____
*Serial number*

_____
*Date of purchase*

## *Products Specification*

| Model | CWD10060T5-TH |
|---|---|
| Voltage | 220-240V~ / 50Hz |
| Water Pressure | 0.05-0.8MPa |
| Washing/Spin Capacity | 10.0/10.0kg |
| Drying Capacity | 6.0kg |
| Washing Heating Power | 1700-1900W |
| Drying Power | 1350-1450W |
| Outer Dimension (W*D*H)mm | 595*620*850mm |

## Circuit Diagram

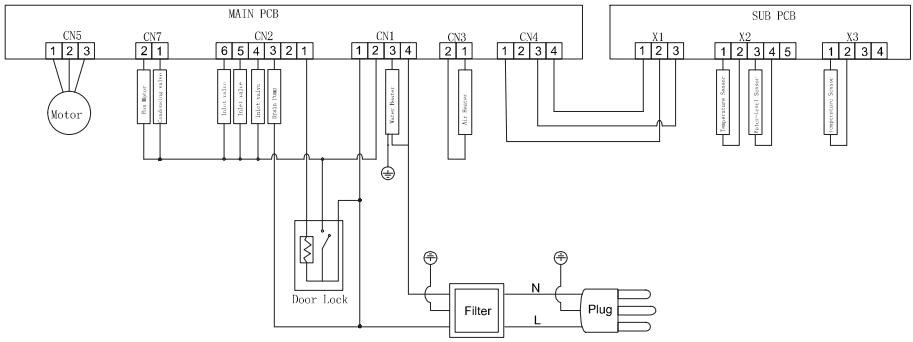


## ⚠ NOTE:

1. All the pictures in the manual are used for schematic only.It may be different from the machine you buy.
2.The actual function and the data in kind prevail.

## *Safety precaution*

# ⚠ WARNING

To reduce the risk of fire,electric shock,or injury to persons when using your appliance,follow basic precautions,including the following

•If the power cord is damaged,it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid the hazard.
•The new hose-sets supplied with the washer are to be used and that old hose-sets should not be reused.
•This appliance is not intended for use by persons(including children)with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.(This warning is not for EUROPEAN market)
•This appliance can be used by children aged from 8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance.Cleaning and user maintenance shall not be made by children without supervision.(This warning is for EUROPEAN market)
•Carpet does not obstruct the opening for washing machine with ventillation openings in the base.
•Children of less than 3 years should be keep away unless continuously supervised.
•This appliance is inteded to be used in household and similar applications such as:
-staff kitchen areas in shops,offices and other working environments;
-farm houses
-by clients in hotels,motels and other residential type environments;
-bed and breakfast type environments;
-areas for communal use in blocks of flats or launderettes.
•Take care that power voltage and frequency shall be identical to those of washing machine.
•To ensure your safety,power cord plug must be inserted into an earthed socket.Check carefully and make sure that your socket is proper and earthed reliably.
•Do not use any socket with rated current less than that of washing machine.
•Do not operate your washer when parts are missed or broken.
•Never pull out power plug with wet hands.

## *Safety precaution*

•Replace immediately worn power cord,loose plugs/power sockets.

•Unplug your washer before cleaning or making any repair.

•Please check whether the water inside the drum has been drained before opening the door.Please do not open the door if there is any water visible.

•Glass door may be very hot duing the operation.Keep kids and pets far away from the washer during the operation.

•Make sure that the water and electrical device must be connected by a qualified technician in accordance with the manufacturer's instruction and local safety regulations.

•Before operating this machine,all packages and transit bolts must be removed.Otherwise,the washing machine may be seriously damaged while washing the clothes.

•Flammable and explosive or toxic sovents are forbidden.Gasoline and alcohol etc.Shall not be used as detergents.Please only select the detergents suitable for machine washing.

•Be careful of scald while the washer drainning hot washing water.

•Never unplug your washer by pulling on the supply cord.Always grasp the plug firmly and pull straight out from the outlet.

•If your old appliance is not being used anymore,we recommend that you remove the door and cut off the supply cord.

•Packing materials may be dangerous to the kids.Please keep all packing materials(plastic bags,foams etc)far away from the kids.

•Do not climb up and sit on top cover of the machine.

•Pets and kids may climb into the machine.Check the machine before every operation.

•Do not lean against the door of the washer.

## *Important Hints*

•The household washing machine isn't intended to be built-in.

•This washing machine is for indoor using only.

•Make sure that all pockets are empty.Sharp and rigid items such as coin,brooch,nail,screw or stone etc.May cause serious damages to the washer.

•Please remember to disconnect water and power supply immediately after the clothes are washed.

•The washing machine shall not be installed in bath room or very wet rooms as well as in the rooms with explosive or caustic gases.

•Before washing the clothes at first time,the washing machine shall be operaed in one round of the whole procedures without the clothes inside.

•Do not repair or replace any part of the washer unless you have been specifically recommended in the user-repair instructions and you have the knowledge and skills to make it.

•It is forbidden to wash carpets and bras inset with steel wire.


•Never refill water by hand during washing.


•When handing the machine,the accumulated water shall be drained out of the machine firstly.Handle the machine carefully.Never hold each protruded part on the machine while lifting.Machine door can not be used as the handle during the conveyance.

•The washing machine with single inlet valve only can be connected to the cold water supply.The washing machine with double inlet valves can be connected to the hot water and cold water supply.

# SAVE THESE INSTRUCTIONS

## THE MACHINE IS HOUSEHOLD USE ONLY

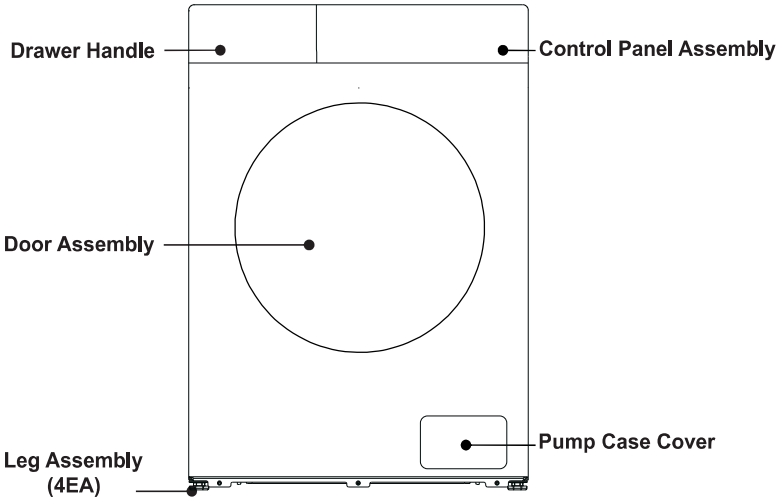

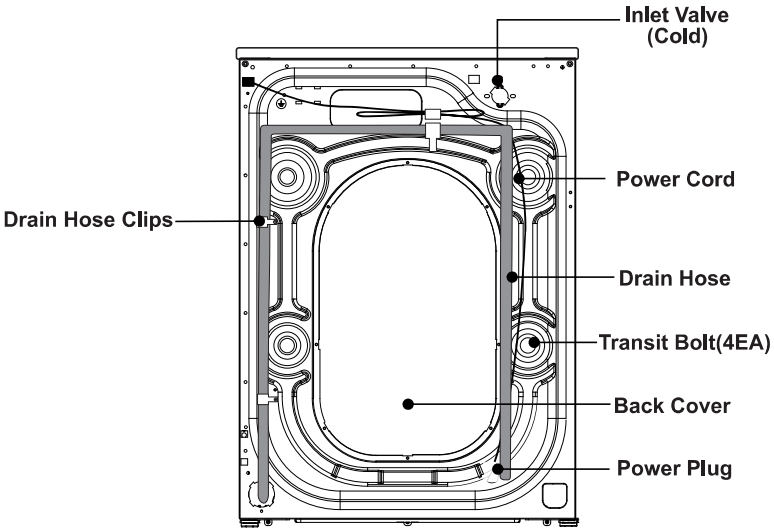
* The illustration is a simple example of the model control panel.
The illustration is for reference only. Please refer to the actual effect.

# Install Washing Machine

**⚠ NOTE**

We recommend that your new washer should to installed by a qualified appliance technician.If you feel that you have the skills to install the washer, please read the installation instructions carefully before installing.


## ■ Tools needed

You may need to have the following tools to help you in the installation of your washer:

- •Scissors
- •Pliers
- •Standard Screwdriver
- •Gloves
- •Spanner

## ■ Unpacking the washing machine

Unpacking your washing machine and check if is there any damage during the transportation. Also make sure that all the the items(as shown below) in the attached bag are received. If there is any damage to the washing machine during the transportation,or any item is missing or damaged,please contact the local dealer immediately.

| Cold Water Hose (Connect to cold water supply) | Hole Cover (4EA) (Used to plug transit bolt holes) | Drain Hose Support Bracket (Used to loop the end of drain hose) | Spanner (1.Used to adjust the bottom of the machine, 2.Remove the transport bolt on the back of the machine) |
|---|---|---|---|
|  |  |  |  |

## ■ Select the location

Before installing the washer,the location characterized as follows shall be selected:

-Rigid,dry,and level surface(if not level,please make it level with reference to the following figure “Adjustable Leg”).

-Avoid direct sun light.

-Sufficient ventilation.

-The ambient temperature shall be between 0-40°C.

-The ambient humidity shall be below 95%(When the temperature is 25°C).

-Keep far away from the heat resources such as coal or gas.Make sure that the washer will not stand on power cord.Do not install the washer on the carpet floor.


-Recommended installation with a minimum clearance of 3 mm on both sides and 2 mm at the top.

# Install Washing Machine

## ■ Remove transit bolts

Before using this washing machine,transit bolts must be removed from the backside of this machine.Please take the following steps to remove the bolts:

⚠ Keep the transit bolts properly for futher use.

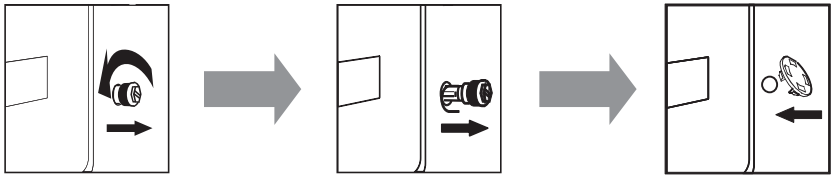


1.Loosen the four transit bolts with a spanner

2.Take each bolt head and pull it through the wide part of the hole.Repeat for each bolt.


3.Fill the holes with the supplied plastic covers.

## ■ Level the washing machine

Install or place the washing machine under the environmental temperature of not less than 0°C but not outdoors, for it may damage the programming controller.

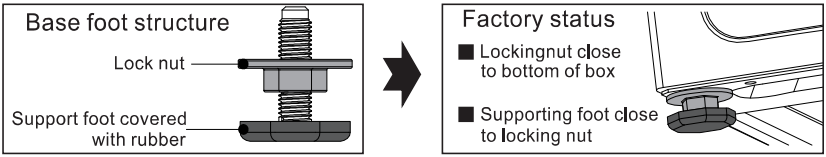


⚠ **Note:**In order to facilitate installation,the factory stutus of the foot may not be all locked,please be sure to lock all four feet before adjusting the level

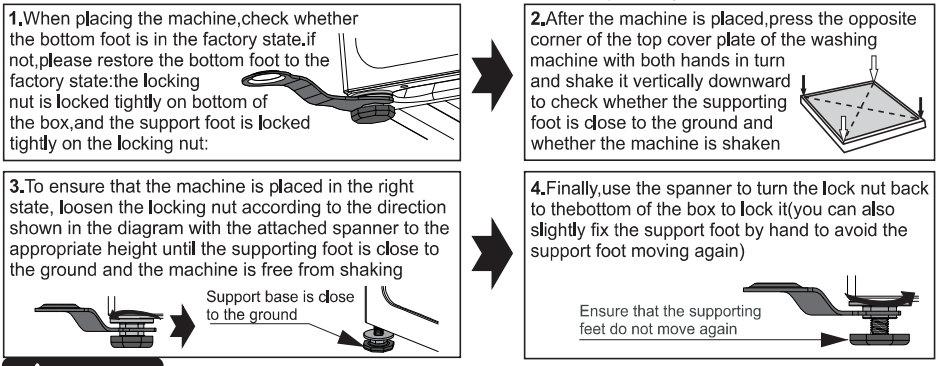


**⚠ CAUTION**

**1.**The machine must be perfectly leveled and stabilized when the four supporting feet are close to the ground. Lower the feet as much as possible on the basis that the machine is leveled.

**2.**Improper leveling adjustment may cause loud noise, machine vibrating, machine displacement and other abnormal phenomena.


**3.**Air-vent is designed on the bottom of the machine (prevent blockage). Install the washing machine on solid, smooth and skid-proof ground. Do not place the washing machine on soft blanket or wooden floor, or various desktops and stands, in case of unnecessary injury.

# Install Washing Machine


The provided water hose may differ depending on the model.Please follow the instuction according to the provided water hose.

## ■ Connect the inlet hose


Connecting to a threaded water tap

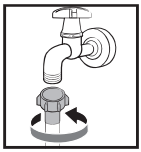

1. Connect the water hose to the water tap, and then turn the connector clockwise as shown.

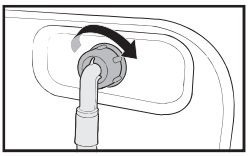


2. Connect the other end of the water hose to the inlet valve on the back of the washing machine. Turn the hose clockwise to tighten.

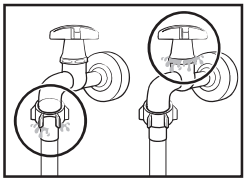


3. Open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat the steps above.


Connecting to a non-threaded water tap

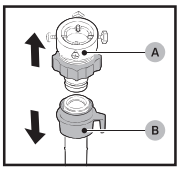



1. Remove the **adaptor(A)** from the water **hose(B).**

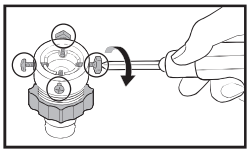


2. Use a Phillips screwdriver to loosen four screws on the adaptor.

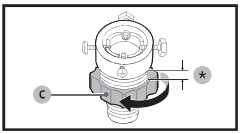


3. Hold the adaptor and turn **part(C)** in the arrow direction to loosen it by5mm(*).

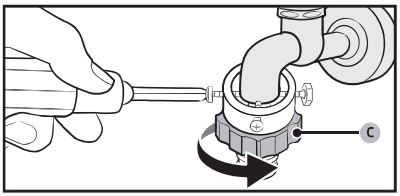



4. Insert the adaptor onto the water tap,and then tighten the screws while lifting the adaptor.
5. Turn **part(C)** in the arrow direction to tighten it.

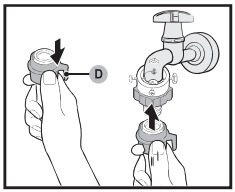


6. While pulling down **part(D)** on the water hose, connect the water hose to the adaptor. Then,release **part(D)**. The hose fits into the adaptor with a clicking sound.
7. To complete connecting the water hose,see 2 and 3 on the"**Connecting to a threaded water tap**" section.


**⚠ NOTE**

• If there is any leakage with hose after the connection,then repeat the steps to connect inlet hose.
• Do not bend the hose.
• Check for inlet hose connection carefully before using the washer each time.

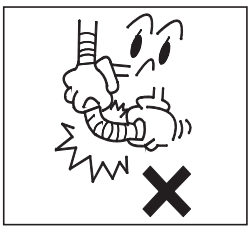


# Install Washing Machine

## ■ Connect the drain hose

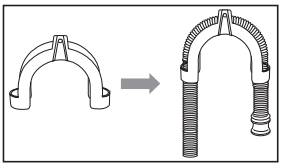


• The drain hose shall be placed at a height of 65-100cm above the floor, otherwise, it can cause poor drainage.
• You can use the supplied drain hose support bracket to loop the drain hose down into the wall,standpipe or laundry tub.
• Take care to ensure all hose connections are tight.

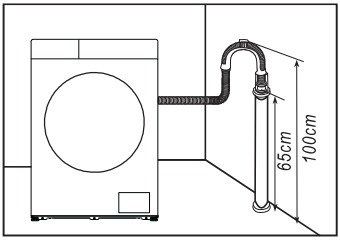


**⚠ NOTE**

• The end of the drain hose cannot be immersed in water for the washer to work properly.

## ■ Connect the power

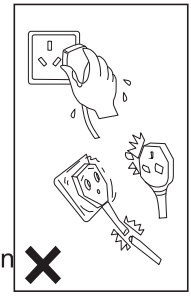

• As the maximum current through the unit is 10A when you are using its heating function, please make sure the power supply system (current, power voltage and wire) at your home can meet the normal loading requirements of the electrical appliances.
• Please connect the power to a socket which is correctly installed and properly earthed.
• Make sure the power voltage at your plate is same to that in the machine's rated voltage.
• Power plug must match the socket.
• Do not use multi-purpose plug or socket as extension cord.
• Do not connect and pull out plug with wet hands.
• When pulling out the plug, hold the plug tightlly and then pull it out. Do not pull power cord forcibly.
• If power cord is damaged or has any sign of being broken, special power cord must be selected or purchased from its manufacturer or service center for replacement.

**⚠ WARNING**

**1.**This machine must be earthed properly. If there is any short circuit, earthing can reduce the danger of electrical shock.
**2.**Washing machine shall be operated in a circuit separate from other electrical appliances. Otherwise, power protector may be tripped or fuse may be burned out.

⚠ NOTE

**Ensure your machine is installed properly before use.**

Before washing clothes for the first time, you must run a complete cycle without clothes.

**To do this:**

**1.**Connect power source and water.

**2**.Put a little detergent(about 10g) into the drawer and close it.

**3.**Press the ⏻ **On/Off** button.

**4.**Turn the knob to be "Cotton"program.

**5.**Press the ⏯ **Start/Pause** button.


This will remove any water from the manufacturer's test run remaining in the machine.

## ■ Sort clothes

Please read this recommendation carefully to avoid the troubles of washing machine and damages of clothes.

1.Do not put clothes over load the rated capacity.


2.Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.

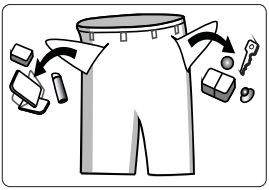

3.Make sure all the pockets are empty, Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.

4.Close any zips, fasten hooks etc. before washing.

5.For clothes to be washed, they should be sorted according to color. Dark clothes should not be washed with light clothes especially.

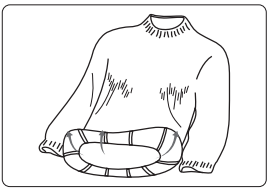

6.Badly soiled areas, stains etc. should be pre-treated with liquid detergent, stain removers etc.

7.Turn over the clothes which pill easily and is with woolen surface before putting them into the machine.

⚠**NOTE:Make sure that no clothes is caught between the door and the seal.**

## ■ Put detergent


• Pull out the detergent drawer.

**Prewash compartment:**Apply prewash detergent or starch. Used only for prewash programs.

**Main-wash compartment:**Apply main-wash detergent,water softener,soaking detergent,bleach,and/orstain removers.

**Softener compartment:**Apply additives such as fabric softener.Do not exceed the **max line.**

## *Operate Washing Machine*

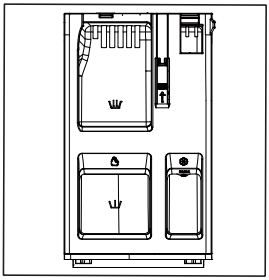

• Add fabric softener into compartment .
• Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.
• The amount of detergent/softener used should be added only once at a time. Please refer to the manufacturer's instructions for the dosage of detergent/softener.
• Excessive detergent will produce a lot of foam, easy to overflow,and will affect its dissolution, resulting in rinsing difficulties.

# Operate Washing Machine

**NOTE**


1. Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.
2. The amount of detergent/softener used should be added only once at a time. Please refer to the manufacturer's instructions for the dosage of detergent/softener.
3. Do not open the detergent drawer while the washing machine is operating.
4. To prevent the compartment clogging,concentrated or highly-enriched agents(fabric softener or detergent) must be diluted with water before being applied.
5. Liquid level do not over the MAX of Distributor box.

## ■ Washing steps


①Connect inlet hose and turn on the tap




②Insert power plug



③Place drain hose



④Open the door, put in clothes and shut it down; put detergent in detergent case and close the case;

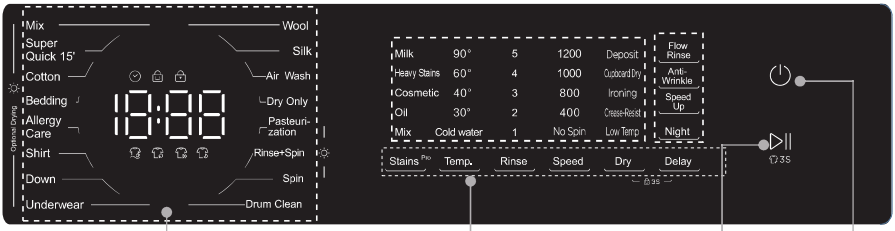


⑥ Select program as needed


⑦ Personalized Settings such as "stain type, wash temperature and rinse times"

⑧ Press down Start button.

⑤ Press down power key

## Introduction to Control Panel

The following picture is a simple example of the washing machine control panel. Please note that it is provided for reference only and the actual products may vary. (No further notice will be made if the panel upgrades.)

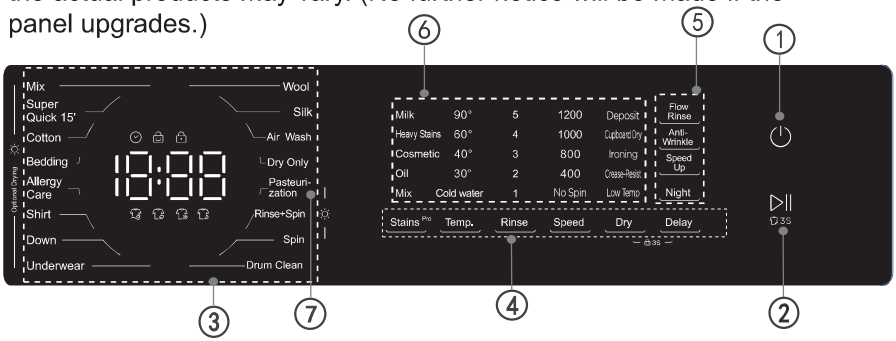


### ① Power Button

- Press and hold the "Power" button for 2s to turn on or turn off the machine.
- The washing machine will automatically shut down if there is no further operation within 10 minutes after the machine is powered on and turned on.

### ② Start/Pause Button

- When the washing machine is in the standby status, press the button to start or stop it.
- Long press this button for 3s to unlock the door for loading during washing;
- For loading clothes during washing, do not open the door by force when the water level in the drum is high or the water temperature is hiah, which is not safe.

### ③ Cycle Display Area

Spin the control knob to select the cycle you need.
The cycle corresponding to the current position of the control knob will be selected by default when you turn on the machine.

### ④ Functional Button Area

- In this area, when the function is selected, the corresponding parameters will be shown on the upper display screen.
  The selected icon will light up fully. The optional icon will light up half and the non-optional icon will not light up.

## Introduction to Control Panel

- Temp.
  Press the button to choose temperature among Cold Water, 30°C, 40°C , 60°C and 90°C . The lowest and highest temperatures set in different cycles vary.
- Rinse
  Press the button to choose among 1 time, 2 times, 3 times, 4 times and 5 times. The minimum and maximum rinsing times set in different cycles vary.
- Speed
  Press the button to choose the speed among No Spin, 400, 800, 1000, 1200. The lowest and highest speeds set in different cycles vary.
- Dry
  Press the button to choose among Cupboard Dry, Deposit, Low Temp., Crease-Resist, Ironing and No Drying. If Cupboard Dry is selected, its icon will light up fully and the others will light up half.
- Delay
  Select Delay and its icon will light up simultaneously. If the icon is not selected, the icon will not light up. The display area will display delay options from 3h to 24h. Press Delay again can turn off the delay function when displayed 24h.
- Child Lock
  Press the Dry and Delay buttons at the same time and hold them for 3s to launch Child Lock. The icon of "Child Lock" on the display screen will light up simultaneously with notification music.

### ⑤ Flow Rinse, Anti-Wrinkle, Speed Up, Night

- Flow Rinse: off (half lit), on (fully lit). Its icon will light up when the function launches.
- Anti-Wrinkle: off (half lit), on (fully lit). Its icon will light up when the function launches. The washing machine runs intermittently after the wash is finished to reduce fabric wrinkles and avoid unpleasant smells.
- Speed Up: off (half lit), on (fully lit). Its icon will light up when the function launches. The washing machine accelerates and the time displayed on the display area changes. The cycle speed remains the default if you don't select this function.
- Night: off (half lit), on (fully lit). Its icon will light up when the function launches. Except for warning alerts, the sound of buttons and notifications will be mute and the speed will be lower.

## Introduction to Control Panel

### ⑥ Display Screen

- Display corresponding parameters of the current cycle, such as stains, temperature, rinsing times, speed, and drying.
- (Delay Time) The corresponding time is shown on the screen of the control knob and its icon will light up when the function launches.

### ⑦ Pasteurization

- Pasteurization: Your clothes can be sanitized and deodorized in 60°C water. If your clothes use heat-resisting material, you can select 90°C water for thorough sterilization.

## Introduction to Washing Cycles

**Washing Cycles Guide**

| Cycle | Suitable Fabrics for Washing | Optional Temperature (°C ) | Optional Speed (r/min) | Suggested Max. Wash+Spin Capacity (kg) | Suggested Max. Drying Capacity (kg) |
|---|---|---|---|---|---|
| Mix | For the mixed wash of cotton and chemical fiber clothes | Cold water ~ 40 | No Spin ~ 1200 | 6 | 5 |
| Super Quick 15' | For the wash of lightly soiled clothes, light summer clothes and newly bought clothes | Cold water ~ 40 | No Spin ~ 1000 | 2 | 1 |
| Cotton | For the wash of cotton fabrics | Cold water ~ 90 | No Spin ~ 1200 | 10 | 6 |
| Bedding | For the wash of bedding/home textile items | Cold water ~ 60 | No Spin ~ 1200 | 6 | 4 |
| Allergy Care | For the wash of children's clothes | Cold water ~ 60 | No Spin/800/1000/1200 | 5 | 5 |
| Down | For the wash of down fabrics | Cold water ~ 40 | No Spin ~ 800 | 2 | 2 |
| Wool | For the wash of wool fabrics | Cold water ~ 40 | No Spin ~ 800 | 2 | / |
| Air Wash | For the wash of clothes that need to remove odors and wrinkles | - | - | / | 2 |
| Dry Only | For the drying of normal clothes | - | No Spin ~ 1200 | 6 | 5 |
| Pasteurization | For the wash of heat-resisting fabrics | 60/90 | No Spin/800/1000/1200 | 2 | 5 |
| Rinse+Spin | For the rinse and spin of clothes | -- | No Spin ~ 1200 | 10 | 5 |
| Drum Clean | For high-temperature cleaning of the drum | 60/90 | 800 | 0 | / |
| Spin | For the spin of clothes | -- | No Spin ~ 1200 | 10 | 5 |
| Shirt | For the wash of shirts and light summer clothes | Cold water ~ 40 | No Spin ~ 1000 | 2 | 2 |
| Silk | For the wash of silk and other delicate fabrics | Cold water ~ 40 | No Spin ~ 800 | 2 | / |
| Underwear | For the wash of underwear | Cold water ~ 60 | No Spin ~ 1200 | 3 | 3 |

Reminder

- You'd better not add more detergent to the detergent drawer if it's not used up. This may lead to the excessive use of the detergent, causing foam overflow issues, difficult rinsing and other adverse consequences.
- For lightly soiled clothes, the washing time and performance of each washing cycle can be well controlled. But for heavy soiled clothes, you can add more detergent as appropriate, reduce the wash load or select a cycle with a longer operating time according to the actual condition.
- This washing machine is equipped with an unbalanced protection function by repositioning and loosing the clothes several times, leading to longer laundry time, which is a normal condition.
- Please don't touch the machine while running the drying cycle to avoid burns.

## Note of Drying Function

### ☒ Clothes That Should Not Be Dried

- Fabrics with the symbol of "Do Not Dry".
- Wool or cashmere or fabrics with cashmere to avoid shrinkage.
- Delicate fabrics (for example, silk) to avoid wrinkles.
- Fabrics with foamed rubber or similar materials.
- Fabrics with hair gel or similar materials to avoid the production of toxic gases.

### ☒ Clothes That Should Not Be Dried

- Fabrics treated with flammable solvent (such as stain remover and gasoline) to avoid explosion;
- Wet dripping clothes to avoid poor drying performance and the waste of time and electricity.

### ⚠ Note of Drying Function

- When you use the drying function, the laundry that needs to be dried should be within the maximum drying capacity for good drying performance.
- Low water pressure and poor water inflow may lead to poor drying performance.

- If the laundry that needs to be dried exceeds the maximum drying capacity, please dry them in batches.
- Please check if the clothes are suitable for drying before using the drying function. Don't mix clothes with different materials for drying.
- Please dry clothes with special materials (such as cotton and down) after selecting the corresponding washing cycle.
- If you want to dry hand-washed clothes, please select the highest speed of the cycle to improve performance and reduce drying time.
- When the drying cycle begins, the spin cycle will be launched automatically as well. The displayed time refers to the remaining drying time, while the actual drying time depends on the clothes' distribution condition after spin. You can increase or decrease clothes to improve the drying performance.
- During the drying cycle, the remaining time shown on the screen is approximate. The actual drying time can be longer or shorter according to the difference in fabric materials and drying level.
- Based on the material and composition of the fabric, the dried clothes may be stretched out of shape or shrunk to various degrees.
- Do not touch or open the door during drying to avoid burns.
- Open the door after completing the drying cycle and take the clothes out after cooling (especially the clothes with metal zippers) to avoid burns.
- The drying time means the selected time or the time set automatically by the cycle.

## Reference for the Weight of Fabrics (Dry)

|  |  |  |  |  |  |  |  |
|---|---|---|---|---|---|---|---|
| Underwear (Pure cotton, about 50 g) | Towel (Pure cotton, about 70 g) | T-shirt (Pure cotton, about 150 g) | Shirt (Blends, about 200 g) | Socks (Blends, about 50 g) | Diaper (About 100 g) | Long-Sleeved Underwear (Pure cotton, about 150 g) | Work Clothes (About 600 g) |


## Note of Drying Function

### Reminder

- It takes 60 minutes to complete the "Super Quick 15'" cycle,referring to the time of washing and drying two business shirts or underwear under 0.5 kg. Please use the machine within the suggested weight of clothes to ensure the drying performance.
- Due to the structural and technological upgrade, there is no need to select the drying cycle manually in some machines. The drying mode and time can be adjusted automatically according to the weight of the clothes to achieve the best drying performance.

## Introduction to Display Area

The following picture is a simple example of the display area. Please note that it is provided for reference only and the actual products may vary.

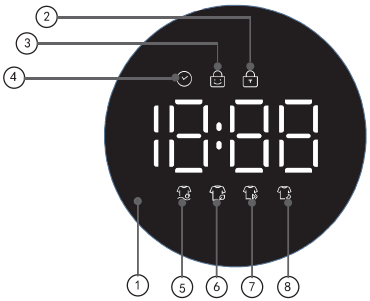


### ① Display Area

Show delay time, remaining time, warning information, etc.

### ② Door Lock

If the door is not closed or not locked normally, the icon will not light up. If the door is locked normally, the icon will always light up.

### ③ Child Lock

If the icon lights up, it means the cycle will be locked. And any attempt to change the cycle will be invalid.

### ④ Delay

If the icon flashes, it means the delay function has been launched. When the delay time ends, the current selected washing cycle will be fully stopped.

### ⑤ Flow Rinse

This function is launched by default (fully lit). Press it again to close the function (half lit). The function icon will light up if you select it. Otherwise, it will not light up.

### ⑥ Anti-Wrinkle

The icon is fully lit when the function launches. The machine runs intermittently after the washing cycle is finished. You can stop the running at any time. Press the button again to close the function (half lit). Select the Anti-Wrinkle function, and the icon lights up. Otherwise, the icon will not light up.

### ⑦ Speed Up

When the function launches, the washing machine accelerates, and the time displayed on the display area changes. If you don't select the function, the icon will not light up. If you select cycles that do not support this function, this function icon will remain in a light-off state and cannot be selected.

### ⑧ Night

The sound of buttons will be mute and the speed will be lower. Select the Night function, and the icon lights up. Otherwise, it will not light up.

Note: Due to the configuration difference of the machine, the display area is provided for reference only, and the actual products may vary.

## ■ Introduction of Other Functions


### Unlock of emergency door (not applicable in some models)

■ If you want to take out the clothes when there is a long-time power cut, make sure the water level in the drum is below the safe level, the temperature is under 40℃, and the inner drum is does not rotate, then detach the drain hose and lower it, replace the hose after water runs out;

■ Open the drain pump cover at the bottom right of the front side, pull down the rod lightly, when hearing a light sound then open the door and take out or put in the clothes;

■ Replace drain pump cover;

■ This method can only be used in emergency.

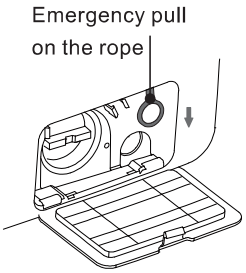


### Resume Function

■ This machine has the resume function in case of power-down. If there is a power failure or plug loose in the process of machine, the machine can remember the working status and resume work when the power is restored.

## Operate Washing Machine

**Unbalance Protection**

■ When the machine is ready to spin, The washer may take a few time to balance clothes due to great unbalance.

■ If clothes is still unbalance in the drum after that, the spinning speed can be slow down to avoid great vibration.

■ If clothes in drum is too less, the machine may not to spin due to the unbalance protection, then you should add more clothes in the machine to make it to spin.

**Sprinkling (not applicable in some models)**

■ This machine adopts detergent auto dispensing technology; water will flow out from the detergent case to delivery detergent into inner drum. It will also spray water on the glass of observation window, which has better effect of cleaning the foam and stains on the clothed and window. This will make washing process cleaner and construct a high efficient, water-saved and clean washing environment!

**Note:** Due to the product model upgrade, the function configuration may be different from this description, please take the actual model function as the standard!

## Maintenance

Proper maintenance on the washing machine can extend its work life.

**⚠ WARNING**

**Before your maintenance starts, please do pull out the power plug or disconnect power and close the tap.**

### ■ Clean internal drum


The rusts left inside the drum by the metal articles shall be removed immediately with chlorine-free detergents. Never use steel wool.

### ■ Clean surface

1.If there is any water overflow, use the dry cloth to wipe it off immediately. No sharp items are allowed to strike the washer.


2.The surface can be cleaned with diluted non-abrasive neutral detergents when necessary.


## ■ Clean the drain pump

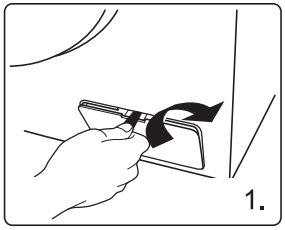


Open the filter cover with tools such as coins according to the direction of the graphic;

Unscrew the filter and pay attention to the remaining water, taking out any foreign material from the drain pump filter;

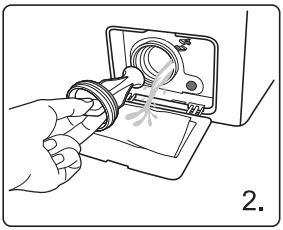

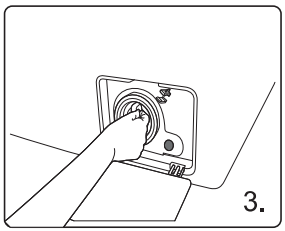




Reinstall the filter.

## ■ Clean Inlet valve filter


The inlet filter shall be cleaned if there is not any or insufficient water in when the tap is opened.

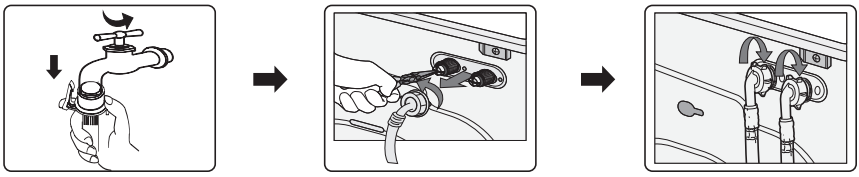**1.**Lower the water pressure:
a.Close the tap.
b.Select any procedure except “Spin” procedure.
c.Press the button “Start / Pause” and keep the procedure running for about 40 seconds.
d.Pull out the power plug.
**2.**Remove the inlet hose from the tap.
**3.**Use water to wash the filter.
**4.**Reconnect the inlet hose.



## ■ Clean detergent drawer

The structure of detergent case varies from different machine models; please follow steps and methods shown in below figure to clean the detergent case:

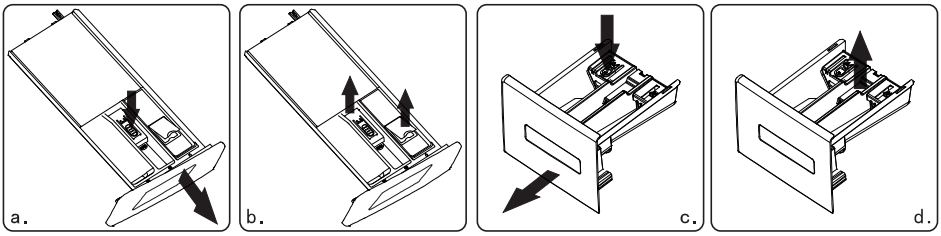


Auto dispenser Common dispenser

■ If there is detergent or softener residue in the case:

◆ As fig. a(c) shows, pull the case and press down the limit rod; pull the whole drawer out;

◆ As fig. b(d) shows, open the case (pick it up slowly)and take out syphon plate(lift it up);

◆ Use tap water or brush to wash detergent case and syphon pipe;

◆ Restore case cover and syphon pipe, and push the drawer in.

■ A little detergent will flow into water box when drawing the case, this is normal.

Try not repeatedly opening and closing the case of detergent loss;

■ Pay attention to the spillover of detergent that may cause inconvenience when adjusting (like tilting and moving, etc.) the machine (draw out the case before adjusting).

## ■ Recovery from freezing

The washing machine may freeze when it drops below 0°C.

**1.**Turn off the washing machine, and unplug the power cord.

**2.**Pour warm water over the water tap to loosen the water hose.

**3.**Disconnect the water hose, and soak it in warm water.

**4.**Pour warm water into the drum and leave it for about 10 minutes.

**5.**Reconnect the water hose to the water tap.

**⚠ NOTE**

**1.**When the washing machine is reused, make sure the ambient temperature is above 0°C.



**2.**If your washing machine is located in the room where it can get frozen easily, please drain the remaining water inside drain hose and inlet hose thoroughly.

**3.**Please contact a technician if your washer is frozen.

## *Troubleshooting*

| TROUBLES | SOLUTIONS |
|---|---|
| There is some remaining water in the machine | This is normal and is the result of water tests performed at the factory. |
| The washer does not run | Check if the power plug is inserted well.<br>Check if the tap is opened.<br>Check if the button “Power” is pressed.<br>Check if the button “Start/Pause” is pressed.<br>Check if the delay feature is activated. |
| Water leakage | Check and fasten inlet hose.<br>Clean up drain hose and ask a specialized person to repair it when necessary. |
| Abnormal noise and great vibration | Check if the transit bolts has been removed.<br>Check if the adjustable legs are adjusted level.<br>Check if the washer is installed on the solid and level floor.<br>Check if there are any barrettes or metal articles inside. |
| Washing efficiency is not satisfied | Select a proper procedure.<br>Add the proper detergent quantity according to the instructions in detergent package. |
| The machine take no answer after press buttons | Check if the “Child-lock” feature has been activate.<br>Press button “Start/Pause” first then press other buttons. |
| Actually running time of procedures is not corresponded to the display time | Check if clothes in the drum is dispersive enough.<br>Check if the water is drain out or inflow well. |
| The washer fills while draining | Check if the max height of the drain hose is lower than 65cm.<br>Check if the drain hose is immersed. |

## Troubleshooting

| DISPLAY | MEANS | SOLUTIONS |
|---|---|---|
|  | The washer fills over time | Check if the tap is opened.<br>Check if the water pressure is too low.<br>Check if the inlet hose is blocked. |
|  | Water drainage over time | Check if the drain pump is blocked.<br>Contact a technician if necessary. |
|  | Door lock is breakdown | Close the door well again.<br>Check if the clothes is caught between the door and seal.<br>Contact a technician if necessary. |
|  | Water is overflowed | water automatically until the water level is suitable for wash procedure.<br>Contact a technician if necessary. |
|  | The electrical motor is breakdown | Please contact a technician. |
|  | The heater does not work | Please contact a technician. |
|  | There is a temperature sensor fault | Please contact a technician. |
|  | Unmatched software/ hardware on mainboard and frequency inverting plate | Please contact a technician. |
|  | communication failures | Please contact a technician. |
|  | Inverter failures | Please contact a technician. |
|  | Drying heater failure | Please contact a technician. |
|  | Thermal sensor in drying air outlet failure | Please contact a technician. |

**Note:**
Please refer to the actually purchased model for fault display here.
Different models have different fault displays.

# Appendix

## ■ Fabric Care Lable


Resistant material


Delicate fabric


Item may be washed at 90°C


Item may be washed at 60°C


Item may be washed at 40°C


Item may be washed at 30°C


Item may be hand washed


Dry clean only


Can be bleached in cold water


Do not bleach


Can be ironed at 200°C max


Can be ironed at 150°C max


Can be ironed at 100°C max


Do not iron


Can be dry cleaned using any solvent


Dry clean with perchloride,lighter fuel, pure alcohol or R113 only


Dry clean with aviation fuel, pure alcohol or R113 only


Do not dry clean


Dry flat


Can be hung to dry


Dry on clothes hanger


Tumble dry, normal heat


Tumble dry, reduced heat


Do not tumble dry

## ■ Clothes sorting

・Do not exceed the rated washing capacity;

・Take out all foreign matters in the clothes, such as clip, coins and so on, in case of clothes and machine damage;

・Knot the tie, button up, zip up and sew the clothes. Put small items (like handkerchief, gloves, socks, etc.), twisted and wearable clothes into washing net before washing. The clothes in the net should not be more than 400g and be washed along with other clothes;

・Mix small clothes and big clothes together;

・Close the door and do not place the clothes between the door and sealing ring.

## ■ Put sorted clothes

・Sort clothes according to the washing information provided by manufacturer, such as washing labels, textile types, color and regulated washing temperature, etc.

・Check if the clothes color fades for the first time of washing;

・Do not put clothes into the machine for a long time, which may go moldy and produce spot.Please wash in time.

・Please wash clothes according to regulated temperature, otherwise it may cause color change or deformation;

・Do not wash water-proof clothes or products (such as ski suit, rain coat and curtain, etc.)

## ■ Electrical Warning

To avoid fire, electrical shock and other accidents, please remember the following reminding:

-Only the voltage indicated in power label can be used. If you are not clear of the voltage at home, please contact the local power bureau.

-When you are using the heating function, the maximum current through the washing machine will reach 10A. Therefore,please make sure the power supply units(current,voltage and cable) can meet the normal laod requirements for the machine.

-Protect the power cord properly. Power cord shall be fixed well so that it will not trip the people or other things and be damaged. Special attention shall bepaid to the plug location.

-Do not make the wall-mounted socket overloaded or cable extended.
Over loading of the wiring may cause fire or electrical shock. Do not pull out power plug with wet hand.

-To ensure your safety, power plug shall be inserted into an earthed socket. Carefully check and ensure that your socket is properly and reliably earthed.

## ■ Protecting the environment

• The washer is manufactured by recyclable materials. If you decide to dispose of this washer,please observe the local waste disposal regulations.Cut off the power cord so that the washer cannot be connected to power. Remove the door so that small animals and children cannot get trapped inside the washer.
• Do not exceed the detergent quantities recommended in the detergent manufactures' instruction.
• Use stain removal products and blesches before the wash cycle only when strictly necessary.
• Save water and electricity by only washing full loads(the exact amount depends upon the program used).
• Correct Disposal of this Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources.To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.They can take this product for environmental safe recycling.

**⚠ NOTE:**

**1. The energy efficiency rating was tested under" ▭ Cotton" procedure (Adjuted at 40°C + Maximum RPM)**

Make your life healthy and beautiful every day!