coway

Dehumidifier
User manual

AD-2325C

TH

This product cannot be used if the voltage is different from that mentioned in the rating plate. For your safety and proper use of the product, please read this User Manual before use.
Thai / English

เรียนลูกค้า

ขอบพระคุณที่ใช้งานผลิตภัณฑ์ Coway
โปรดอ่านคู่มือผู้ใช้นี้โดยละเอียดเพื่อการใช้งานและการดูแลรักษาผลิตภัณฑ์นี้อย่างเหมาะสม
ท่านสามารถอ้างอิงคู่มือผู้ใช้ฉบับนี้เพื่อแก้ไขปัญหาของผลิตภัณฑ์ระหว่างการใช้งาน
โปรดเก็บรักษาคู่มือผู้ใช้ฉบับนี้ไว้ในพื้นที่ปลอดภัย เนื่องจากคู่มือฉบับนี้มีใบรับประกันผลิตภัณฑ์

I. ข้อมูลผลิตภัณฑ์

1. ข้อมูลความปลอดภัย 3
2. ชื่อชิ้นส่วน 9
3. ก่อนการใช้งาน 11

II. วิธีการใช้งาน

1. ปุ่มและตัวชี้บอก, วิธีการใช้งาน 13
2. วิธีการใช้งาน 15

III. การบำรุงรักษา

1. วิธีทำความสะอาด 18
2. วิธีทำความสะอาดไส้กรอง 20

IV. อื่นๆ

1. การแก้ไขปัญหา 21
2. ข้อมูลจำเพาะ 23
3. การรับประกัน 24

1 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

อันตราย อาจเกิดการเสียชีวิตหรือการบาดเจ็บหากไม่ปฏิบัติตามคำแนะนำนี้



พลังงาน

ไฟฟ้าช็อต/เพลิงไหม้

- อย่าใช้เต้ารับที่เสียหายหรือหลวม
- ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220 V - 240 V~, 50 / 60 Hz ที่ต่อสายดิน
- อย่าดึงสายไฟในการเคลื่อนย้ายอุปกรณ์
- อย่าจับปลั๊กด้วยมือที่เปียก
- อย่างอสายไฟมากเกินไป และหลีกเลี่ยงการทำให้เกิดความเสียหายหรือการผิดรูป
- ห้ามเสียบหรือถอดปลั๊กไฟบ่อยครั้งโดยไม่จำเป็น
- หากมีน้ำเข้าไปในส่วนจ่ายไฟ ให้ถอดปลั๊กและทำให้แห้งก่อนใช้งาน
- ตรวจดูให้แน่ใจว่าถอดปลั๊กไฟของผลิตภัณฑ์แล้วในขณะที่ทำการซ่อมแซมหรือตรวจสอบผลิตภัณฑ์ หรือเมื่อทำการเปลี่ยนอะไหล่
- หากมีฝุ่นหรือน้ำบนขาปลั๊กและบริเวณหน้าสัมผัส โปรดทำความสะอาด
- อย่าเชื่อมต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับเต้ารับแผงเดียว ใช้เต้ารับแยกเฉพาะสำหรับผลิตภัณฑ์นี้
- หากท่านไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน ให้ถอดปลั๊กไฟ
- อย่าดัดแปลงสายไฟด้วยตนเอง
- หากสายไฟเสียหาย อย่าพยายามเปลี่ยนสายไฟตามอำเภอใจ โปรดติดต่อศูนย์บริการ Coway Service center เพื่อแจ้งขอเปลี่ยนใหม่



การติดตั้ง

เพลิงไหม้

- อย่าติดตั้งผลิตภัณฑ์นี้ไว้ใกล้กับแหล่งทำความร้อน

เพลิงไหม้/ไฟฟ้าช็อต/ทำงานผิดพลาด

- อย่าวางผลิตภัณฑ์ไฟฟ้าเช่นเครื่องทำความร้อนหรือโทรทัศน์ ไว้บนผลิตภัณฑ์
- อย่าติดตั้งบริเวณที่มีความชื้นสูง มีฝุ่นมาก หรือจุดที่สัมผัสกับน้ำหรือฝน

ไฟฟ้าช็อต/เพลิงไหม้

- อย่าใช้หรือเก็บก๊าซหรือวัตถุไวไฟไว้ใกล้กับผลิตภัณฑ์นี้



การใช้งาน

ไฟฟ้าช็อต	• อย่าใช้วัตถุแหลมคมเช่นสว่านแหย่เข้าไปในเซ็นเซอร์วัดความชื้นสัมพัทธ์
การบาดเจ็บ/ ทำงานผิดพลาด	• ห้ามนำผลิตภัณฑ์ไปแช่น้ำเด็ดขาด • อย่าแหย่นิ้วหรือใส่วัตถุแปลกปลอม (เช่น เข็ม แท่งไม้ เหรียญ ฯลฯ) เข้าไปในช่องลมเข้าหรือลมออก • ทำให้แน่ใจว่าเด็กจะไม่โหนหรือขึ้นไปบนผลิตภัณฑ์
ระวังเด็ก	• ทำให้แน่ใจว่าเด็กจะไม่แหย่นิ้วเข้าไปในช่องระบายอากาศ
ประสิทธิภาพ ลดลง	• เปลี่ยนไส้กรองใหม่เมื่อถึงเวลาเปลี่ยนไส้กรอง
ทำงานผิดพลาด	• อย่าฉีดน้ำลงบนผลิตภัณฑ์โดยตรง
ไฟฟ้าช็อต	• อย่าเปิด ซ่อมแซม หรือดัดแปลงผลิตภัณฑ์นี้ตามอำเภอใจ
ไฟฟ้าช็อต/ เพลิงไหม้	• หากผลิตภัณฑ์นี้มีเสียงแปลกๆ กลิ่นไหม้ หรือมีควันออกจาก ให้ถอดปลั๊กไฟออกจากเต้ารับทันที และโทรติดต่อศูนย์บริการ Coway • อย่าวางภาชนะที่มีน้ำ ยา อาหาร วัตถุโลหะขนาดเล็ก หรือวัตถุไวไฟบนผลิตภัณฑ์นี้ • ถอดปลั๊กก่อนการทำความสะอาด • อย่าฉีดน้ำใส่ผลิตภัณฑ์โดยตรงเพื่อทำความสะอาด หรือใช้เบนซินหรือทินเนอร์เช็ดผลิตภัณฑ์ • ระหว่างการใช้งาน หากเครื่องล้มและเปียกน้ำ จะต้องเข้ารับบริการ (A/S) ก่อนนำกลับมาใช้งาน
เพลิงไหม้/ ประสิทธิภาพ ลดลง	• อย่าฉีดสสารไวไฟ เช่นยาฆ่าแมลงหรือสเปรย์ปรับอากาศเข้าไปในช่องลมเข้า
การรั่วไหล	• เมื่อจะเคลื่อนย้ายผลิตภัณฑ์ ให้เทน้ำออกจากถังเก็บน้ำให้หมดก่อนทำการเคลื่อนย้าย อย่าใช้ผลิตภัณฑ์นี้โดยตั้งเอียง เมื่อใช้งานผลิตภัณฑ์แบบตั้งเอียง อาจทำให้เกิดเสียงดัง น้ำรั่วไหล หรือปัญหาการทำงานอื่นๆ กับผลิตภัณฑ์
อื่นๆ	• อย่าใช้สารฆ่าเชื้อ (สารเติม) สำหรับเครื่องลดความชื้นหรือเครื่องทำความชื้น

1 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

คำเตือน อาจทำให้เกิดการบาดเจ็บหรือทรัพย์สินเสียหายอย่างร้ายแรงได้



พลังงาน

เพลิงไหม้
- อย่าดึงสายไฟ

เพลิงไหม้/ไฟฟ้าช็อต/ทำงานผิดพลาด
- ใช้งานโดยการเสียบปลั๊กเข้ากับเต้ารับที่เชื่อมต่อเบรกเกอร์สายดิน (ความไวต่อกระแส 30mA หรือต่ำกว่า)



การติดตั้ง

ไฟฟ้าช็อต/เพลิงไหม้
- อย่าใช้งานในบริเวณที่อาจมีน้ำไปโดนผลิตภัณฑ์โดยตรง เช่นในห้องน้ำ ห้องอาบน้ำ หรือสระว่ายน้ำ

เสียงดัง/ทำงานผิดพลาด
- เมื่อทำการติดตั้งหรือเคลื่อนย้าย อย่าเอียงผลิตภัณฑ์เกิน 45 องศา อาจทำให้เกิดเสียงแปลกๆ หรือผลิตภัณฑ์ทำงานผิดพลาด เมื่อทำการเคลื่อนย้ายโดยการเอียงผลิตภัณฑ์มากกว่า 45 องศา ให้ใช้งานผลิตภัณฑ์หลังจากผ่านไปสองชั่วโมง
- ติดตั้งบนพื้นที่เรียบและไม่ลาดเอียงในการใช้งาน

น้ำรั่ว
- เมื่อใช้งานบนพื้นที่ลาดเอียง น้ำภายในถังเก็บน้ำอาจล้นออกมาได้โปรดระมัดระวังในการใช้งาน



การใช้งาน

ทำงานผิดพลาด
- อย่าใช้ความรุนแรงกับผลิตภัณฑ์
- อย่าใช้ผลิตภัณฑ์เพื่อวัตถุประสงค์อื่นใด นอกเหนือจากการเป็นเครื่องลดความชื้น

การบาดเจ็บ/ทำงานผิดพลาด
- อย่าดันหรือพิงผลิตภัณฑ์ ผลิตภัณฑ์อาจล้มลง

บาดเจ็บ
- อย่าให้ร่างกายสัมผัสลมที่พัดออกมาจากด้านหน้าผลิตภัณฑ์เป็นเวลานาน
- อย่านำใบหน้าเข้าใกล้ลมที่พัดออกมาจากด้านหน้าของผลิตภัณฑ์
- ผลิตภัณฑ์นี้มีตัวจ่ายแสง UV-C ซึ่งอาจมีการรั่วไหลของรังสี UV-C ซึ่งเป็นอันตรายหากใช้งานผลิตภัณฑ์อย่างผิดวัตถุประสงค์หรือเครื่องที่ได้รับความเสียหาย
- รังสี UV-C แม้เพียงเล็กน้อยก็อาจทำอันตรายต่อดวงตาและผิวหนังได้
- หากหลอด UV-C เสียหาย อย่าเปลี่ยนหลอดด้วยตนเอง ให้ติดต่อศูนย์บริการ Coway เพื่อทำการเปลี่ยนอะไหล่
- ห้ามเปิดใช้งานไฟ LED UV-C ภายนอกผลิตภัณฑ์นี้เด็ดขาด
- เมื่อทำความสะอาด ผลิตภัณฑ์หรือถอดฝาครอบไส้กรอง ระวังอย่าให้เกิดการบาดเจ็บจากชิ้นส่วนที่แหลมคม (เครื่องแลกเปลี่ยนความร้อน)
- อย่าทำความสะอาดเครื่องแลกเปลี่ยนความร้อนตามอำเภอใจ มีความเสี่ยงต่อการเกิดการบาดเจ็บ

1 ข้อมูลความปลอดภัย

คำแนะนำเหล่านี้มีไว้เพื่อให้ท่านปลอดภัยและป้องกันทรัพย์สินเสียหาย
โปรดอ่านข้อควรระวังโดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

ข้อควรระวัง อาจทำให้เกิดการบาดเจ็บหรือทรัพย์สินเสียหายเล็กน้อยได้



พลังงาน

ไฟฟ้าช็อต/เพลิงไหม้
- อย่าถอดปลั๊กไฟหรือเคลื่อนย้ายผลิตภัณฑ์ระหว่างที่เครื่องกำลังทำงาน
- หากผลิตภัณฑ์มีเสียงแปลกๆ กลิ่นไหม้ หรือมีควันออกจาก ให้ถอดปลั๊กไฟออกจากเต้ารับทันที และโทรติดต่อศูนย์บริการ Coway



การติดตั้ง

เสียหาย/พัง
- อย่าติดตั้งบนพื้นที่ลาดเอียงหรือบนที่สูง

ประสิทธิภาพ
- อย่าใช้ความรุนแรงหรือกระแทกผลิตภัณฑ์

การทำงานลดลง
- ติดตั้งให้ห่างจากผนังและวัตถุแวดล้อมอย่างน้อย 20 ซม.
- ทำให้แน่ใจว่าไม่มีสิ่งกีดขวางอยู่รอบๆ ผลิตภัณฑ์

สัญญาณวิทยุรบกวน
- ติดตั้งให้ห่างจากเครื่องใช้ไฟฟ้าเช่นโทรทัศน์อย่างน้อย 2 ม.

ประสิทธิภาพการทำงานลดลง
- อย่าใช้งานในบริเวณที่มีกลิ่น ควัน หรือมีน้ำมันมาก เช่นร้านอาหารหรือสถานที่ปิ้งย่าง

สีผิดเพี้ยน/ซีดจาง
- หลีกเลี่ยงการติดตั้งในจุดที่รับแสงแดดโดยตรง

ทำงานผิดพลาด
- อย่าสัมผัสกับแผงควบคุมในขณะที่กำลังเชื่อมต่อพลังงาน

อื่นๆ
- อย่าติดตั้งผลิตภัณฑ์บนพรมหรือเสื่อสำหรับเด็ก เนื่องจากอาจทำให้ถาดหรือช่องใส่ถังน้ำทำงานไม่ราบรื่น




การใช้งาน


การระบายอากาศ	• เมื่อใช้งานในพื้นปิด ให้ระบายอากาศเป็นประจำ • เมื่อใช้งานในพื้นปิดหรือมีเด็กหรือคนแก่ในพื้นที่ อย่าใช้งานผลิตภัณฑ์เป็นเวลานาน
ทำงานผิดพลาด	• ระวังอย่าให้เสื้อผ้าหรือผ้าม่านไปปิดกั้นช่องลมเข้าและช่องลมออก
การเผาไหม้/กลิ่นผิดปกติ	• กำจัดฝุ่นบนไส้กรองหยาบด้วยเครื่องดูดฝุ่นหรือล้างน้ำ • ทำความสะอาดไส้กรองหยาบเป็นประจำแล้วตากให้แห้งในพื้นที่ร่มซึ่งมีการระบายอากาศพอเพียงก่อนการใช้งาน
การดูแลรักษา	• ผู้ที่มีความบกพร่องทางร่างกาย การรับรู้ หรือสติปัญญา (รวมถึงเด็ก) ต้องได้รับการดูแลหรือคำแนะนำในการใช้งานผลิตภัณฑ์นี้
ประสิทธิภาพการทำงาน	• อย่าให้เด็กเล่นกับผลิตภัณฑ์นี้
การบาดเจ็บ/ทำงานผิดพลาด	• เมื่อลิ้นชักถังเก็บน้ำปิด อย่าสอดมือหรือวัตถุใดๆ เข้าไป • อย่าวางของไว้ข้างหน้าผลิตภัณฑ์ เมื่อใช้งานลิ้นชักถังเก็บน้ำ ลิ้นชักอาจติดขัดหรือปิดไม่สนิท • อย่าดื่มน้ำในถังเก็บน้ำของเครื่องลดความชื้น เนื่องจากเป็นอันตรายต่อร่างกายมนุษย์ • ระมัดระวังเมื่อเคลื่อนย้ายผลิตภัณฑ์ หากมีน้ำหนักหรือแรงกระแทกกับล้อ อาจทำให้เกิดความเสียหายกับพื้นหรือห้องนั่งเล่น (พื้นไม้ ฯลฯ)
บาดเจ็บอื่นๆ	• ระวังอย่าปรับบานปรับทิศทางลมตามอำเภอใจ หากตำแหน่งการทำงานของบานเกล็ดเปลี่ยนแปลง เครื่องจะทำงานในตำแหน่งที่ถูกต้องเมื่อเปิดเครื่องอีกครั้ง

2 ชื่อชิ้นส่วน


หน้า/หลัง

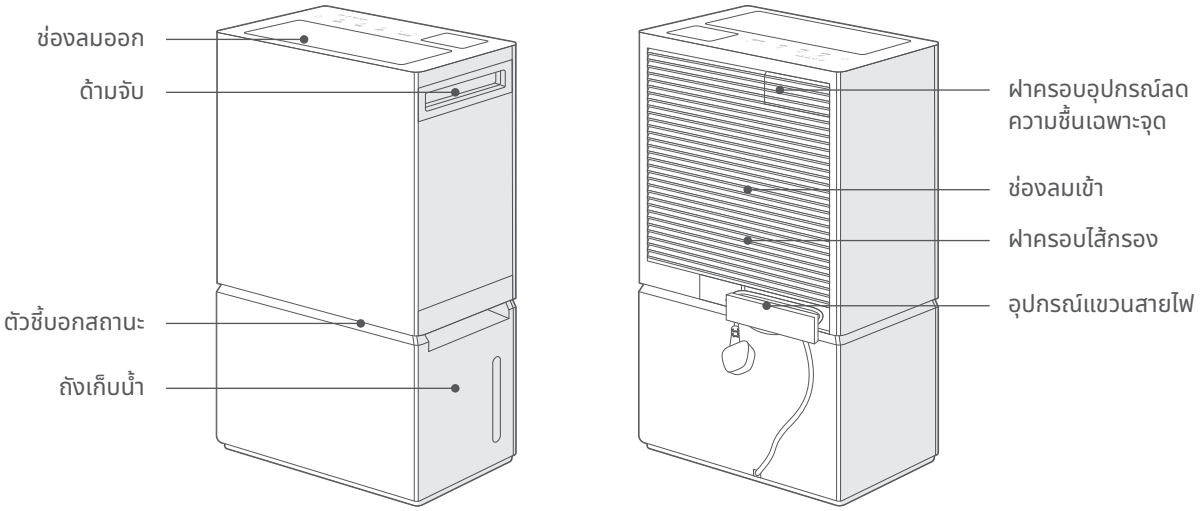

ด้านบน

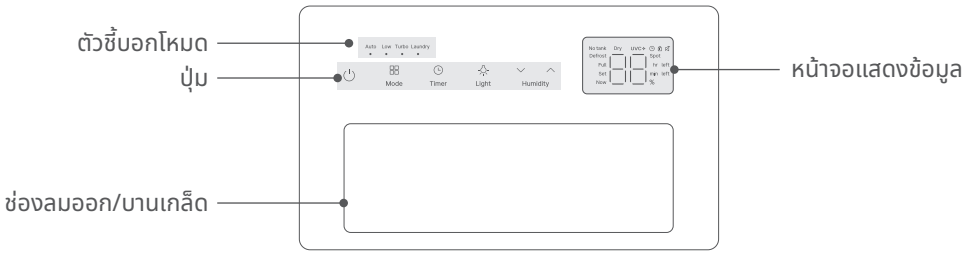


ไส้กรองผลิตภัณฑ์

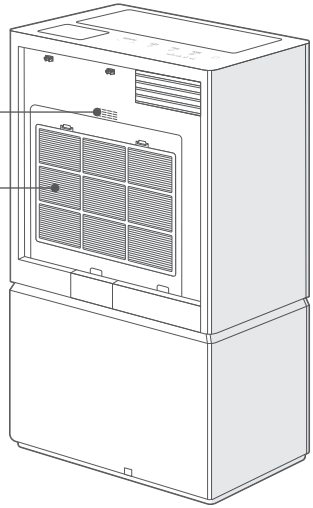


• อย่ากดเซ็นเซอร์วัดความชื้นสัมพัทธ์ หรือแหย่ด้วยวัตถุแหลมคม หากไม่ปฏิบัติตาม ผลิตภัณฑ์อาจเสียหายได้


อุปกรณ์เสริม

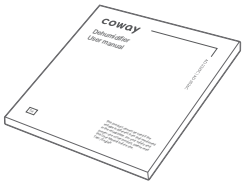


คู่มือผู้ใช้

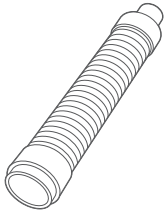

ท่อเป่าแห้ง

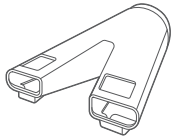

ชุดอุปกรณ์อบรองเท้า

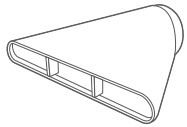

ชุดอุปกรณ์อบตู้เสื้อผ้า

3 ก่อนการใช้งาน

⚠ **ผลิตภัณฑ์นี้ใช้สำหรับ 220 V - 240 V~, 50 / 60 Hz**

ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220V - 240V ~ , 50 / 60 Hz ที่ต่อสายดิน


1. อุณหภูมิที่เหมาะสมสำหรับการใช้งานเครื่องลดความชื้นนี้คือ 18 °C ~ 35 °C
   - หากอุณหภูมิต่ำกว่า 18°C อาจเกิดการแข็งตัวของน้ำแข็ง ทำให้ประสิทธิภาพการลดความชื้นลดลง
2. ในขณะที่เครื่องลดความชื้นกำลังทำงาน อุณหภูมิภายในอาจสูงขึ้นเนื่องจากการทำงานของคอมเพรสเซอร์
3. เมื่อถึงระดับความชื้นสัมพัทธ์ที่ตั้งไว้ คอมเพรสเซอร์จะหยุดทำงาน เมื่อความชื้นสัมพัทธ์สูงขึ้น เครื่องจะเริ่มทำงานอีกครั้งโดยอัตโนมัติ
4. หากถังเก็บน้ำเต็ม เครื่องลดความชื้นจะหยุดทำงาน
5. เพื่อความปลอดภัย อย่าใส่วัตถุใดๆ ในถังเก็บน้ำของเครื่องลดความชื้น
6. หากเครื่องลดความชื้นไม่ทำงานหรือหยุดทำงานโดยไม่มีเหตุผล ให้ตรวจดูดังต่อไปนี้:
   - ตรวจสอบว่าเสียบปลั๊กไฟแน่นและถูกต้องหรือไม่
   - หากเสียบถูกต้องแล้ว ให้ปิดเครื่องและรอประมาณ 10 นาที จากนั้นเปิดเครื่องใหม่อีกครั้ง หากเครื่องยังไม่ทำงาน ให้ติดต่อตัวแทนจำหน่าย หรือศูนย์บริการ Coway

วิธีการติดตั้งผลิตภัณฑ์

- ติดตั้งภายในและให้ห่างจากแสงแดด เนื่องจากอาจทำให้ผลิตภัณฑ์ทำงานผิดพลาดหรือเสียหายได้
- ติดตั้งผลิตภัณฑ์นี้บนพื้นเรียบและแข็ง เมื่อติดตั้งบนพื้นที่อ่อนหรือพื้นลาดเอียง อาจมีเสียงผิดปกติหรือการสั่นสะเทือนได้
- ติดตั้งในจุดที่อุณหภูมิจะไม่ต่ำกว่า 18°C อุณหภูมิต่ำอาจทำให้ประสิทธิภาพการลดความชื้นลดลง
- ติดตั้งให้ห่างจากโทรทัศน์ วิทยุ หรือเครื่องใช้ไฟฟ้าอื่นๆ สัญญาณรบกวนทางแม่เหล็กไฟฟ้าอาจทำให้เกิดการทำงานผิดพลาด
- เมื่อจะใช้งานผลิตภัณฑ์ ให้รักษาระยะห่างอย่างน้อย 20 ซม. จากผนังและวัตถุโดยรอบ

1 ปุ่มและตัวชี้บอก, วิธีการใช้งาน

ปุ่มและตัวชี้บอก

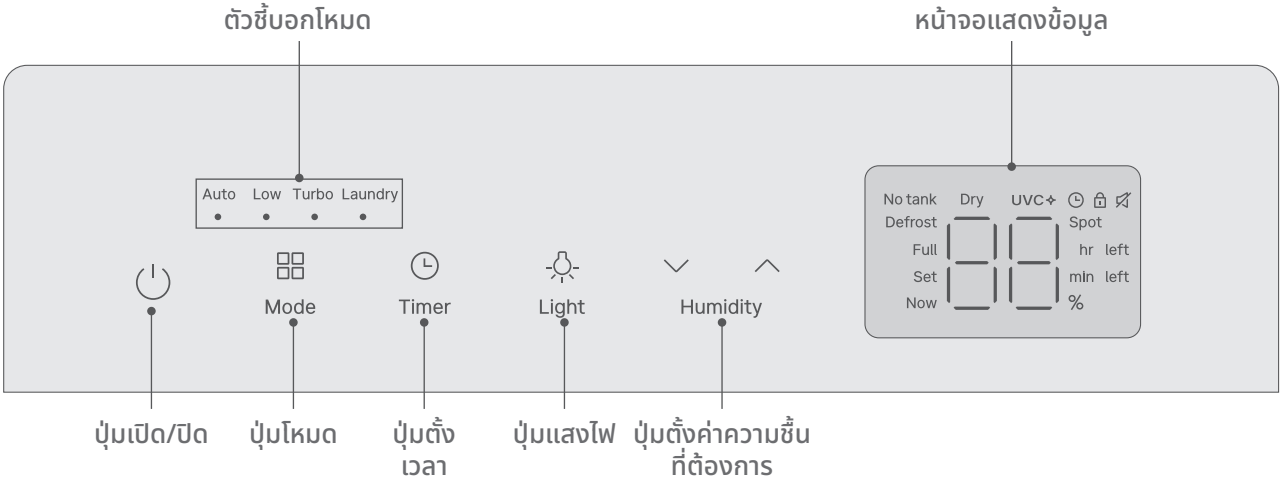

ปุ่มเปิด/ปิด
ใช้สำหรับเปิดและปิดผลิตภัณฑ์
- หากท่านปิดแล้วเปิดผลิตภัณฑ์อีกครั้งในขณะที่เครื่องกำลังทำงาน เครื่องจะกลับไปสู่โหมดการทำงานเดิมก่อนเครื่องจะหยุด อย่างไรก็ตามโหมด Laundry และโหมดลดความชื้นเฉพาะจุดจะทำงานเป็นโหมดอัตโนมัติ
- แม้จะกดปุ่มปิดเครื่องแล้ว แต่หากฟังก์ชันลดความชื้น ภายในยังคงทำงานอยู่ ไฟแสดงสถานะ Dry จะติดขึ้น และพัดลมของเครื่องจะยังคงทำงานอยู่

ปุ่มโหมด
กดปุ่มนี้เพื่อเลือกโหมด
หากกดปุ่มนี้ โหมดจะเปลี่ยนตามลำดับ
(อัตโนมัติ → ต่ำ → เทอร์โบ → ตากผ้า → อัตโนมัติ)

ปุ่มตั้งเวลา
ตั้งเวลาปิดเครื่องอัตโนมัติตามความต้องการของผู้ใช้
หากท่านกดปุ่มนี้ เครื่องจะตั้งไปที่รอบ 1 ชั่วโมง ในการปิดใช้งานตัวตั้งเวลา ให้กดปุ่มตั้งเวลาค้างไว้ 3 วินาทีหรือนานกว่านั้น


ปุ่มแสงไฟ
กดปุ่มนี้เพื่อปรับแสงไฟของแผงควบคุมและตัวผลิตภัณฑ์
[เมื่อใช้เป็นปุ่มล็อก]
ในการล็อกหรือปลดล็อกปุ่มบนแผงควบคุม ให้กดปุ่มแสงไฟค้างไว้ 3 วินาทีหรือนานกว่านั้น

ปุ่มตั้งค่าความชื้นที่ต้องการ
กดปุ่มลูกศรแล้วเลือกความชื้นสัมพัทธ์ที่ต้องการ




ตัวชี้บอกความชื้นสัมพัทธ์ที่ต้องการ

แสดงความชื้นสัมพัทธ์ที่ต้องการที่ตั้งโดยผู้ใช้ สามารถปรับได้เป็นช่วงละ 5% ระหว่าง 30~70%

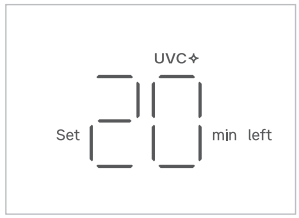


ตัวชี้บอก UVC

ตัวชี้บอกนี้จะเปิดขึ้นเมื่อฟังก์ชันฆ่าเชื้อด้วย UVC ทำงาน

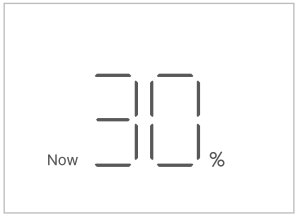


ตัวชี้บอกความชื้นสัมพัทธ์ปัจจุบัน

แสดงความชื้นสัมพัทธ์ปัจจุบันของพื้นที่ภายในห้อง

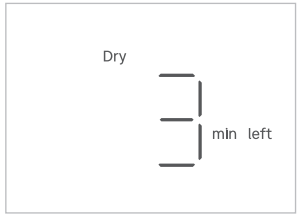


ตัวชี้บอกการเป่าแห้ง

หากผลิตภัณฑ์ตรวจพบว่าจำเป็นต้องอบแห้งภายใน เครื่องจะเปิดใช้งานการเป่าแห้งภายในและตัวชี้บอกจะเปิดขึ้น

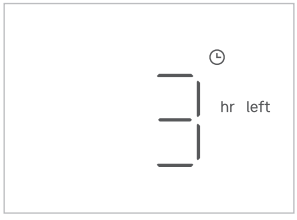

ตัวชี้บอกตัวตั้งเวลา

หากกดปุ่มตั้งเวลาระหว่างการทำงาน ระยะเวลาจะเพิ่มขึ้น 1 ชั่วโมง และสามารถตั้งได้ถึง 8 ชั่วโมง

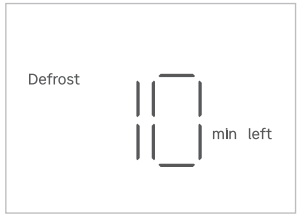

ตัวชี้บอกการละลายน้ำแข็ง

จะเปิดขึ้นเมื่อฟังก์ชันละลายน้ำแข็งทำงาน



ตัวชี้บอกไม่มีถังเก็บน้ำ

หากตรวจไม่พบถังเก็บน้ำในลิ้นชักถังเก็บน้ำ ตัวชี้บอกไม่มีถังจะเปิดขึ้น



ตัวชี้บอกการล็อกปุ่ม

ตัวชี้แสดงสถานะจะติดเมื่ออยู่ในโหมดล็อกปุ่ม กดปุ่มแสงไฟค้างไว้ 3 วินาทีหรือนานกว่านั้น เพื่อปิดฟังก์ชันล็อกปุ่ม



ตัวชี้บอกถังเก็บน้ำเต็ม

หากถังเก็บน้ำมีน้ำเต็ม ตัวชี้บอกนี้จะเปิดขึ้น



ตัวชี้บอกโหมดเงียบ

ตัวชี้แสดงสถานะจะติดเมื่อเครื่องอยู่ในโหมดเงียบ ในการล็อกหรือปลดล็อกโหมดเงียบ ให้กดปุ่มโหมดและปุ่มแสงไฟค้างไว้ 3 วินาทีหรือนานกว่านั้น

2 วิธีการใช้งาน

ตรวจสอบก่อนใช้งาน

- เชื่อมต่อปลั๊กไฟเข้ากับเต้ารับก่อนการใช้งานผลิตภัณฑ์นี้
- หากท่านเปิดผลิตภัณฑ์ เครื่องจะทำงานในโหมดอัตโนมัติเป็นพื้นฐาน

การเลือกโหมด

เครื่องจะทำงานโดยอัตโนมัติตามโปรแกรมที่ตั้งไว้
กดปุ่มเปิดเพื่อเปิดผลิตภัณฑ์ แล้วกดปุ่มโหมดเพื่อเลือกโหมดที่ต้องการ

01. โหมดอัตโนมัติ

รักษาระดับความชื้นสัมพัทธ์ที่ตั้งไว้โดยปรับความเร็วลมอัตโนมัติตามความชื้นในห้อง



02. โหมดต่ำ

เปิดใช้งานฟังก์ชันการลดความชื้นในโหมดต่ำ และสามารถตั้งระดับความชื้นสัมพัทธ์ที่ต้องการได้



03. โหมดเทอร์โบ

ทำงานในโหมดการลดความชื้นสูงสุด (ระดับสูงสุด) และกำจัดความชื้นสัมพัทธ์อย่างรวดเร็ว



04. โหมดตากผ้า

ใบพัดจะทำงานและส่งลมเป็นวงกว้าง ทำให้สามารถอบผ้าให้แห้งได้อย่างมีประสิทธิภาพ



การใช้งานฟังก์ชันลดความชื้นเฉพาะจุด


ฟังก์ชันลดความชื้นเฉพาะจุดนั้นใช้สำหรับการลดความชื้นอย่างแรงสำหรับรองเท้า ตู้เสื้อผ้า ฯลฯ

ข้อควรระวังก่อนเริ่มการลดความชื้นเฉพาะจุด

ลมที่ออกมาจากท่อเป่าแห้งคือลมแห้งซึ่งถูกกำจัดความชื้นแล้ว
ความเร็วและทิศทางลมนั้นจะไม่สามารถปรับได้ในฟังก์ชันลดความชื้นเฉพาะจุด
ในการใช้งาน ฟังก์ชันลดความชื้นเฉพาะจุด อุปกรณ์เสริมเช่นท่อเป่าแห้ง ชุดอุปกรณ์อบรองเท้า ชุดอุปกรณ์อบตู้เสื้อผ้า
สามารถสั่งซื้อทั้งหมดนี้ได้โดยโทรติดต่อศูนย์บริการ Coway ครับ/ค่ะ


วิธีการประกอบชุดลดความชื้นเฉพาะจุด

1

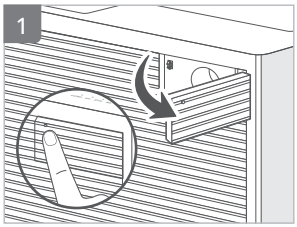


กดแล้วเปิดส่วนที่ยื่นออกมาของฝาครอบอุปกรณ์ลดความชื้นเฉพาะจุด

2

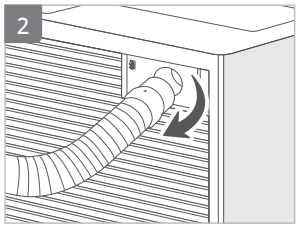

สอดท่อเป่าแห้งตามทิศทางของสัญลักษณ์รูปล็อก แล้วหมุนไปตามทิศทางการล็อกเพื่อยึดให้แน่น


3

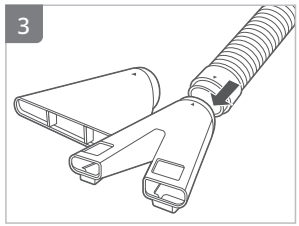

เชื่อมต่อชุดอุปกรณ์อบรองเท้าหรือตู้เสื้อผ้าเข้ากับท่อเป่าแห้ง

[ข้อควรระวัง]
เมื่อทำการเชื่อมต่อหรือถอดชุดอุปกรณ์อบรองเท้าหรือชุดอุปกรณ์อบตู้เสื้อผ้า ให้ตรวจดูว่ารูปทรงสามเหลี่ยมหันหน้าตรงกันก่อน

4

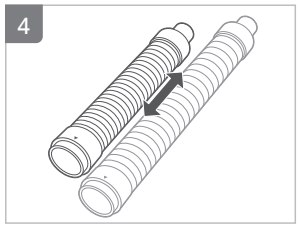

ท่านสามารถยืดหรือหดท่อเป่าแห้งได้ ปรับไปยังทิศทางที่ท่านต้องการจะเป่าแห้งและใช้งาน

- ในโหมดลดความชื้นเฉพาะจุด บานเกล็ดจะไม่ปิดสนิท อย่าใช้แรงปิดมัน
- ในขณะที่ทำการลดความชื้นเฉพาะจุด ระวังอย่าปิดกั้นช่องลมออก
  หากช่องลมออกถูกปิดกั้น อาจทำให้อุณหภูมิภายในผลิตภัณฑ์สูงขึ้น ซึ่งอาจทำให้เกิดการหยุดทำงานหรือทำงานผิดพลาด

2 วิธีการใช้งาน

วิธีการใช้งานโหมดลดความชื้นเฉพาะจุด

1

การทำงานของปุ่ม



กดปุ่มเปิดเครื่องเพื่อเปิดผลิตภัณฑ์

2

การทำงานของปุ่ม



กดปุ่มโหมดและปุ่มตั้งเวลาพร้อมกันค้างไว้อย่างน้อย 3 วินาที

3



หน้าจอจะแสดงตัวชี้สถานะ "Spot" (ลดความชื้นเฉพาะจุด) และสถานะการทำงานต่อเนื่อง

วิธีการหยุดลดความชื้นเฉพาะจุด

ในการหยุดการลดความชื้นเฉพาะจุด ให้กดปุ่มโหมดและปุ่มตั้งเวลาพร้อมกันค้างไว้ หรือเปลี่ยนโหมดโดยใช้ปุ่มโหมด


การทำงานของปุ่ม



- อย่าเคลื่อนย้ายหรือดึงเครื่องลดความชื้นในขณะที่กำลังถือท่อเป่าแห้งอยู่

1 วิธีทำความสะอาด


ทำความสะอาดภายนอกผลิตภัณฑ์

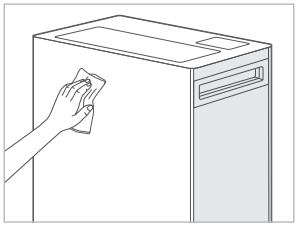

ความถี่ในการทำความสะอาดที่แนะนำ: ทุก 2 - 4 สัปดาห์
วิธีการ: ใช้ผ้านุ่มชุบด้วยน้ำผสมน้ำยาทำความสะอาดที่เป็นกลางเช็ด จากนั้นให้ใช้ผ้าแห้งเช็ดให้แห้ง

- ทำให้แน่ใจว่าได้ถอดปลั๊กไฟออกแล้ว


การทำความสะอาดช่องลมออก

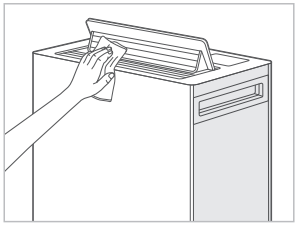

ความถี่ในการทำความสะอาดที่แนะนำ: ทำความสะอาดอย่างน้อยสองครั้งต่อเดือน
วิธีการ: เช็ดบริเวณที่สกปรกด้วยผ้าแห้ง

- ในกรณีที่สกปรกมาก ให้ใช้ผ้านุ่มชุบด้วยน้ำผสมน้ำยาทำความสะอาดที่เป็นกลางเช็ดก่อน
- ระวังอย่าให้น้ำหรือน้ำสบู่เข้าไปข้างในผลิตภัณฑ์
- ทำให้แน่ใจว่าได้ถอดปลั๊กไฟออกแล้ว

การทำความสะอาดฝาครอบด้านหลัง

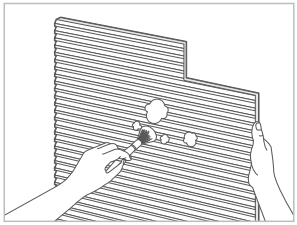

ความถี่ในการทำความสะอาดที่แนะนำ: ทำความสะอาดอย่างน้อยสองครั้งต่อเดือน
วิธีการ: ถอดฝาครอบด้านหลังออกจากผลิตภัณฑ์ แล้วกำจัดฝุ่นออกจากพื้นผิวด้วยผ้านุ่มที่แห้งหรือแปรงขนอ่อน หากสกปรกมากให้ใช้ผ้าเปียกหมาดๆ เช็ด


- อย่าใช้วัสดุผงขัด

1 วิธีทำความสะอาด

การเทน้ำออกจากถังเก็บน้ำ

ทำความสะอาดถังเก็บน้ำสัปดาห์ละครั้ง (รอบการทำความสะอาดจะแตกต่างกันไปตามสภาพแวดล้อม)
ในกรณีที่สกปรกมาก ให้ใช้ผ้านุ่มชุบด้วยน้ำผสมน้ำยาทำความสะอาดที่เป็นกลางเช็ดออก


* อย่าใช้สารฟอกขาว ทินเนอร์ เบนซีน น้ำยาทำความสะอาดที่มีวัสดุผงขัด สารเคมี น้ำยาทำความสะอาดที่มีกรดไฮโดรคลอริก น้ำมันพืช หรือผ้าหยาบทำความสะอาด

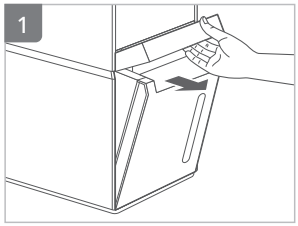

ดึงด้ามจับอันบนของถังเก็บน้ำแล้วนำออก


[ข้อควรระวัง]
เมื่อทำการเคลื่อนย้าย ให้ใช้ด้ามจับของถังเก็บน้ำ

ค่อยๆ ถอดถังเก็บน้ำออก เมื่อเอียงถังเก็บน้ำมากเกินไปหรือถอดถังเก็บน้ำออกอย่างรวดเร็วในขณะที่น้ำเต็มถัง น้ำอาจล้นออกมา

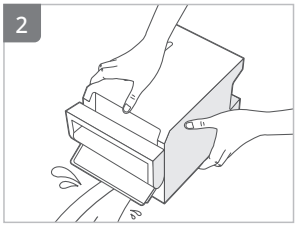

เปิดฝาครอบถังเก็บน้ำเพื่อเทน้ำภายในถังเก็บน้ำ

[ข้อควรระวัง]
ทำความสะอาดถังเก็บน้ำสัปดาห์ละครั้งเพื่อป้องกันเชื้อรา เชื้อโรค และแบคทีเรีย

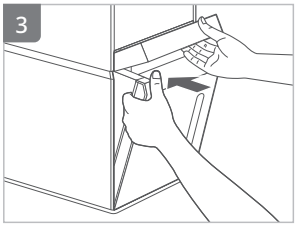


ดันถังน้ำเข้าไปด้านใน และจัดวางให้เข้าล็อกกับร่องบนฐานเครื่อง

- หลังจากถอดถังน้ำออกแล้ว อย่าสัมผัสภายในของผลิตภัณฑ์
- อย่าดื่มน้ำในถังเก็บน้ำหรือนำน้ำไปใช้
- เมื่อท่านถอดถังเก็บน้ำออกทันทีหลังจากผลิตภัณฑ์หยุดทำงาน อาจมีน้ำตกค้างหยดภายในผลิตภัณฑ์ ใช้ผ้าแห้งเช็ดหยดน้ำดังกล่าว
- เมื่อทำการติดตั้งถังเก็บน้ำ ระวังการหนีบมือระหว่างการประกอบ


2 วิธีทำความสะอาดไส้กรอง

ไส้กรองหยาบ


ทำความสะอาดไส้กรองหยาบทุก 2~4 สัปดาห์ (รอบการทำความสะอาดจะแตกต่างกันไปตามสภาพแวดล้อม)
หากไม่ได้ทำความสะอาดไส้กรองเป็นเวลานาน ประสิทธิภาพการทำงานของผลิตภัณฑ์อาจลดลง

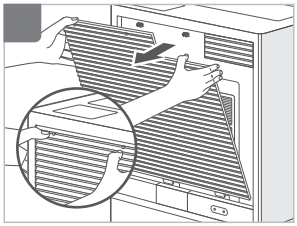

ถอดปลั๊กไฟแล้วกดส่วนที่ยื่นออกมาด้านบนของฝาครอบไส้กรองเพื่อถอดออกไปข้างหน้า

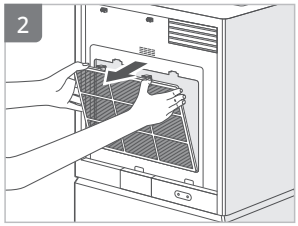


จับด้ามจับของไส้กรองหยาบแล้วดึงมาข้างหน้าเพื่อถอดออก

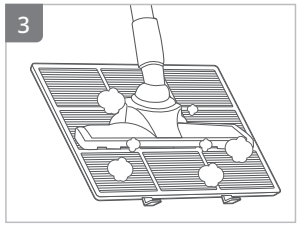

ขึ้นอยู่กับระดับความสกปรก ให้ดูดฝุ่นด้วยเครื่องดูดฝุ่นหรือใช้น้ำล้างออก

[วิธีใช้น้ำทำความสะอาด]


ล้างในน้ำไหลหรือแช่ในน้ำ (ประมาณ 30 °C) ที่ผสมน้ำยาทำความสะอาดที่เป็นกลางเพื่อทำความสะอาด

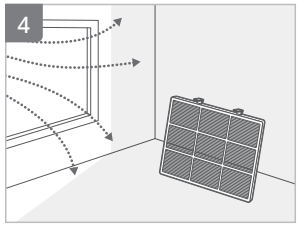


เมื่อทำความสะอาดด้วยน้ำ ทิ้งให้แห้งสนิทในพื้นที่ร่มที่มีอากาศถ่ายเทดี

[ข้อควรระวัง]

เมื่อตากแห้งใกล้กับแสงแดด เครื่องเป่าลมร้อน หรืออุปกรณ์ที่ให้ความร้อน ไส้กรองหยาบจะเสียรูปทรงทำให้สูญเสียประสิทธิภาพการทำงาน

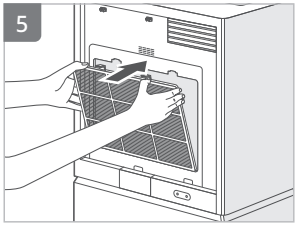

ประกอบไส้กรองหยาบ

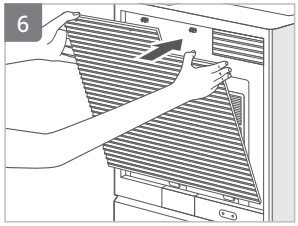

ยึดฝาครอบไส้กรองที่ตำแหน่งเดิม



- หากยึดฝาครอบไส้กรองอย่างไม่ถูกต้อง ประสิทธิภาพการทำงานของผลิตภัณฑ์อาจลดลง

1 การแก้ไขปัญหา

เครื่องลดความชื้นอาจทำงานผิดปกติเพราะว่าผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น แต่ไม่ใช่เพราะว่าผลิตภัณฑ์ทำงานผิดพลาด
ในกรณีดังกล่าวก็สามารถแก้ปัญหาได้อย่างง่ายดายโดยไม่ต้องขอความช่วยเหลือจากศูนย์บริการ Coway โดยการตรวจสอบดังต่อไปนี้
หากท่านยังไม่สามารถแก้ปัญหาได้หลังจากตรวจสอบตามรายการต่อไปนี้ โปรดติดต่อศูนย์บริการ Coway

อาการ	ตรวจสอบ	วิธีการแก้ไข
เครื่องไม่ทำงานเลย	เชื่อมต่อปลั๊กไฟแล้วหรือไม่	ตรวจดูให้แน่ใจว่าเสียบปลั๊กเข้ากับเต้ารับ 220V - 240V ~ , 50 / 60 Hz
	ตัวชี้แสดงน้ำเต็มเปิดอยู่หรือไม่	เทน้ำออกจากถังเก็บน้ำ
	เครื่องยังเปิดอยู่หลังจากเทน้ำออกหรือไม่	ประกอบถังเก็บน้ำเข้าที่เดิมในผลิตภัณฑ์ หากยังแสดงว่าน้ำเต็มอยู่ ตรวจสอบว่า air bladder อยู่ในตำแหน่งดั้งเดิมหรือไม่
เครื่องทำงาน แต่ฟังก์ชันลดความชื้นไม่ทำงาน	ตัวชี้บอกการละลายน้ำแข็งเปิดอยู่หรือไม่	เกิดน้ำแข็งที่เครื่องแลกเปลี่ยนความร้อน ดังนั้นเครื่องกำลังทำการละลายน้ำแข็ง เนื่องจากนี่ไม่ใช่อาการผิดปกติ เครื่องจะทำงานได้อีกครั้งหลังจากละลายน้ำแข็งแล้ว
มีการสั่นสะเทือนมากและมีเสียงดัง	ท่านใช้งานเครื่องนี้บนพื้นลาดเอียงหรือไม่	ให้นำไปตั้งบนพื้นเรียบ
มีเสียงเกิดขึ้น	มีเสียงน้ำไหลระหว่างการทำงานหรือหลังจากหยุดทำงานหรือไม่	นี่คือเสียงของเหลวภายใน (สารทำความเย็น) ที่ไหลผ่านท่อ ซึ่งไม่ใช่การทำงานผิดพลาด
	มีเสียงฟู่ระหว่างการทำงานหรือไม่	นี่คือเสียงของชิ้นส่วนที่ยืดออกตามการเปลี่ยนแปลงของอุณหภูมิ ซึ่งไม่ใช่การทำงานผิดพลาด
ความเร็วลมต่ำมาก	เลยกำหนดเวลาทำความสะอาดหรือเปลี่ยนไส้กรองหรือไม่	ตรวจสอบรอบการทำความสะอาดและเปลี่ยนไส้กรอง แล้วทำความสะอาดหรือเปลี่ยนไส้กรอง

เครื่องลดความชื้นอาจทำงานผิดปกติเพราะว่าผู้ใช้ไม่คุ้นเคยกับผลิตภัณฑ์หรือเนื่องจากสาเหตุอื่น แต่ไม่ใช่เพราะว่าผลิตภัณฑ์ทำงานผิดพลาด
ในกรณีดังกล่าวก็สามารถแก้ปัญหาได้อย่างง่ายดายโดยไม่ต้องขอความช่วยเหลือจากศูนย์บริการ Coway โดยการตรวจสอบดังต่อไปนี้
หากท่านยังไม่สามารถแก้ปัญหาได้หลังจากตรวจสอบตามรายการต่อไปนี้ โปรดติดต่อศูนย์บริการ Coway

อาการ	ตรวจสอบ	วิธีการแก้ไข
ปริมาณการลดความชื้นน้อย	มีน้ำเต็มถังเก็บน้ำหรือไม่	หากถังเก็บน้ำมีน้ำเต็ม ให้เทน้ำออก
	มีฝุ่นอุดตันไส้กรองหรือปิดกั้นช่องลมหรือไม่?	ทำความสะอาดช่องลมเข้าที่ด้านหน้าของไส้กรองหยาบ
	อุณหภูมิภายในห้อง 18 °C หรือต่ำกว่าใช่หรือไม่	ประสิทธิภาพการลดความชื้นของเครื่องลดความชื้นนั้นจะแตกต่างกันไปโดยขึ้นอยู่กับ อุณหภูมิแวดล้อม หากอุณหภูมิแวดล้อมอยู่ที่ 18 °C หรือต่ำกว่า ประสิทธิภาพการทำงานอาจลดลง
	ในฤดูใบไม้ผลิ ฤดูใบไม้ร่วง และฤดูหนาว ทั้งอุณหภูมิและความชื้นสัมพัทธ์จะต่ำกว่าฤดูร้อน ปริมาณการลดความชื้นจะลดลง	
มีกลิ่นออกมาจากช่องลมออก	เมื่อใช้งานเป็นครั้งแรก ผลิตภัณฑ์อาจมีกลิ่นเฉพาะของชิ้นส่วนลดความชื้น กลิ่นนี้จะหายไปตามธรรมชาติหลังจากใช้งานผลิตภัณฑ์ไปราวๆ สองสามชั่วโมง	
	เลยกำหนดเวลาทำความสะอาดหรือเปลี่ยนไส้กรองหรือไม่	ตรวจสอบรอบการทำความสะอาดและเปลี่ยนไส้กรอง แล้วทำความสะอาดหรือเปลี่ยนไส้กรอง
มีลมร้อนออกมาจากช่องลมออก	นี่คือการทำงานตามปกติของเครื่องลดความชื้น ดังนั้นจึงใช้งานได้อย่างไร้กังวล	
เมื่อเกิดความบกพร่องในการทำงานอื่นๆ	หลังจากตรวจสอบอาการของปัญหา ให้ถอดปลั๊กพลังงานแล้วแจ้งขอรับบริการ	

▶ การเปลี่ยนไส้กรอง/ การแจ้งขอรับบริการ: 1421

2 ข้อมูลจำเพาะ

ชื่อผลิตภัณฑ์	เครื่องลดความชื้น
ชื่อรุ่น	AD-2325C
อัตราแรงดันไฟฟ้า	220 V - 240 V~, 50 / 60 Hz
เฟส	เฟสเดียว
การใช้พลังงาน	350 W
สารทำความเย็น/น้ำหนัก	R-134a / 235 g
อุปกรณ์ความปลอดภัย	ฟิวส์ (250 V / T10 A, T3.15 A), วงจรตรวจจับถังเก็บน้ำ
การลดความชื้น	23 ล. / วัน
ความจุถังน้ำ	6.1 ล. (ความจุถังน้ำเต็ม 4.8 ล.)
สถานที่ติดตั้ง	สำหรับการใช้งานภายใน
ขนาด	370 มม. (ก) X 215 มม. (ล) X 675 มม. (ส)
น้ำหนักผลิตภัณฑ์	17.8 กก.

- การออกแบบและข้อมูลจำเพาะของผลิตภัณฑ์อาจเปลี่ยนแปลงโดยไม่การแจ้งให้ทราบล่วงหน้า เพื่อปรับปรุงคุณภาพของผลิตภัณฑ์และเพื่อปฏิบัติตามกฎหมาย

3 การรับประกัน

- โปรดอ้างอิงแบบฟอร์มใบสั่งขายเพื่ออ่านนโยบายพื้นฐานของเราในการรับประกันผลิตภัณฑ์ สำหรับข้อกำหนดเพิ่มเติมของการรับประกันผลิตภัณฑ์ โปรดเยี่ยมชมเว็บไซต์ของเรา โปรดทราบว่าข้อกำหนดการรับประกัน ผลิตภัณฑ์ของเรานั้นอาจมีการเปลี่ยนแปลงเพื่อปฏิบัติตามกฎหมายและกฎระเบียบที่เกี่ยวข้องของประเทศไทย
- https://www.coway.co.th/th/terms-of-conditions

ประเทศไทย
ที่อยู่ : Coway (Thailand) Co., Ltd. 1818 Rasa Two Building, 14th Floor, Phetchaburi Road, Makkasan Subdistrict, Ratchathewi District, Bangkok 10400 ศูนย์บริการ : 1421

Dear customers

Thank you for using a Coway product.

Please read this User Manual carefully for correct use and maintenance of the product.

You can refer to the User Manual to troubleshoot for product issues while using it.

Please keep this User Manual in a safe place as it includes the product warranty.

I. For Information

1. Safety information 3
2. Part names 9
3. Before Use 11

II. How to Use

1. Buttons and indicators, how to operate 13
2. How to operate 15

III. Maintenance

1. How to clean 18
2. How to clean the filter 20

IV. Others

1. Troubleshooting 21
2. Specification 23
3. Warranty 24

1 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the appliance correctly.

Danger Death or serious injury may occur if the instruction is not followed.

Power

Electric shock/fire

- Do not use a damaged or loose outlet.
- Make sure to connect the power plug to a grounded 220 V - 240 V~, 50 / 60 Hz outlet.
- Do not pull the power cord to move the appliance.
- Do not touch the power plug with wet hands.
- Do not bend the power cord excessively or avoid damage or deformation.
- Do not connect and disconnect the power plug repeatedly.
- If water got into the power supply section, then disconnect the power plug and completely dry it before use.
- Make sure the power plug is disconnected while the appliance is being repaired, inspected, or when its parts are being replaced.
- If there is any dust or water on the power plug's pins and contact area, wipe them off completely.
- Do not connect multiple appliances to one power outlet. Use a separate socket for the appliance.
- If you don’t use it for a long time, then disconnect the power plug.
- Do not modify the power cord arbitrarily.
- If the power cord is damaged, do not attempt to replace it arbitrarily. Instead, contact the Coway Service center to replace it.

Installation

Fire

- Do not install the appliance close to any heat sources.

Fire/electric shock/ malfunction

- Do not place on top of electric products such as heating appliances or televisions.

Electric shock/fire

- Do not install in a location with too much humidity or dust or in a location exposed to water or rain.
- Do not use or store flammable gases or materials near the appliance.



Use

Electric shock	• Do not put sharp objects such as a gimlet to the humidity sensor. • Never soak the product in water.
Injury/ malfunction	• Do not insert a finger or foreign substance (pin, stick, coin, etc.) to the inlet or outlet. • Ensure that children do not climb on or cling to the appliance.
Children caution	• Make sure that children do not insert their fingers into the air vent hole. • Replace to a new filter when reaching the filter replacement period.
Performance degradation	• Do not spray water directly onto the product.
Malfunction/ electric shock	• Do not arbitrarily open, repair, or remodel the appliance.
Electric shock/fire	• If the appliance produces a strange noise, burning smell, or smoke, immediately disconnect the power plug from the electrical outlet and call the Coway Service Center. • Do not place a bowl filled with water, medicine, food, small metallic objects, or any flammable materials on the product. • Disconnect the power plug before cleaning. • Do not directly spray water on product for cleaning or use benzene or thinner to wipe the product. • When using the product, if the product falls and becomes wet, make sure to call A/S.
Fire/ performance degradation	• Do not spray inflammable substances such as pesticides or air fresheners to the inlet.
Leakage	• When moving the product, empty water inside the water tank completely before moving. Do not use the product tilted. When using the product tilted, it may cause noise, water leak, or problems in product performance.
Others	• Do not use sterilizers (supplement agents) for dehumidifiers or humidifiers.

1 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the appliance correctly.

Warning Severe injury or property damage may occur.



Power

Fire Fire/electric shock/ malfunction	• Do not pull the power cord. • Use it by plugging into the plug connected with an earth leakage breaker (sensitivity current 30mA or below).



Installation

Electric shock/fire	• Do not use in places where water may directly contact the product, such as bathrooms, showers, or swimming pools.
Noise/ malfunction	• When installing and moving, do not lean the product for more than 45 degrees. It may cause strange noise or product malfunction. When moved by leaning for more than 45 degrees, operate the product after two hours are passed. • Install on a flat, non-sloped surface for use.
Leakage	• When used on a slanted area, water inside the water tank may overflow, so be careful.



Use

Malfunction

- Do not apply excessive force to the product.
- Do not use the product for other purposes than a dehumidifier.

Injury/ malfunction

- Do not push or lean onto the product. The product may fall.

Injury

- Do not get your body exposed to the wind discharged to the product front for a long time.
- Do not place your face near the wind discharged to the product front.
- This product contains UV-C emitters and may leak harmful UV-C radiation if the appliance is not used as intended or if the housing is damaged.
- Even small amounts of UV-C radiation can cause injury to the eyes and skin.
- If the UV-C emitter is damaged, do not replace it on your own; contact the Coway Service Center for a replacement.
- Never operate the UV-C LED outside the product.
- When cleaning the product or removing the filter cover, be careful not to get harmed by a sharp part (heat exchanger, etc.).
- Do not clean the heat exchanger arbitrarily. There is a risk of injury.

1 Safety information

These instructions are to keep you safe and to prevent property damage.
Please carefully read the precautions and use the appliance correctly.

Caution

Minor injury or property damage may occur.



Power

Electric shock/fire

- Do not disconnect the power plug or move the product during operation.
- If the product produces a strange noise, burning smell, or smoke, immediately disconnect the power plug from the electrical outlet and call the Coway Service Center.



Installation

Damage/ breakage

- Do not install on a sloped or high place.
- Do not apply excessive force or impact to the product.

Performance decline

- Install at least 20 cm away from walls and surrounding objects.
- Ensure that there are no obstructions around the product.

Radio interference

- Install at least 2 meter away from electronic products such as TVs.

Performance decline

- Avoid exposing your body to the air discharged from the front of the product for prolonged periods.

Discoloration/ bleaching

- Avoid installing under direct sunlight.

Malfunction

- Do not come into contact with the control panel while power is connected.

Others

- Do not install the product on a carpet or mat for children. The water tank drawer may not operate smoothly.




Use


Ventilation	• When used in a sealed space, ventilate on a regular basis. • When the space is sealed or there are children or the elderly, do not use it for a long time.
Malfunction Abnormal combustion/ odor	• Be careful not to block the air inlet or air outlet with the laundry or curtains. • Remove dusts on the pre-filter with a vacuum cleaner or water. • Clean the pre-filter periodically and dry in a shadow with proper ventilation sufficiently before use.
Performance maintenance	• Anyone (including children) who has insufficient physical, sensory or mental ability must be supervised or instructed to use the product. • Do not let children play with the device.
Injury/ malfunction	• When the water tank drawer is closed, do not insert a hand or object. • Do not place anything in front of the product. When the water tank drawer operates, it may get caught or not fully close. • Do not drink water in the dehumidification water tank. It is harmful to human body.
Injury	• Be careful when moving the product. If a large amount of weight or force is applied to the moving wheel, it may cause damage on the floor surface of a room or living room (wooden floor, etc.).
Others	• Be careful not to operate the outlet louver arbitrarily. If the louver's operation location changes, it operates in a proper location when applying the power again.

2 Part names


Front/Rear

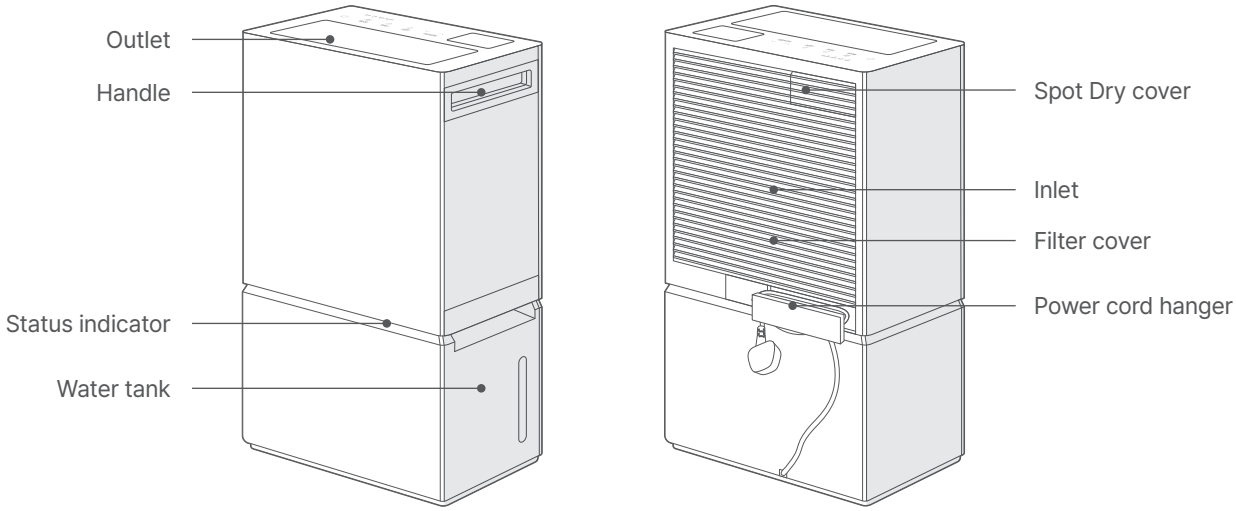

Top

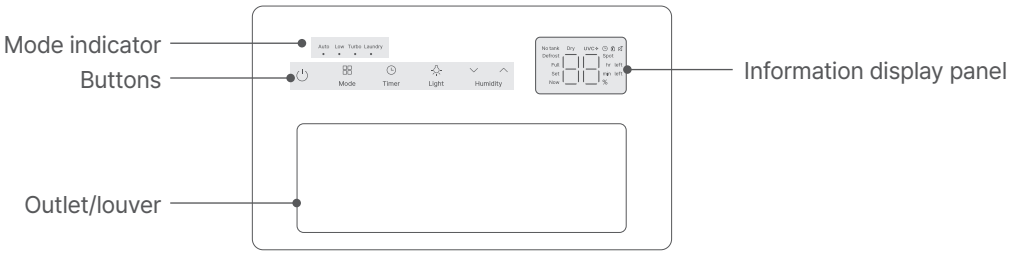


Product filters

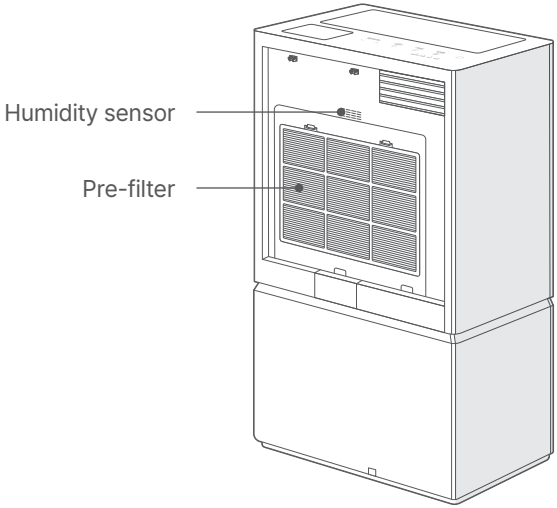


- Do not press the humidity sensor or prick with a sharp object. If not observed, the product may get damaged.


Accessories

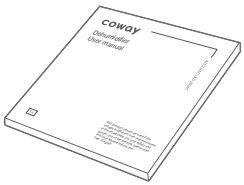


User manual

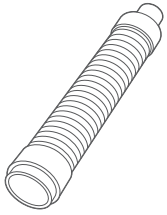

Drying hose

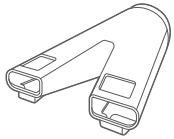

Shoe-drying kit

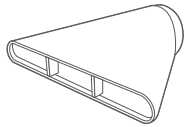

Wardrobe-drying kit

3 Before Use

⚠ This appliance is for 220 V - 240 V~, 50 / 60 Hz.

Make sure to connect the power plug to a grounded 220V - 240V ~ , 50 / 60 Hz outlet.

1. Appropriate temperatures for using the dehumidifier are 18 °C ~ 35 °C.
   - Freezing may start on a cooler below 18 °C , leading to the reduced amount of dehumidification.
2. While the dehumidifier is in operation, an indoor temperature may rise due to compressor operation.
3. When reaching the set humidity, the compressor stops operating; when humidity increases, it begins operation again automatically.
4. If the water tank is full, the dehumidifier stops operating.
5. For safety, do not put other objects in the water tank of the dehumidifier.
6. If the dehumidifier does not operate or stops operating without any reason, check the following:
   - Check if the power plug is connected properly.
   - If it is connected properly, turn off the power, and after about 10 minutes, turn on the power button again. If it still does not operate, contact the distributor or contact Coway Service Center.


How to install the product



- Install indoors away from sunlight. It may cause product malfunction or failure.
- Install on a firm and flat floor. When installed on a weak, sloped floor, abnormal noise and vibrations may occur.
- Install in a place where the temperature does not fall below 18°C. Low temperatures may cause decrease in dehumidification performance.
- Install away from TV, radio, or other electric appliances. Electromagnetic interference may cause malfunction.
- When using the product, maintain a distance of at least 20 cm from the walls and surrounding objects.

1 Buttons and indicators, how to operate

Button and Indicators

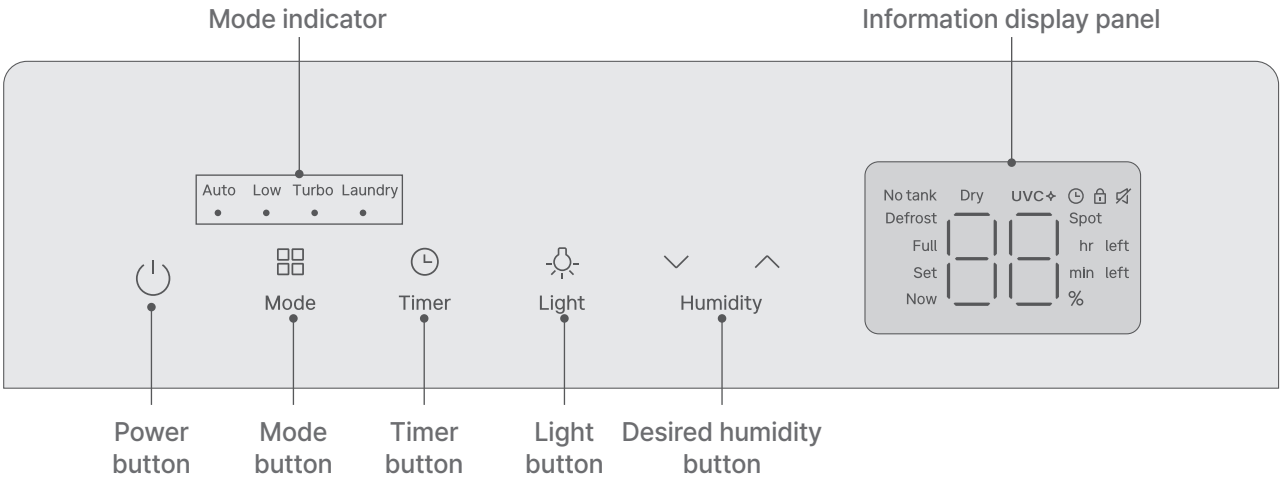

Power button

Use it to turn on and off the product power.

- If you turn the product off and then on again, while it is in operation, it will return to the previous operation mode used before it stops. However, Laundry mode and Spot Dry mode operate as Auto mode.
- Even if you have pressed the power button to turn it off, when the Internal dry function is in operation, the Dry indicator turns on and the product fan operates.

Mode button

Press the button to select a mode.
If the button is pressed, it is repeated in the order of (Auto → Low → Turbo → Laundry → Auto).

Timer button

Set the time for power to be turned off automatically at a user's desired time. If you press the button, it is set in the interval of 1 hour. To deactivate the timer, press and hold the Timer button for 3 seconds or longer.

Light button

Press the button to adjust lighting of the control panel and product main body.

[When used as the Lock button]
To lock or unlock the button on the control panel, press the Light button for 3 seconds or longer.

Desired humidity button

Press the arrow button and select the desired humidity.




Desired Humidity indicator

Displays the desired humidity set by the user. It can be adjusted in the interval of 5% between 30~70%.




UVC indicator

An indicator turns on when the UVC sterilization function is in operation.

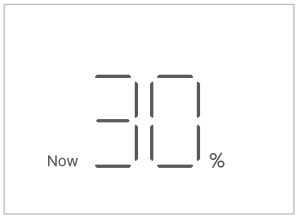


Current Humidity indicator

Displays humidity of the current indoor space.

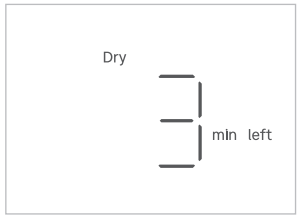


Dry indicator

If the product judges by itself that it needs internal dry, it runs internal dry and an indicator turns on.

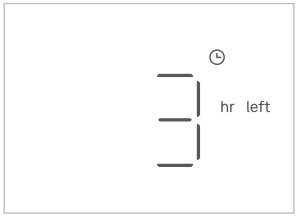

Timer indicator

If the Timer button is pressed during operation, it increases by 1 hour and can be set up to 8 hours.

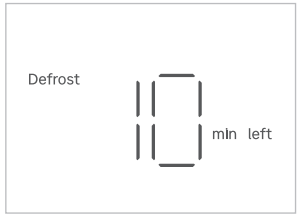

Defrost indicator

It turns on when the defrost function operates.



No tank indicator

If the water tank is not detected in the water tank drawer, the No tank indicator turns on.



Button lock indicator

An indicator turns on in the Button lock mode. Press the Light button for 3 seconds or longer to turn off the button lock function.



Full indicator

If water is full in the water tank, the indicator turns on.



Silent mode indicator

An indicator turns on in the Silent mode.
To lock or unlock the Silent mode, press the Mode button and Light button for 3 seconds or longer.

2 How to operate

Checks before operation

- Connect the power plug into the outlet before operating the product.
- If you turn on the product, it will basically operate in Auto mode.

Mode selection

It operates automatically according to the set program.
Press the Power button to turn on the product, and press the Mode button to select a desired mode.

01. Auto mode

Maintains the set desired humidity by automatically adjusting the air speed depending on the indoor humidity.



02. Low mode

Performs the dehumidification function in the Low mode and the desired humidity can be set.



03. Turbo mode

Operates in the maximum dehumidification function (highest level) and removes humidity quickly.



04. Laundry mode

The oscillating louvers operate to distribute air across a wide area, drying clothing efficiently.



Using the Spot Dry function


The Spot Dry function is used to intensively dry shoes, closets, etc.

Precautions before starting Spot Dry

A wind coming out of the Drying hose is a dry wind with humidity removed.
Air speed and direction cannot be adjusted in the Spot Dry function.
To use the Spot Dry function, additional components such as the Drying hose, Shoe-drying kit, and Wardrobe-drying kit.
All of which may be purchased by calling Coway Service Center.


How to assemble the Spot Dry kit

1

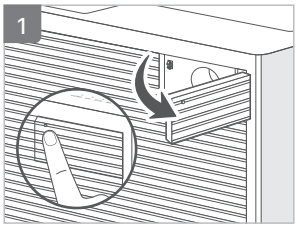


Press and open the protruded part of the Spot Dry cover at the rear of the product.

2

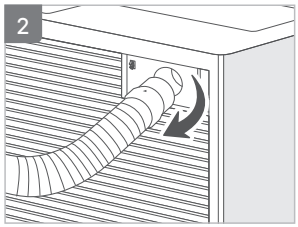

Insert in the direction of a lock shape on the Drying hose, and rotate in the lock direction to fix it.


3

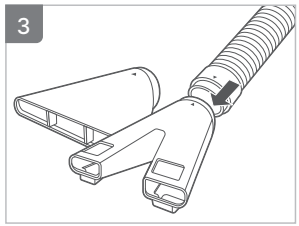

Connect the Shoe-drying kit or Wardrobe-drying kit to the Drying hose.

[Precautions]
When connecting or disconnecting the Shoe-drying kit or Wardrobe-drying kit, check if the triangular shapes face each other first.

4

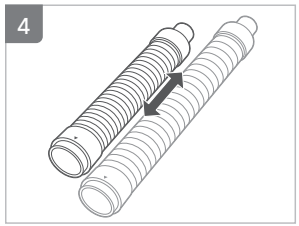

You may extend or shorten the Drying hose. Adjust to the direction where you want to dry and use it.

- In the Spot Dry mode, the louver is not closed completely. Do not forcibly close it.
- While performing Spot Dry, be careful not to block the outlet.
  If the outlet is blocked, it may cause the product internal temperature to rise, causing termination of the operation or malfunction.

2 How to operate

How to operate the Spot Dry mode

1

Button operation



Press the Power button to turn on the product.

2

Button operation



Press and hold the Mode button and the Timer button for more than 3 seconds simultaneously.

3



The display shows the "Spot" (Spot Dry) and continuous indicators.

How to stop Spot Dry

To stop Spot Dry, press and hold the Mode button and Timer button simultaneously, or switch the mode using the Mode button.


Button operation



- Do not move the dehumidifier or pull while holding the Drying hose.

1 How to clean


Cleaning the main body

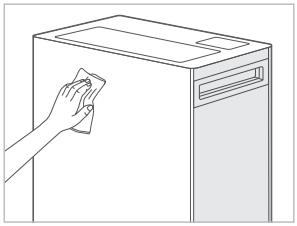

Recommended cleaning frequency: Every 2 - 4 weeks
Method: Wet a soft cloth in water added with neutral detergent, wipe with it, and then wipe with a dry cloth thoroughly.

- Make sure to disconnect the power plug.


Cleaning the air outlet

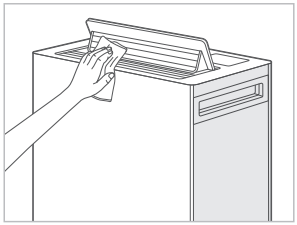

Recommended cleaning frequency: Clean at least twice a month
Method: Wipe the contaminated area with a dry cloth.

- In case of severe contamination, wet a soft cloth in water added with neutral detergent, wipe with it first.
- Be careful so that water or soapy water does not get inside the product.
- Make sure to disconnect the power plug.

Cleaning the rear cover

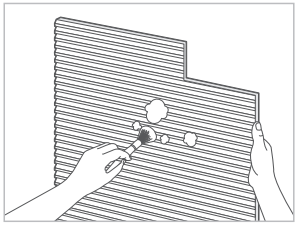

Recommended cleaning frequency: Clean at least twice a month
Method: Separate the rear cover from the product, and remove dusts on the surface using a dry cloth or brush. In case of severe contamination, use a slightly wet cloth to wipe it.


- Do not use an abrasive.

1 How to clean

Emptying the water tank

Clean the water tank once a week. (A cleaning cycle differs by use environment.)
In case of severe contamination, wet a soft cloth in water added with neutral detergent, wipe with it.


* Do not use bleach, thinner, benzene, detergent containing abrasives, chemicals, detergent containing hydrochloric acid and vegetable oil, or rough cloths to clean it.

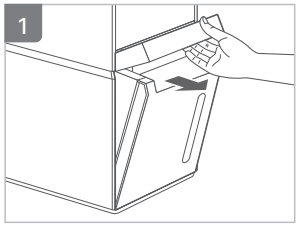

Pull the upper handle of the water tank to take it out.


[Precautions]
When moving, use the water tank handles.

Take out the water tank gradually. When excessively tilting or abruptly taking out the water tank while it is full, water may overflow.

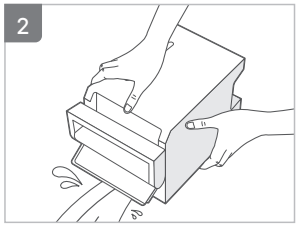

Open the water tank cover to discard the water inside the water tank.

[Precautions]
Clean the water tank once a week to prevent mold, germs, and bacteria.

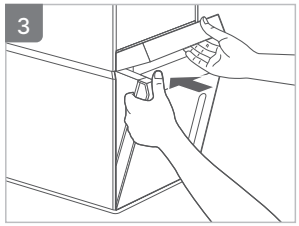

Push the water tank inward and fit it to the groove on the floor.


- After taking out the water tank, do not touch inside the product.
- Do not drink or reuse water inside the water tank.
- When you take out the water tank immediately after terminating product operation, residual water in the water tank may drop to the inside of the product.
  Use a dry cloth to wipe the dropped water.
- When mounting the water tank, be careful with hand pinching.

2 How to clean the filter

Pre-filter


Clean the pre-filter every 2~4 weeks. (A cleaning cycle differs by use environment.)
Failure to clean the filter regularly may result in reduced product performance.

1

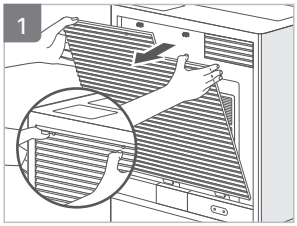


Disconnect the power plug and press the protruded part at the top of the filter cover to take it out forward.

2

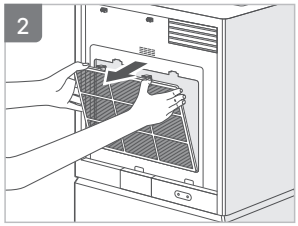

Hold the pre-filter handle and pull forward to take it out.

3

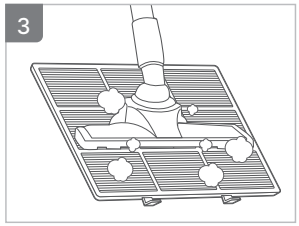


Depending on the degree of contamination, vacuum in all the dust using a vacuum cleaner or remove it with water.

[How to clean with water]

Clean it under running water or put in the water (approx. 30 °C) where neutral detergent is dissolved for cleaning.

4

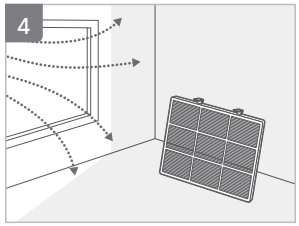


When cleaning with water, dry completely in a shadow with proper ventilation.

[Precautions]


When drying near direct sunlight or dryer, heater, or heat-emitting device, the pre-filter is deformed and cannot demonstrate product performance.

5

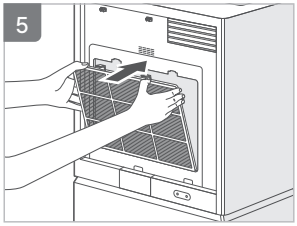

Assemble the pre-filter.

6

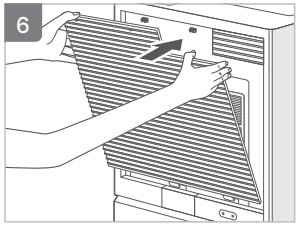

Mount the filter cover in the original location.

- If the filter cover is not mounted properly, product performance may be degraded.

1 Troubleshooting

The dehumidifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons and not because of a product malfunction.
In such a case, problems can be easily solved without help from the Coway Service Center by checking the following.
If you cannot solve the problem after checking the items below, please call the Coway Service Center.

Symptom	Check	Measures to take
It does not operate at all.	Is the power plug connected?	Make sure to connect the power plug to a 220V - 240V ~ , 50 / 60 Hz outlet.
	Is the Full indicator turned on?	Empty the water tank.
	Is it still turned on even after emptying the water tank?	Reassemble the water tank to the original location of the product. If it still displays full water, check if the air bladder is in the original position.
The dehumidifier operates but dehumidification does not work.	Is the Defrost indicator turned on?	Ice was formed in the heat exchanger, so melting ice is in progress. Since this is not an abnormal symptom, it will re-operate after ice is melted.
There are large vibration and loud noise.	Are you using it on a sloped place?	Please use it on a flat floor.
There is a sound.	Is there a sound of water flowing during operation or after being stopped?	This is a sound of internal liquid (refrigerant) flowing through the pipe and is not a malfunction.
	Is there a “phew” sound during operation?	This is a sound of a part stretched according to a temperature change and is not a malfunction.
Air speed became drastically low.	Haven’t the filter cleaning and replacement periods passed?	Check the filter cleaning and replacement cycles and clean or replace the filter.

The dehumidifier may operate abnormally because the user is unfamiliar with the product or due to some other reasons and not because of a product malfunction.
In such a case, problems can be easily solved without help from the Coway Service Center by checking the following.
If you cannot solve the problem after checking the items below, please call the Coway Service Center.

Symptom	Check	Measures to take
The amount of dehumidification is small.	Is water full in the water tank?	If water is full in the water tank, empty it.
	Isn't there dust on the filter and blocking the hole?	Clean the air intake part at the front and pre-filter.
	Is the indoor temperature 18 °C or lower?	Dehumidification performance of a dehumidifier may vary depending on a surrounding temperature, and if the surrounding temperature is 18 °C or lower, its efficiency may decrease.
	In the seasons like spring, autumn, and winter when both temperature and humidity are lower than in summer, the amount of dehumidification is reduced.	
There is odor from the outlet.	When used for the first time, this product may produce odor unique to dehumidification parts. This odor naturally disappears a few hours after operating the product.	
	Haven't the filter cleaning and replacement periods passed?	Check the filter cleaning and replacement cycles and clean or replace the filter.
There is hot wind from the outlet.	This is normal operation of the dehumidifier, so use it without concern.	
When other functional defects occur	After checking the phenomenon of an issue, disconnect the power plug and apply for service.	

▶ Filter replacement / Service inquiry: 1421

2 Specification

Product Name	Dehumidifier
Model Name	AD-2325C
Rated Voltage	220 V - 240 V~, 50 / 60 Hz
Phase	Single phase
Power Consumption	350 W
Refrigerant/Weight	R-134a / 235 g
Safety Device	Current fuse (250 V / T10 A, T3.15 A), Water tank detection circuit
Dehumidification	23 L / Day
Tank Capacity	6.1 L (4.8 L in full water)
Installation Location	For indoors
Dimensions	370 mm (W) X 215 mm (D) X 675 mm (H)
Product Weight	17.8 kg

- The product design and specification can be changed without prior notice to improve the product quality and to facilitate the application of laws.

3 Warranty

- Please refer to your Sales Order Form for our basic policy for the product warranty. For more detailed terms of the product warranty, please visit our website. Please note that the terms of our product warranty are subject to change from time to time in compliance with the relevant Thailand laws and regulations.
- https://www.coway.co.th/th/terms-of-conditions

THAILAND
Add : Coway (Thailand) Co., Ltd. 1818 Rasa Two Building, 14th Floor, Phetchaburi Road, Makkasan Subdistrict, Ratchathewi District, Bangkok 10400 Service Center : 1421

4 Memo

4 Memo

001

coway

www.coway.co.th